


LOST WORLD

F0586

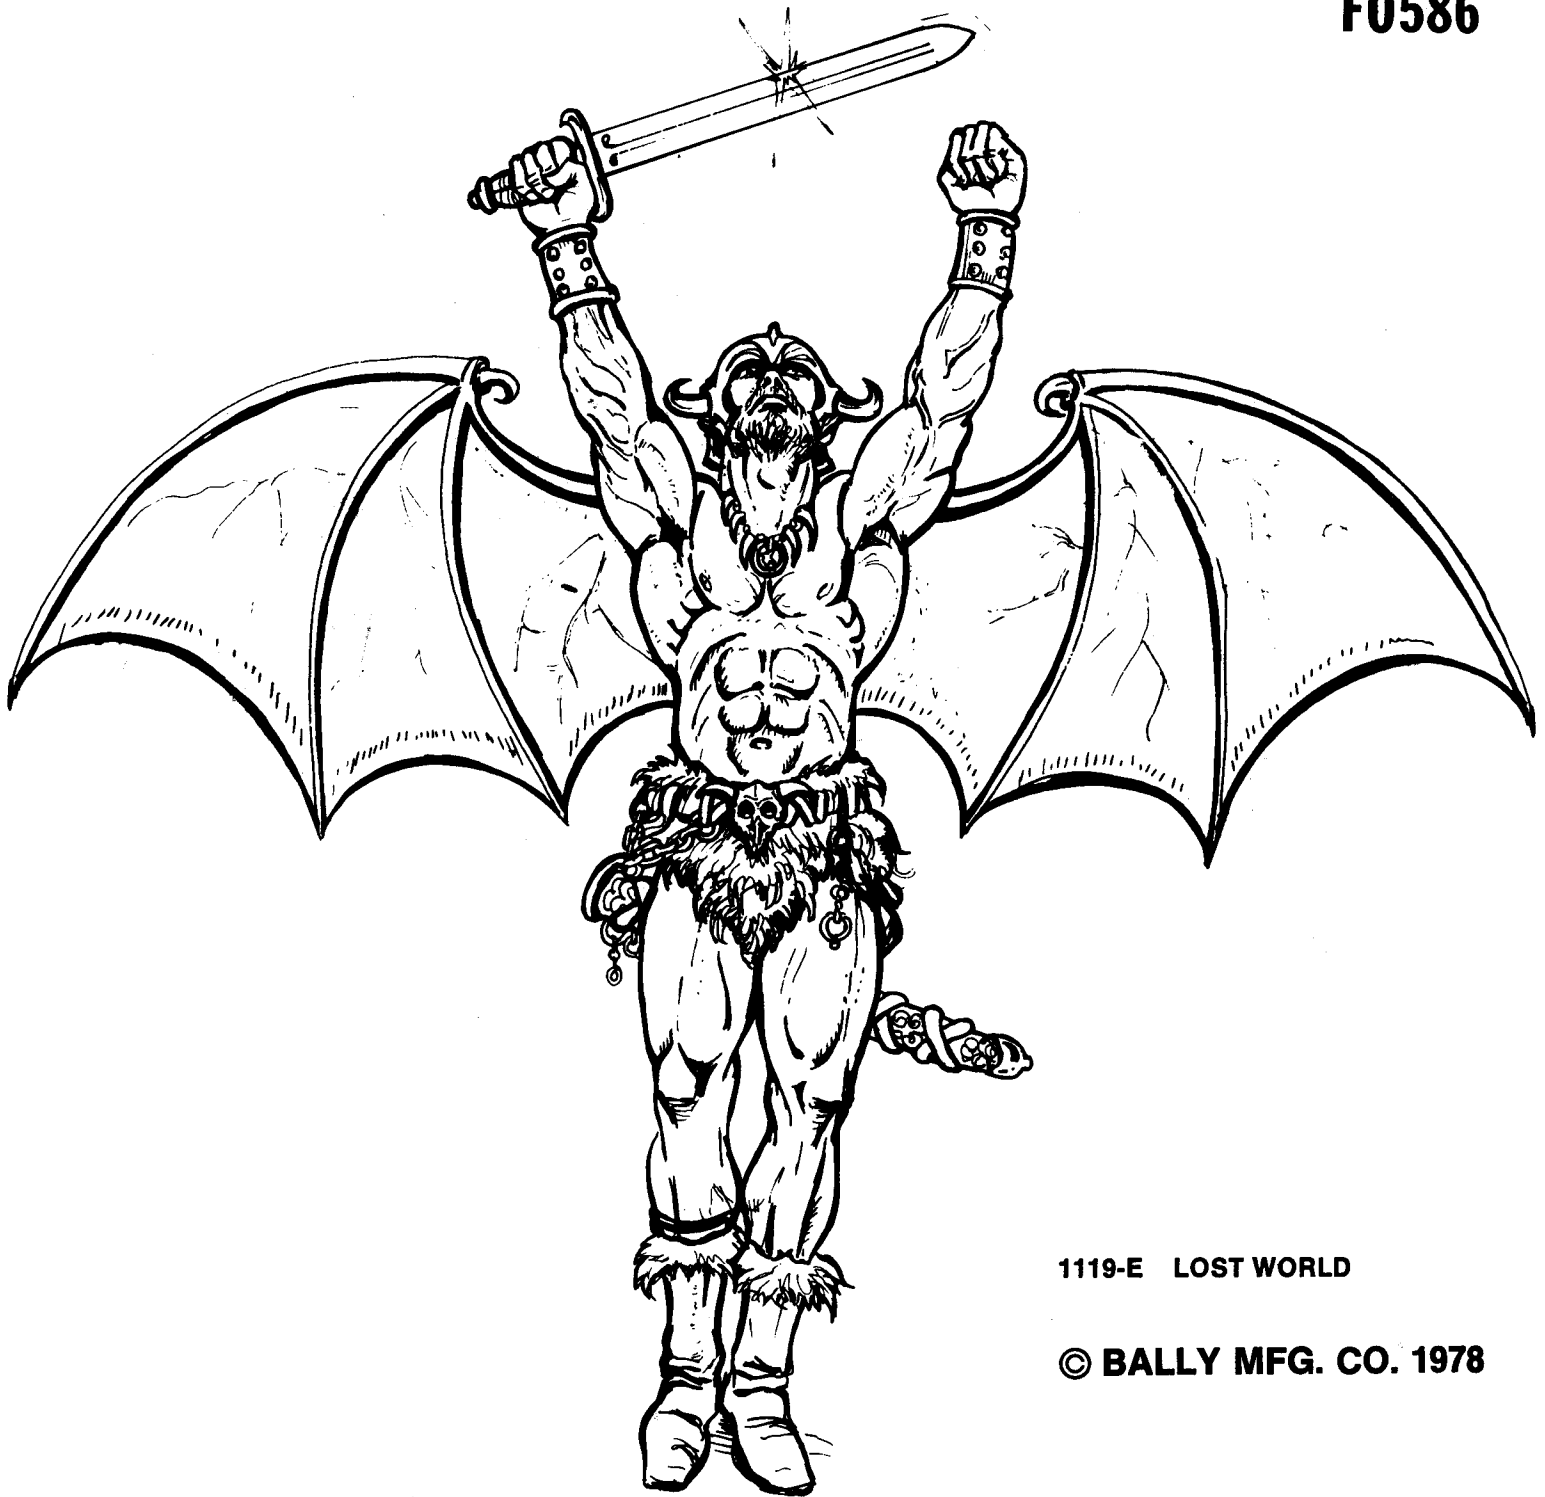

1119-E LOST WORLD

© BALLY MFG. CO. 1978

Bally

MANUFACTURING CORPORATION

2640 Belmont Avenue • Chicago, Illinois, 60618, U.S.A.


TELEPHONE (312) 267-6060/TELEX NO. 253076/CABLE ADDRESS: Balfan

Installation and General Game Operation Instructions

INDEX

	PAGE
I. INSTALLATION	1
II. GENERAL GAME OPERATION	2
III. BOOKKEEPING FUNCTIONS	3
IV. FEATURE OPERATION AND SCORING	4
V. GAME ADJUSTMENTS	5
A. PLAYFIELD ADJUSTMENTS	5
B. BACKBOX ADJUSTMENTS	5
CREDITS/COIN	5
MAXIMUM CREDITS	6
BALLS/GAME	6
MATCH FEATURE OPTION	6
CREDIT DISPLAY	6
HIGH SCORE FEATURE OPTION	6
HIGH GAME TO DATE	6
GAME FEATURE OPTIONS	7
SOUND OPTION	7
C. FRONT DOOR GAME ADJUSTMENTS	
HIGH SCORE FEATURE	8
HIGH GAME TO DATE FEATURE	8
VI. RECOMMENDED SCORE CARDS	11
VII. RECOMMENDED SETTINGS	12
VIII. ROUTINE MAINTENANCE ON LOCATION	13
IX. TROUBLE SHOOTING ON LOCATION	13
X. SERVICE/PARTS	19
XI. PARTS LIST	20-30

BLOCK DIAGRAM—ELECTRONIC PINBALL GAME

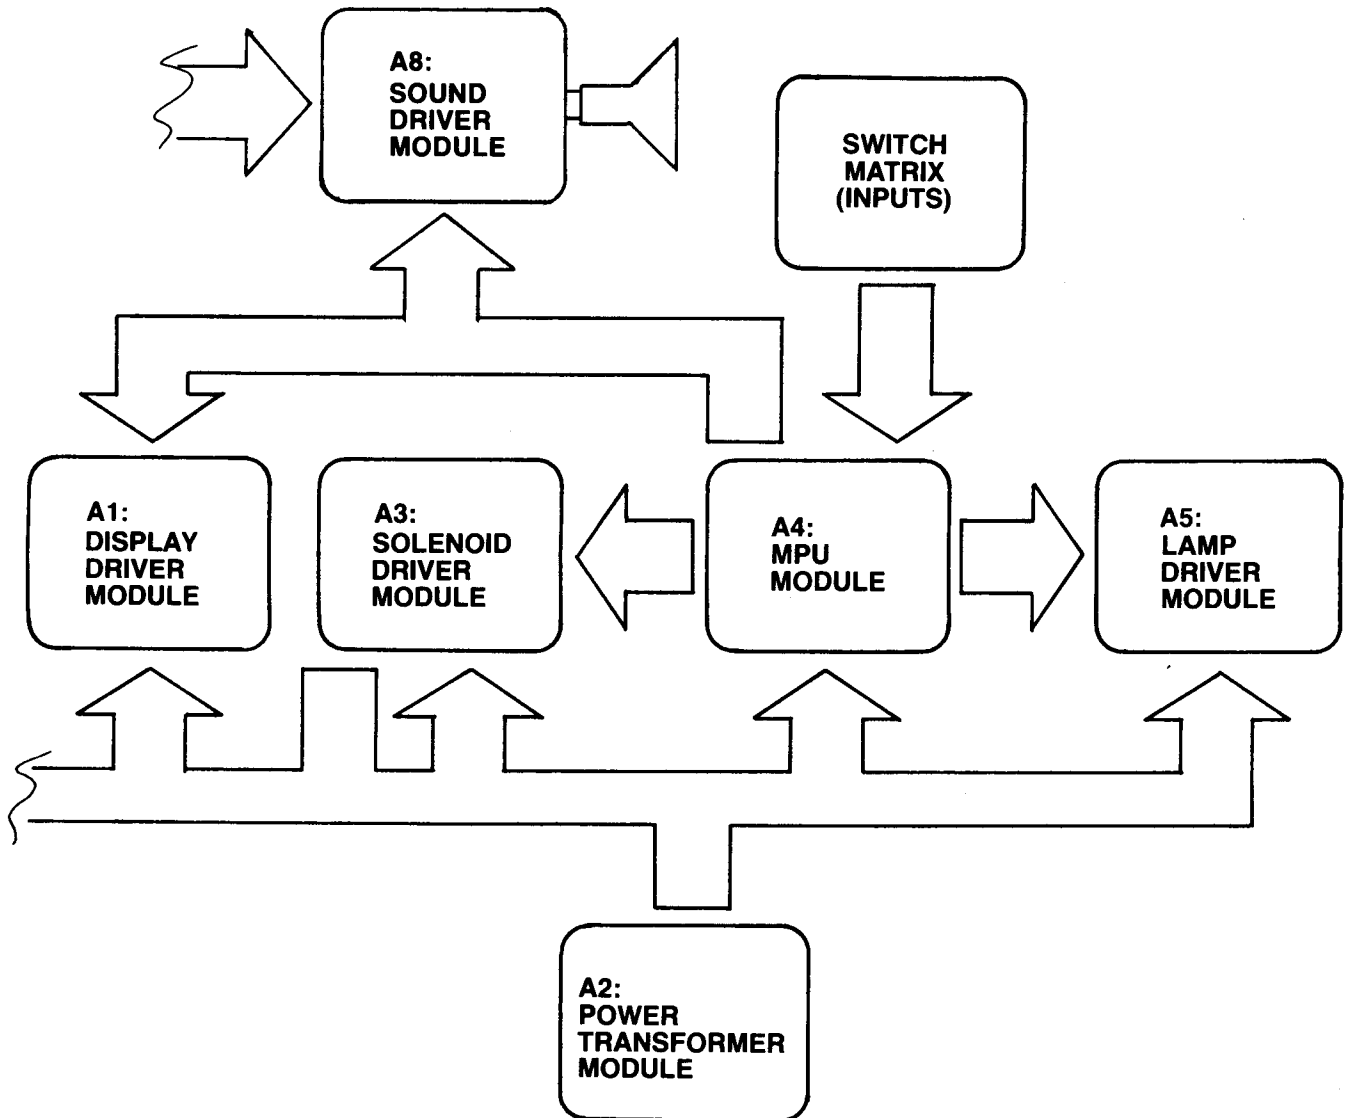

I. INSTALLATION

Assemble the game as follows:

Bolt legs to cabinet. Bolt back box to cabinet. Use flat washers under bolt heads. Gently feed cable connectors and ground braid through cable port in back box. Screw ground braid to braid in back box. Carefully and fully insert connectors on printed circuit assemblies.

On all games there are certain items that should be checked after shipment. These are visual inspections which may avoid time consuming service work later. Minor troubles caused by abusive handling in shipment are unavoidable. Cable connectors may be loosened, switches (especially tilt switches) may go out of adjustment. Plumb bob tilt switch should always be adjusted after game is set on location and leg levelers are adjusted.

Visual inspections before plugging in line cord:


1. Check that all cable connectors are completely seated on printed circuit assemblies.
2. Check that cables are clear of all moving parts.
3. Check for any wires that may have become disconnected.
4. Check switches for loose solder or other foreign material that may have come loose in shipment and could cause shorting of contacts.
5. Check wires on coils for proper soldering. Cold solder connections may not show up in factory inspection, but vibration in shipment may break contact.
6. Check that fuses are firmly seated and making good contact.
7. Check the transformer for any foreign material shorting across wiring lugs.
8. Check wiring of transformer to correspond to location voltage. See figure 1.

Check adjustment of the three (normally open) tilt switches:

1. Panel tilt on bottom of playfield panel.
2. Plumb bob tilt on left side of cabinet near front door.
3. Ball tilt above plumb bob tilt. Insert the smaller ball (15/16" dia.) into the ball tilt assembly, and adjust the bracket so the ball will roll free to contact the switch blade, if front of cabinet is raised.


TRANSFORMER CONNECTION INSTRUCTIONS

E-122-125 TRANSFORMER WIRING FOR 220/240 V.,
50/60 CYCLE INPUT.

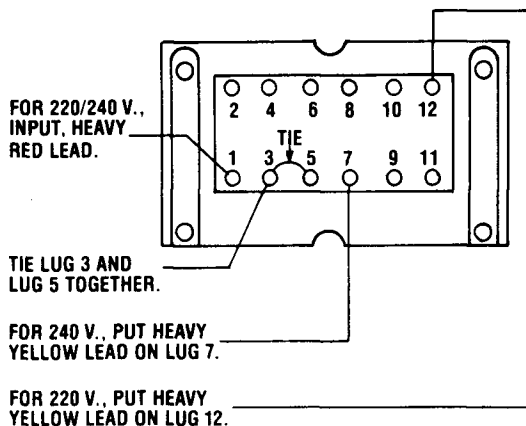

VARISTOR, BALLY PART NO. E-713-1,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 220 V. OR 240 V. A.C.

E-122-125 TRANSFORMER WIRING FOR 115/120 V.,
50/60 CYCLE INPUT.

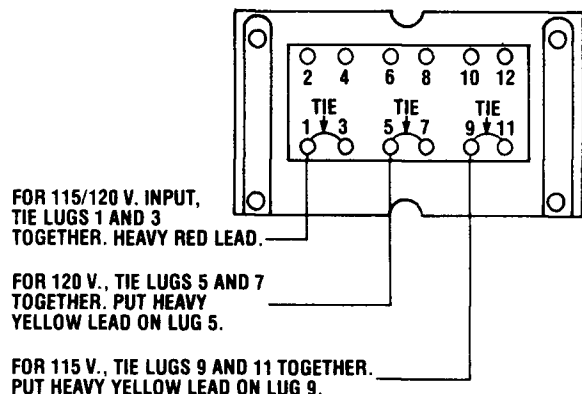

VARISTOR, BALLY PART NO. E-713,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 115 OR 120 V. A.C.

FIGURE I. TRANSFORMER
(PART OF POWER—TRANSFORMER MODULE A2, LOCATED IN BACK BOX).

II. GENERAL GAME OPERATION

Place ball into playfield by outhole.

Coin game. Coin should be rejected. Plug in line cord. Move power ON-OFF master switch at bottom right front corner of cabinet to 'ON' position. The game will play a power-up tune to announce game-readiness. Drop targets are reset, scores are set to zero, alternating with the 'High Game to Date,' and the game is ready for play. Coin game. The game should accept the coin and post credits* for coins accepted (adjustable). Pressing the credit button on the door will cause the outhole kicker to serve the ball to the shooter alley. The 1st player-up lite is lit. A game-up tune* is played to announce play-readiness. The bonus score is advanced to 1000 points.

One player is posted each additional time the credit button is pressed (one to four can play). The credits are reduced by one each time the credit button is pressed until the credits are reduced to zero.

Shooting the ball initiates play. Rebound switches score 10 points. Thumper-bumpers, when not lit, score 10 points.

The game awards all points earned by the player. If spinner is turning and scoring when the ball hits a target, the spinner and the target scores are awarded.

When the ball enters the outhole, the bonus score is added to the total score. The player-up and/or ball in play on the back box is advanced one position. The bonus score is advanced to 1000 points. The outhole kicker serves the ball to the shooter alley and play is resumed. This continues until each player has played the allowable number of balls per game (adjustable). At this time the 'Game Over' light is lit. A random Match* number appears and the 'Match' light is lit. If the number is the same as the last two digits in a player's score, a free game is awarded.

Extra balls won during the course of the game are played immediately after the player's regular ball enters the outhole. The player-up and/or ball in play on the back box are not advanced for extra ball play. Bonus score is added to the player's score and the bonus is set to 1000 points before the game serves the extra ball for play.

At the end of the game, a 'High Game to Date' is alternately flashed with all 4 player scores. If the 'High Game to Date' is beat, this feature* awards free games.

Tilting the game results in loss of a ball. The flippers, thumper-bumpers, etc., go 'dead.' Bonus points are not scored. The purpose of the tilt penalty is to discourage the player from jostling the machine in an attempt to prolong play. Game action becomes normal after the ball kicker assembly serves the ball to the shooter alley.

Slamming the machine results in loss of the game. All feature lights go out, the game goes 'dead,' and a time delay occurs. The purpose of the time delay is to discourage unnecessary abuse of the machine. After the delay, the 'Game Over' light lites and the power-up tune is played. The time delay occurs anytime one of the slam switches is made to contact. There is one factory installed slam switch on the front door. (Any number of slam switches could be installed by the operator, to meet his individual requirement.) The switch should be adjusted to have approximately 1/16" gap between the contacts. The weighted blade should be adjusted to attain the desired sensitivity. Decreasing the gap between contacts will make the switch more sensitive. Opening the gap will reduce sensitivity.

*Some tunes and features can be disabled by operator if so desired. See Back Box Adjustments.

III. BOOKKEEPING FUNCTIONS

The game is designed to help the operator perform certain accounting functions. The game can display the number of total plays and replays (free games). It can display the number of coins dropped down each coin chute. The bookkeeping functions are displayed on all player score displays simultaneously. An identification number, 05 to 11 appears on the Match/Ball in Play window as follows:

- 05— 00 to— 40 = Current Credits
- *06—10000 to—999999 = Total Plays (Payed & Free Games)
- *07—10000 to—999999 = Total Replays (Free Games)
- 08— 00 to—999999 = Total times 'High Score to Date' is beat
- *09—10000 to—999999 = Coins Dropped thru Coin Chute #1
- *10—10000 to—999999 = Coins Dropped thru Coin Chute #2**
- *11—10000 to—999999 = Coins Dropped thru Coin Chute #3**

The game displays the first bookkeeping entry if the Self-Test button (See Fig. III) on the inside of the front door is pressed nine times. Alternately push and release the Self-Test button at one second intervals. The number 05 appears in the 'Match/Ball in Play' window. Current credits appear on the player score displays. Each additional press of the button causes the next entry to be displayed.

After the data in each bookkeeping register is recorded, it can be set to zero simply by pressing switch button S33, located on A4, the MPU module in the back box. (See Fig. III). Any or all registers can be cleared by alternating between the Self-Test button and the switch button on the MPU module. The operator is given this option as a possible convenience and can elect to use or not use it as his needs direct.

Pressing the button once more with the eleventh entry displayed causes the game to play the power-up tune and light the Game-Over light.

*The 10,000 level is pre-set at the factory; can be set to zero, initially, if desired.

**If Coin Chute is not used in game, number displayed (if other than 00) on Player Score displays has no significance.

#1119-E LOST WORLD

IV. FEATURE OPERATION & SCORING

A. BONUS FEATURE:

A bonus score of 29,000 maximum points may be scored. The game starts with a bonus score of 1000. The bonus score advances one step at a time each time the ball goes through the top two rollovers (A&B), strikes the four bottom targets (C,D,E,&F), or through the spinner on its 5th position, plus upper target and rollover button.

B. BONUS COLLECT AND BONUS MULTIPLIER:

When the ball goes into the outhole, the lit bonus score is added to the player's total score; If the 2X, 3X or 5X lite is lit, the bonus multiplier will score accordingly and will be added to the player's total score.

C. SAUCER FEATURE:

The two saucers on the side of the playfield and the lit bottom return lanes advance the saucer value. The score will advance as the following:

1000; 2000; 4000; 6000; 8000; 10,000 & Special

SAUCER 1000 LITE ADJUSTMENT		SAUCER SPECIAL ADJUSTMENT	
Liberal	Sw. 23 ON	Liberal	Sw. 22 ON
Conservative	Sw. 23 OFF	Conservative	Sw. 22 OFF

D. A, B, C, D, E, AND F FEATURE:

This includes the top two rollovers (A & B) and the bottom four targets (C, D, E, & F).

Making A & B lites the 5000 lite at the Dragon's Den.

Making A, B, C, & D lites the Extra Ball lite at the Dragon's Den.

Making C & D lites the 2X bonus.

Making C, D, E, & F lites the 3X bonus.

Making A, B, C, D, E, & F lites the 5X bonus and outlanes for Specials*.

Only one extra ball is awarded at any one time. The extra ball earned must be played off before another extra ball can be scored.

E. SPECIAL: REPLAY/X-BALL/NOVELTY MODES:

Switches #14 and #15 give the operator the flexibility to award a replay, extra ball or score (Novelty) when a special is scored. The following chart explains the settings.

	REPLAY	X-BALL	NOVELTY
Switch	14 ON	14 OFF	14 OFF
	15 ON	15 ON	15 OFF
X-Ball	X-Ball	X-Ball (See Note 1)	15,000
Special	Replay	10,000	50,000
Scoring			
Thresholds	Replay	X-Ball	No Award

Note 1: X-Ball = 10,000 if Same Player Shoot Again is lit.

*Outlane Special Adjustment: Liberal, Sw. 24 ON, Conservative, Sw. 24 OFF.

V. GAME ADJUSTMENTS

A. Playfield Panel Post Adjustments:

Posts that control left and right outlane opening on panel can be moved to make access to outlanes easier or harder for ball to enter. See Figure II.

Easier entry will decrease playing time and scoring (conservative).

Harder entry will increase playing time and scoring (liberal).

B. Back Box Game Adjustments:

Each game has thirty-two switches located on A4, the MPU module, located in the back box, that allow play to be customized to the location. See Figure III. Credits per coin, maximum credits, credit display, balls per game, match feature, high game feature, special award and melody are selectable by means of the switches. The switches are contained in four sixteen lead packages numbered S1-8, S9-16, S17-24 and S25-32 for easy identification. The "ON" toggle position is marked on the assembly. **Turn off power before making adjustments.**

Credits/Coin Adjustments:

The credits per coin are selectable by means of S25-S28 for coin chute #2. The switch settings and resultant credits/coin are as follows:

S28	S27	S26	S25	Credits/Coin
OFF	OFF	OFF	OFF	Same as Coin Chute #1 Settings
OFF	OFF	OFF	ON	1/1 Coin
OFF	OFF	ON	OFF	2/1 Coin
OFF	OFF	ON	ON	3/1 Coin
OFF	ON	OFF	OFF	4/1 Coin
OFF	ON	OFF	ON	5/1 Coin
OFF	ON	ON	OFF	6/1 Coin
OFF	ON	ON	ON	7/1 Coin
ON	OFF	OFF	OFF	8/1 Coin
ON	OFF	OFF	ON	9/1 Coin
ON	OFF	ON	OFF	10/1 Coin
ON	OFF	ON	ON	11/1 Coin
ON	ON	OFF	OFF	12/1 Coin
ON	ON	OFF	ON	13/1 Coin
ON	ON	ON	OFF	14/1 Coin
ON	ON	ON	ON	15/1 Coin

The credits given per coin are selectable by means of switches 1-5 incl., for coin chute #1 and switches 9-13 incl., for coin chute #3. Thirty-one different credit ratios are available for each coin chute. The switch settings and resultant credits/coin are listed below.

CREDITS/COIN ADJUSTMENTS

COIN CHUTE	SWITCHES					CREDITS/COIN
#1 (HINGE SIDE) OR #3	5 13	4 12	3 11	2 10	1 9	
	OFF	OFF	OFF	OFF	OFF	3/2 COINS**
	OFF	OFF	OFF	OFF	ON	3/2 COINS**
	OFF	OFF	OFF	ON	OFF	1/COIN
	OFF	OFF	OFF	ON	ON	1/2 COINS*
	OFF	OFF	ON	OFF	OFF	2/COIN
	OFF	OFF	ON	OFF	ON	2/2 COINS*
	OFF	OFF	ON	ON	OFF	3/COIN
	OFF	OFF	ON	ON	ON	3/2 COINS*
	OFF	ON	OFF	OFF	OFF	4/COIN
	OFF	ON	OFF	OFF	ON	4/2 COINS*
	OFF	ON	OFF	ON	OFF	5/COIN
	OFF	ON	OFF	ON	ON	5/2 COINS*
	OFF	ON	ON	OFF	OFF	6/COIN
	OFF	ON	ON	OFF	ON	6/2 COINS*
	OFF	ON	ON	ON	OFF	7/COIN
	OFF	ON	ON	ON	ON	7/2 COINS*
	ON	OFF	OFF	OFF	OFF	8/COIN
	ON	OFF	OFF	OFF	ON	8/2 COINS*
	ON	OFF	OFF	ON	OFF	9/COIN
	ON	OFF	OFF	ON	ON	9/2 COINS*
	ON	OFF	ON	OFF	OFF	10/COIN
	ON	OFF	ON	OFF	ON	10/2 COINS*
	ON	OFF	ON	ON	OFF	11/COIN
	ON	OFF	ON	ON	ON	11/2 COINS*
	ON	ON	OFF	OFF	OFF	12/COIN
	ON	ON	OFF	OFF	ON	12/2 COINS*
	ON	ON	OFF	ON	OFF	13/COIN
	ON	ON	OFF	ON	ON	13/2 COINS*
	ON	ON	ON	OFF	OFF	14/COIN
	ON	ON	ON	OFF	ON	14/2 COINS*
	ON	ON	ON	ON	OFF	15/COIN
	ON	ON	ON	ON	ON	15/2 COINS*

*No Credits until second coin is dropped.

**One Credit for first coin. Two Credits for second coin provided that no scoring occurred between 1st and 2nd coin drops. If scoring occurred, second coin gives one credit.

MAXIMUM CREDITS:

The maximum credits accepted by the machine limits the number of games that can be accumulated by coining, by winning replays or both. The maximum number of credits is selectable by means of switches 17, 18 and 19. Eight credits limits are available. Switch settings are listed below.

MAXIMUM CREDITS	SWITCHES		
	19	18	17
5	OFF	OFF	OFF
10	OFF	OFF	ON
15	OFF	ON	OFF
20	OFF	ON	ON
25	ON	OFF	OFF
30	ON	OFF	ON
35	ON	ON	OFF
40	ON	ON	ON

BALLS PER GAME:

# BALLS/GAME	SWITCH 16
5	ON
3	OFF

MATCH FEATURE:

When the Match Feature is ON, a random number appears in the 'Match/Ball in Play' window and the word MATCH is illuminated. If the number matches the tens digit in a player's score, a free game is awarded. The Match feature creates an incentive to play.

MATCH	SWITCH 21
ON	ON
OFF	OFF

CREDIT DISPLAY:

CREDITS DISPLAYED	SWITCH 20
YES	ON
NO	OFF

HIGH SCORE FEATURE:

The game is designed to award an Extra Ball or Free Game at each of the three score levels. See Front Door Game Adjustments.

AWARD	SWITCH 15	SWITCH 14
REPLAY	ON	ON
EXTRA BALL	ON	OFF
NO AWARD	OFF	OFF

HIGH SCORE TO DATE FEATURE:

The game is designed to award free games as an option if high game to date is beat. Each time this happens, the winning score becomes the new high game score to beat. This score is displayed on all 4 player score displays at the end of each game as an incentive to play. Recommended setting is underlined.

HIGH SCORE TO DATE FEATURE	SWITCH 7	SWITCH 6
No Award	OFF	OFF
One Credit	OFF	ON
Two Credits	ON	OFF
<u>Three Credits</u>	<u>ON</u>	<u>ON</u>

SOUND OPTION:

The game is designed to play several melodies to announce power-up, game-up, etc. The tunes are intended to attract attention to the game and increase game usage. The tunes are controlled by switch settings as shown.

S8 S32	OFF OFF	OFF ON	ON OFF	ON ON
SCORE (10, 100, 1K, 10K)	CHIME	NOISE	CHIME	NOISE
COIN (NO CREDIT)	NOISE	NOISE	CHIME	CHIME
COIN (WITH CREDIT)	NOISE	NOISE	TUNE	TUNE
LEFT & RIGHT SAUCER	NOISE	NOISE	TUNE	TUNE
PLAYER-UP	NOISE	NOISE	TUNE	TUNE
REPLAY CREDITS	KNOCKER	KNOCKER	KNOCKER	KNOCKER
TILT	NOISE	NOISE	NOISE	NOISE
POWER-UP	TUNE	TUNE	TUNE	TUNE
GAME OVER	TUNE	TUNE	TUNE	TUNE

Recommended 3-Ball switch settings for the following are underlined:

Flipper Feeder Lane Adjustment:

<u>Liberal</u>	SW. 29 ON	Both Advance saucer Value
Conservative	SW. 29 OFF	Alternates from side to side

Outlane Special Adjustment:

<u>Liberal</u>	SW. 24 ON	Both Lanes lite for Special
Conservative	SW. 24 OFF	Alternates Special from Side to Side

Saucer 1000 Lite:

<u>Liberal</u>	SW. 23 ON	Starts with 1000 at saucer
Conservative	SW. 23 OFF	Starts with nothing lit

Saucer Special:

<u>Liberal</u>	SW. 22 ON	Special lite stays on
Conservative	SW. 22 OFF	One Special only

C. Front Door Game Adjustments:

High Score Feature Adjustments:

The game is designed to award an extra ball (option) or a free game at each of three score levels. The recommended levels are on the score card in the game.

Any level from 10,000 to 990,000 can be set, as desired. It is also possible to reset or turn off (00) any or all of the levels, if desired.

1. Push and release Self-Test button (see Figure III) at one second intervals approximately five times or until number 01 appears on the Match/Ball in Play display.
2. The number on the Player Score Displays is the score level*. It can be increased, if desired, by holding the credit button in. To decrease the score level, reset to '00' and then hold the credit button in. Release the credit button when the desired number appears. Note that the level changes 10,000 points at a time. If the number '00' is left on the displays, the high score feature is eliminated for that level.
3. Repeat steps 1 and 2 for the second and third score levels. The number '02' and '03' on the Match/Ball in Play display are for the second and third levels, respectively.

High Game to Date Feature:

The game is designed to award free games when 'High Game to Date' is beat.

It is recommended that the level, which will build with game play, be periodically reset to the factory recommended level to encourage game play. The adjustment procedure is the same as for the High Score Feature Adjustment, Steps 1 and 2. Continue pushing the Self-Test button until the number '04' appears on the Match/Ball in Play display and then do Step 2.

Any level from '00' to 990,000 can be set as described. It is to be noted that '00' does **not** turn off the feature, as it does on High Score feature. The feature is turned off by positioning switches S6 and S7 to the 'OFF' position, and 'ON' by positioning switches as discussed under "Back Box Game Adjustments.

*Can be quickly set to '00' by pressing S33 on the MPU assembly in the back box. See Figure III.

#1119-E LOST WORLD

RUBBER PARTS

A.	R-521-1	1" DIA.	(4)
B.	R-521	3/4" DIA.	(2)
C.	R-521-6	3 1/2" DIA.	(1)
D.	R-521-5	3" DIA.	(1)
E.	R-521-4	2 1/2" DIA.	(2)
F.	R-406-3	FLIPPER	(2)
G.	R-243	5/16" DIA.	(14)

PANEL TOP PARTS

1.	ARCH RAIL	M-1774
2.	RAIL POST (2)	C-907
3.	RAIL POST CAP (2)	C-908
4.	BOTTOM ARCH	P-5871-59
5.	SHOOTER GAUGE	P-6359-25
6.	BALL GATE (L)	A-1475-10
7.	BALL GATE (R)	A-1475-9
8.	SCREENED PLASTICS	A-2890-130
9.	THUMPER CAP (2)	A-3713-38
10.	THUMPER CAP	A-3713-39
11.	PLASTIC GUIDE (2)	C-935-1
12.	PLASTIC GUIDE	C-936-1
13.	TARGET ASSY. (RED) (6)	ASE-2911-3
14.	MINIPOST & RUBBER	ASE-2836-1
15.	SPINNER GATE ASSY.	ASE-2250-50
16.	R.O. WIRE & BRACKET	ASE-2806 (6)
17.	BALL GUIDE	M-121-69
18.	BALL GUIDE	M-121-70
19.	BALL GUIDE (2)	M-121-30
20.	BALL GUIDE	M-121-71
21.	BALL GUIDE	M-121-72
22.	BALL GUIDE (2)	M-121-18
23.	BALL GUIDE	M-121-43
24.	BALL GUIDE	M-121-44
25.	BUFFER WIRE (2)	M-121-53
26.	OUTHOLE WIRE ASSY.	ASE-2806-21
27.	FLIP. & SHAFT ASSY.	ASE-2214-24 (2)
28.	ROLLOVER BUTTON	C-900

CONS.—CONSERVATIVE
MED. —MEDIUM
LIB. —LIBERAL

INDICATES MOVEABLE POSTS
FOR SCORING ADJUSTMENTS

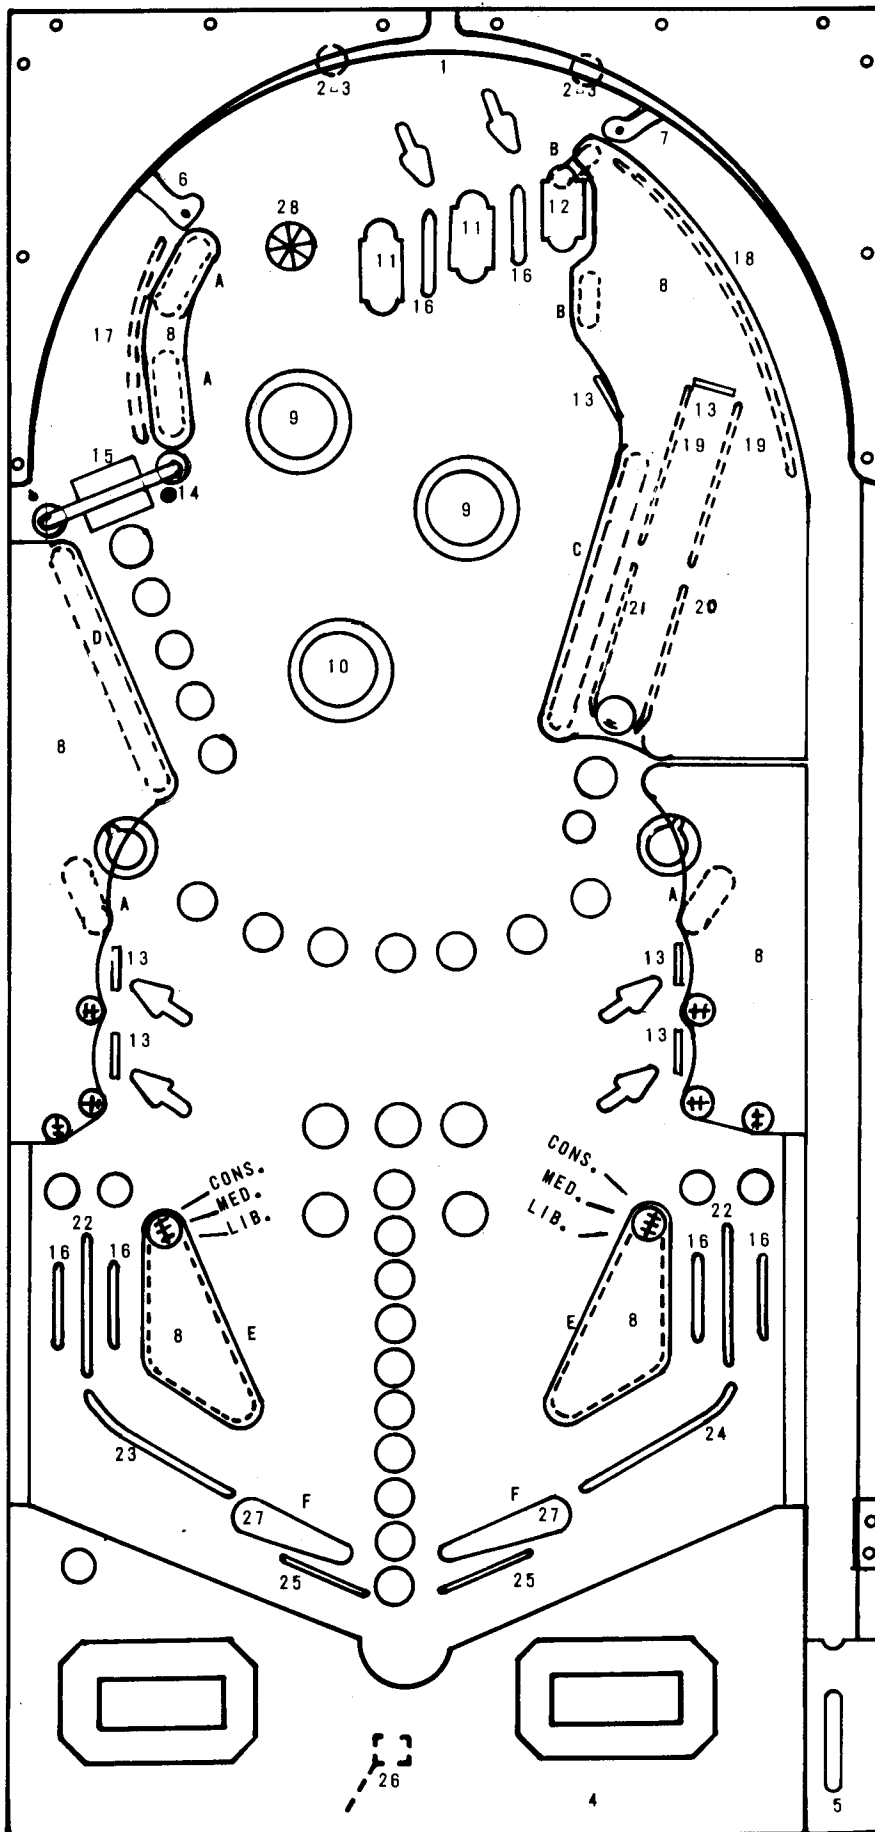


FIGURE II

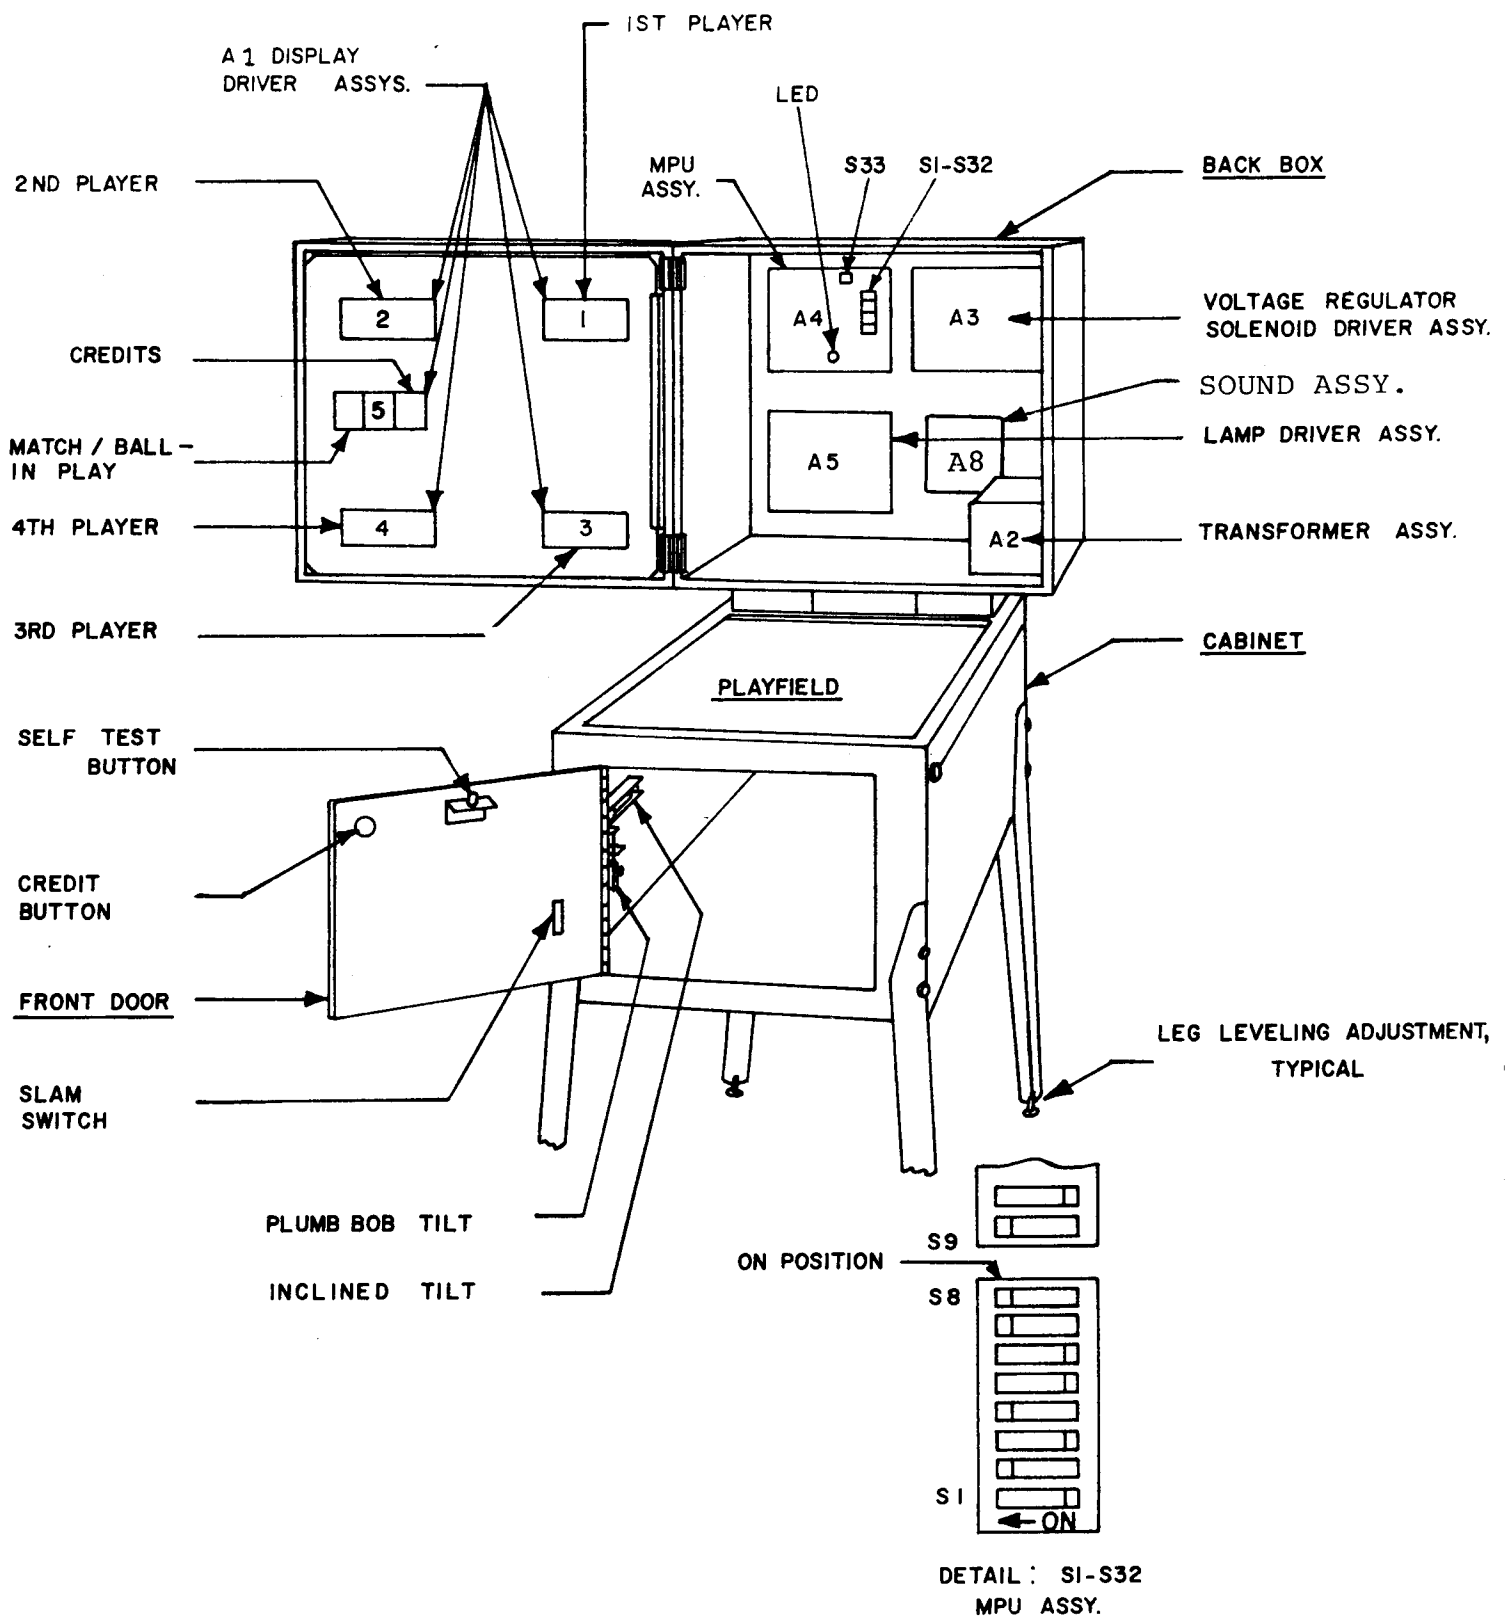


FIGURE III. ELECTRONIC PIN BALL MACHINE

RECOMMENDED:

Instruction, Score Cards and High Score feature settings to be used on Lost World Electronic, #1119-E.

3-BALL		5-BALL	
REPLAYS		REPLAYS	
Instruction Card	M-1508-71-E	Instruction Card	M-1508-71-E
Score Card	M-1508-71-D	Score Card	M-1508-71-C w/N
*Score Card	M-1508-71-B	*Score Card	M-1508-71-A w/N
1 Replay at 210,000		1 Replay at 330,000	
1 Replay at 430,000		1 Replay at 540,000	
EXTRA BALL		EXTRA BALL	
Instruction Card	M-1508-71-F	Instruction Card	M-1508-71-F
Score Card	M-1508-71-KK	Score Card	M-1508-71-QQ
1 Extra Ball at 210,000		1 Extra Ball at 330,000	
1 Extra Ball at 480,000		1 Extra Ball at 600,000	

*USE FOR END OF GAME REPLAY AWARD. USE WITH INSERT CARDS (7), M-1508-68B

(ALL PLAYFIELD POSTS IN MEDIUM POSITION)

ADDITIONAL CARDS

REPLAYS				EXTRA BALL		
M-1508-71-TT	130,000	350,000		M-1508-71-HH	160,000	430,000
M-1508-71-J	150,000	370,000		M-1508-71-II	170,000	440,000
M-1508-71-K	170,000	390,000		M-1508-71-JJ	190,000	460,000
M-1508-71-L	190,000	410,000		M-1508-71-KK	210,000	480,000
M-1508-71-M	230,000	460,000		M-1508-71-LL	230,000	500,000
M-1508-71-N	250,000	480,000		M-1508-71-MM	250,000	520,000
M-1508-71-O	270,000	480,000		M-1508-71-NN	270,000	540,000
M-1508-71-P	290,000	500,000		M-1508-71-OO	290,000	560,000
M-1508-71-Q	310,000	520,000		M-1508-71-PP	310,000	580,000
M-1508-71-R	350,000	560,000		M-1508-71-QQ	330,000	600,000
M-1508-71-S	370,000	580,000		M-1508-71-RR	350,000	620,000
M-1508-71-T	150,000	300,000	440,000	M-1508-71-SS	370,000	640,000
M-1508-71-U	170,000	320,000	460,000			
M-1508-71-V	190,000	340,000	480,000			
M-1508-71-W	210,000	360,000	500,000			
M-1508-71-X	230,000	380,000	520,000			
M-1508-71-Y	250,000	400,000	540,000			
M-1508-71-Z	270,000	420,000	550,000			
M-1508-71-AA	290,000	440,000	570,000			
M-1508-71-BB	310,000	460,000	590,000			
M-1508-71-CC	330,000	480,000	610,000			
M-1508-71-DD	350,000	500,000	630,000			
M-1508-71-EE	370,000	520,000	650,000			
M-1508-71-FF	390,000	540,000	670,000			
M-1508-71-GG	410,000	560,000	690,000			

INSTRUCTION CARD, NOVELTY
M-1508-71-G

BLANKS (3)

High Game to Date Recommended
levels: (Reset Periodically)

3-BALL 510,000
5-BALL 620,000

#1119-E LOST WORLD

RECOMMENDED SETTINGS

		3-BALL	5-BALL
Special: Replay	Sw. 14	ON	ON
	Sw. 15	ON	ON
Saucer Special	Sw. 22	OFF	OFF
Saucer 1000 Lite	Sw. 23	ON	OFF
Outlane Special	Sw. 24	ON	OFF
Flipper Feeder Lane	Sw. 29	ON	OFF

The following chart gives recommendations for three typical types of operation.

	3-BALL	5-BALL
Replay		
Instruction Card	M-1508-71-E	M-1508-71-E
Score Card	M-1508-71-B	M-1508-71-A w/N
Major Mode	Sw. 14, 15 ON	Sw. 14, 15 ON
Match	Sw. 21 ON	Sw. 21 ON
High Score to Date	Sw. 6, 7, ON	Sw. 6, 7, ON
X-BALL		
Instruction Card	M-1508-71-F	M-1508-71-F
Score Card	M-1508-71-D w/KK	M-1508-71-C w/DD
Major Mode	Sw. 14 OFF	Sw. 14 OFF
	Sw. 15 ON	Sw. 15 ON
Match	Sw. 21 OFF	Sw. 21 OFF
High Score to Date	Sw. 6, 7, OFF	Sw. 6, 7, OFF
NOVELTY		
Instruction Card	M-1508-71-G	M-1508-71-G
Major Mode	Sw. 14, 15, OFF	Sw. 14, 15, OFF
Match	Sw. 21 OFF	Sw. 21 OFF
High Score to Date	Sw. 6, 7, OFF	Sw. 6, 7, OFF

VIII. ROUTINE MAINTENANCE ON LOCATION:

Self-Test routines are written into the game design. They are particularly useful for routine maintenance. The tests are described below. The first test is automatic and occurs on power-up. This test causes the MPU module A4 to examine itself for failures. Seven flashes of an LED indicates proper operation. The second series of self-diagnostic tests causes the MPU to 'exercise' each of the other modules in such a way as to make their faults, if any, obvious. See Figure III and Page ii.

It is recommended that these tests be used several times a week to check out the games before play. If faults are discovered, they may be corrected on location if the operator has a stock of replacement modules. See "Trouble Shooting on Location."

MPU Module Self-Test:

At power on, the LED on the MPU module flashes once. (Flicker-Flash). After a pause, it flashes six more times and goes out. A power-up tune is played to announce game readiness. This indicates proper MPU operating condition and successful completion of the power-up test.

Game Self-Diagnostic Tests:

1. Pressing the Self-Test button inside the door initiates the Self-Test routine. See Figures III and IV. All switched lamps flash off and on continuously.
2. Pressing the Self-Test button again causes each digit on each display to cycle from 0 thru 9, and repeat continuously.
3. Pressing the Self-Test button again causes each solenoid to be energized, one at a time, in a continuous sequence. Hold both flipper buttons 'in' during this test. The number appearing on the Player Score displays is the same as the number assigned to the solenoid. The sound of a solenoid pulling-in as a number appears indicates proper operation. The absence of sound is improper. If sound is absent, see Page 17 for help in Solenoid identification.
4. Pressing Self-Test button again causes the sound module to play the "Game Over" tune repeatedly.
5. Pressing the Self-Test button again causes the MPU to search each switch assembly for stuck contacts. If any are found, the number of the first set encountered is flashed on the Player Score displays. The number remains until the fault is cleared. See Page 17 for help in Stuck Switch identification. Other numbers may follow if more stuck contacts are present. If there are no stuck switches, the Match/Ball in Play display flashes '0'.
6. Pressing the Self-Test button eleven more times causes the MPU to step thru the threshold and bookkeeping functions described previously and finally to repeat the power-up test. For more rapid exit to power-up, turn the game off, then on. The game is now ready to play.


After successful completion of the Self Diagnostic Test procedure, set the game up for play. Exercise each rollover, thumper-bumper, slingshot, etc., by hand until each switch assembly on the playfield has been checked for proper operation. If actuating a switch assembly results in intermittent or no response, clean contacts by gently closing them on a clean business card or piece of paper and wiping until they wipe clean. Regap, if necessary, to 1/16". **Do not burnish or file Gold Plated Switch Contacts.**

IX. TROUBLESHOOTING ON LOCATION

The game is designed to make troubleshooting easy. Several simple procedures are given herein that cover the greatest percentage of game failures. They are written for an operator on location and require module replacement. (See Figure III) Symptoms and the action to be taken are given for each type of problem.

If the problem is more complicated and is not solved by following this procedure, more detailed procedures are available from Bally. See the Parts List for ordering information.

FIGURE IV SELF DIAGNOSTIC TEST

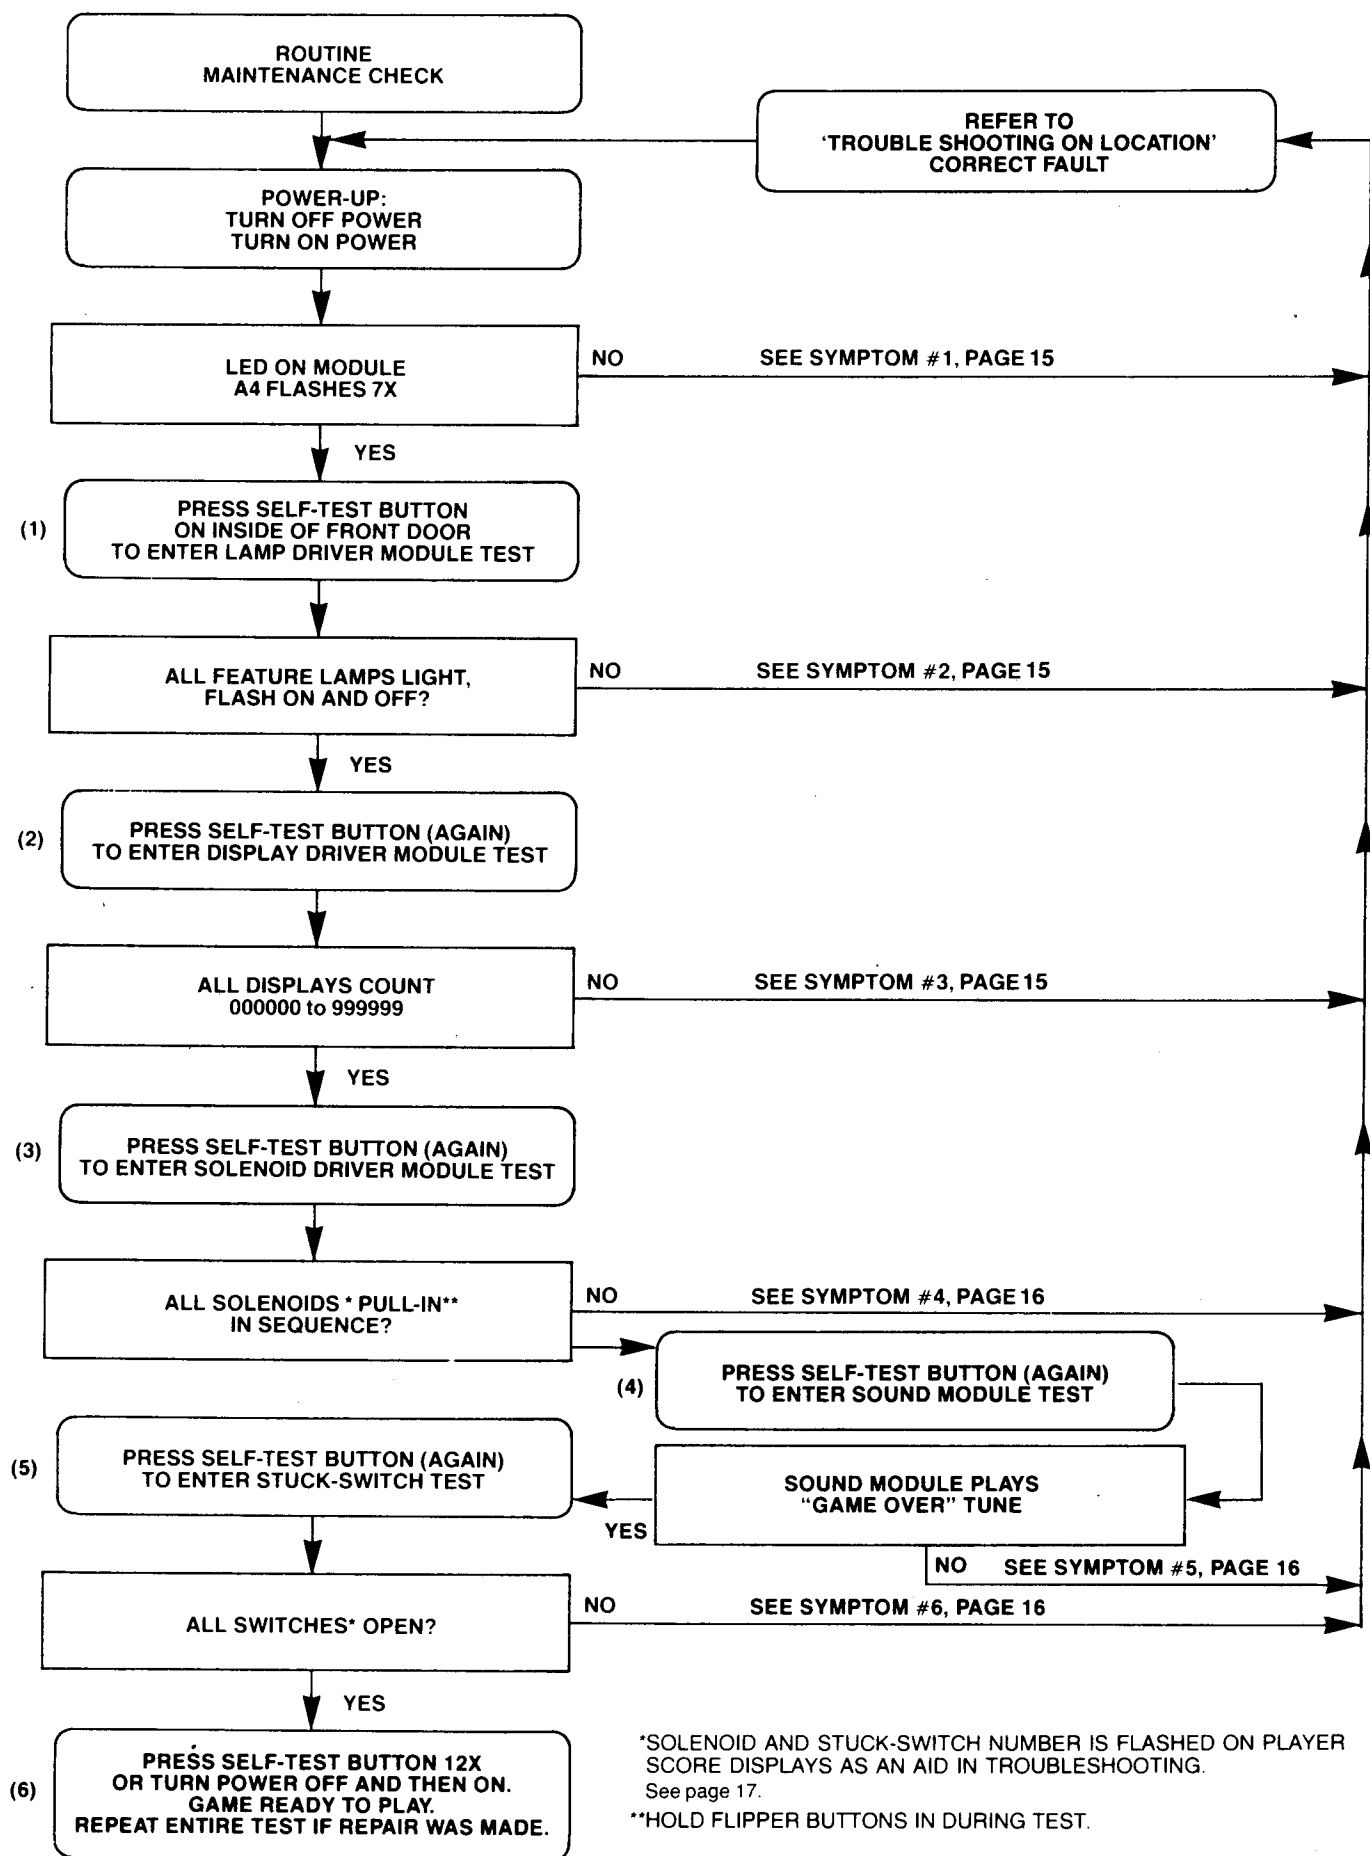

*SOLENOID AND STUCK-SWITCH NUMBER IS FLASHED ON PLAYER SCORE DISPLAYS AS AN AID IN TROUBLESHOOTING.

See page 17.

**HOLD FLIPPER BUTTONS IN DURING TEST.

- 1A) SYMPTOM:** Game does not play power-up tune when power is turned on. General Illumination is present.
- ACTION:**
- A)** Turn power OFF. Open back box. Locate light emitting diode (LED) on MPU module A4.
 - B)** Turn Power ON. LED must flash 7X to indicate that module A4 is good. Correct flash sequence is flicker/flash-pause-and then six more flashes and LED goes out.
 - C.** If LED does not come on, or does not flash, or flashes, but less than 7X, turn off power. Replace MPU module A4.
- CAUTION:** **Replacement MPU Module must have same Part Number or incorrect operation will result! See Parts List for MPU Module Part Number.**
- Turn power ON.
- D)** If game is correct, it is now ready for play. If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2A) SYMPTOM:** Not all feature lamps light during game play.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) once. If the game is correct, **all** feature lamps flash ON and OFF.
 - B)** Carefully raise playfield or open back box to gain access to lamps.
 - C)** Replace bulbs that do not flash.
 - D)** If game is correct, it is now ready for play.
 - E)** If game is not correct, turn power OFF. Replace Lamp Driver Module A5. Turn power ON and repeat A.
 - F)** If game is correct, it is now ready for play.*
 - G)** If game is not correct, turn power OFF. Replace MPU module A4. See CAUTION, 1C. Turn power ON and repeat A.
 - H)** If game is correct, it is now ready for play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2B) SYMPTOM:** One or some switched lamps always ON.
- ACTION:** Repeat 2AA, AB, AE, and AF and, if necessary AG & AH.
- 3A) SYMPTOM:** Display digits improper on **one** or **several**, but less than all Display Driver module(s), A1. Improper: One or several segments always OFF, digits mottled or several segments or digit(s) always ON.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) twice. If the game is correct, each digit on each Display Driver Module A1 (5 used/game) displays the count 1-9 and 0 continuously in all 6 digit positions. Note defective Display Driver modules.
 - B)** Turn power OFF.
- CAUTION: High Voltage is supplied to the Display Driver Modules, A1, from the Solenoid Driver/Voltage Regulator Module A3. Wait 30 seconds for High Voltage to Bleed Off.**
- C)** Replace Display Driver module(s) A1. Turn power ON. Repeat A.
 - D)** If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3B) SYMPTOM:** **All** displays improper (all five display Driver modules). Improper: Digit(s) always on or off/segment(s) always on or off, all displays.
- ACTION:**
- A)** Repeat 3AA, and AB.
 - B)** Replace MPU module A4. See CAUTION NOTE, 1C. Turn power ON. Repeat A.

- C) If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3C) **SYMPTON:** One or several displays always off.
ACTION: A) Do 3AA, AB, AC, and AD.
 B) Repeat 3BB and BC, if necessary.
- 4A) **SYMPTOM:** Solenoid(s) do(es) not pull-in during course of game.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) three times.
 B) If game was correct, each solenoid would be energized. A number is flashed on the Player Score displays as each solenoid is pulsed. Note any numbers that do not have the sound of a solenoid associated. See Solenoid Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield (or open the back box) to gain access to the solenoid. Turn power OFF. Inspect the solenoid.
 D) If a lead is broken off, repair. Repeat A & B. If game is correct, it is now ready for play.* If solenoid wiring was correct, turn power OFF.
 E) Replace Solenoid Driver/Voltage Regulator module A3. See CAUTION NOTE 3AB.
 F) Repeat AA & AB. If game is correct, it is now ready to play.* If game is not correct, turn power OFF.
 G) Replace Sound Module A8.
 H) Repeat AA and AB if game is correct. It is now ready to play. If game is not correct, turn power OFF."
 I) Replace MPU module A4. See CAUTION NOTE, 1C.
 J) Repeat A & B. If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement Procedure. (See Parts List.)
- 4B) **SYMPTOM:** Solenoid(s) always energized—Note: if impulse solenoids (ball ejects, slingshots, thumper-bumpers, etc.) are energized continuously, they are subject to damage. Limit troubleshooting to one minute with power ON, followed by **five minutes with power OFF**. Repeat as necessary. Replace damaged solenoids.
ACTION: Do 4AA, AB, AE, AF, AG, AH and if necessary, AI and AJ.
- 5) **SYMPTOM:** No Sound.
ACTION: A) With Power ON, open front door, press Self-Test switch four times.
 B) Turn volume control clockwise to Max.
 C) If correct, sound will be heard. If incorrect, try seating speaker lead connector (J2) and input connector (J1).
 D) If correct, sound will be heard. If incorrect, refer to Module Replacement procedure."
- 6) **SYMPTOM:** Feature (Drop Targets, etc.) does not score.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) five times.
 B) If the game is correct, Match/Ball in Play display would flash '0'. If a number appears on the Player Score displays, see Switch Assembly Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield. Locate the switch assembly identified from the number. Visually inspect the switch assembly. If the contacts are 'stuck,' regap them to 1/16". See section under ADJUSTMENTS. Repeat A & B. If the game is correct, it is now ready to play.* If game is not correct, turn the power OFF.
 D) Replace MPU module A4. See CAUTION NOTE 1, C.
 E) Repeat A & B. If the game is correct, it is now ready to play.* If the game is not correct, refer to Module Replacement Procedure. (See Parts List).
- 7) **SYMPTOM:** Game blows fuse(s) repeatedly.
ACTION: See Module Replacement Procedure. F.O. 560

*Turn power On-Off switch OFF and then ON.

GAME #1119-E LOST WORLD (FIGURE V)

SOLENOID IDENTIFICATION TABLE

SELF- TEST # SOLENOID IDENTIFICATION

01	OUTHOLE KICKER
02	KNOCKER
03	LEFT SAUCER
04	RIGHT SAUCER
05	LEFT THUMPER BUMPER
06	RIGHT THUMPER BUMPER

SELF- TEST # SOLENOID IDENTIFICATION

07	BOTTOM THUMPER BUMPER
08	LEFT SLINGSHOT
09	RIGHT SLINGSHOT
10	COIN LOCKOUT DOOR
11	K1 RELAY (FLIPPER ENABLE)

SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS

SELF- TEST # SWITCH DESCRIPTION

01	10 PT. RIGHT REBOUND (2)
02	10 PT. LEFT REBOUND (2)
03	RIGHT OUTLANE
04	LEFT OUTLANE
05	TOP R.O. BUTTON & RT. TOP TAR.
06	CREDIT BUTTON
07	TILT (3)
08	OUTHOLE
09	COIN III (RIGHT)
10	COIN I (LEFT)
11	COIN II (MIDDLE)
12	
13	
14	
15	
16	SLAM (2)
17	SPINNER
18	
19	
20	

SELF- TEST # SWITCH DESCRIPTION

21	
22	DRAGON'S DEN TARGET
23	LEFT SAUCER
24	RIGHT SAUCER
25	RIGHT FLIPPER FEEDER LANE
26	LEFT FLIPPER FEEDER LANE
27	"F" TARGET
28	"E" TARGET
29	"D" TARGET
30	"C" TARGET
31	"B" TARGET
32	"A" TARGET
33	
34	
35	
36	RIGHT SLINGSHOT
37	LEFT SLINGSHOT
38	BOTTOM THUMPER-BUMPER
39	RIGHT THUMPER-BUMPER
40	LEFT THUMPER-BUMPER

#1119-E LOST WORLD

○ INDICATES SWITCH ASSEMBLY
IDENTIFICATION NUMBERS.

NOTE: CABINET: 07, 16

DOOR: 06, 09, 10
11, 16

□ INDICATES SOLENOID
IDENTIFICATION NUMBERS.

NOTE: DOOR: 10

BACK BOX: 02, 11

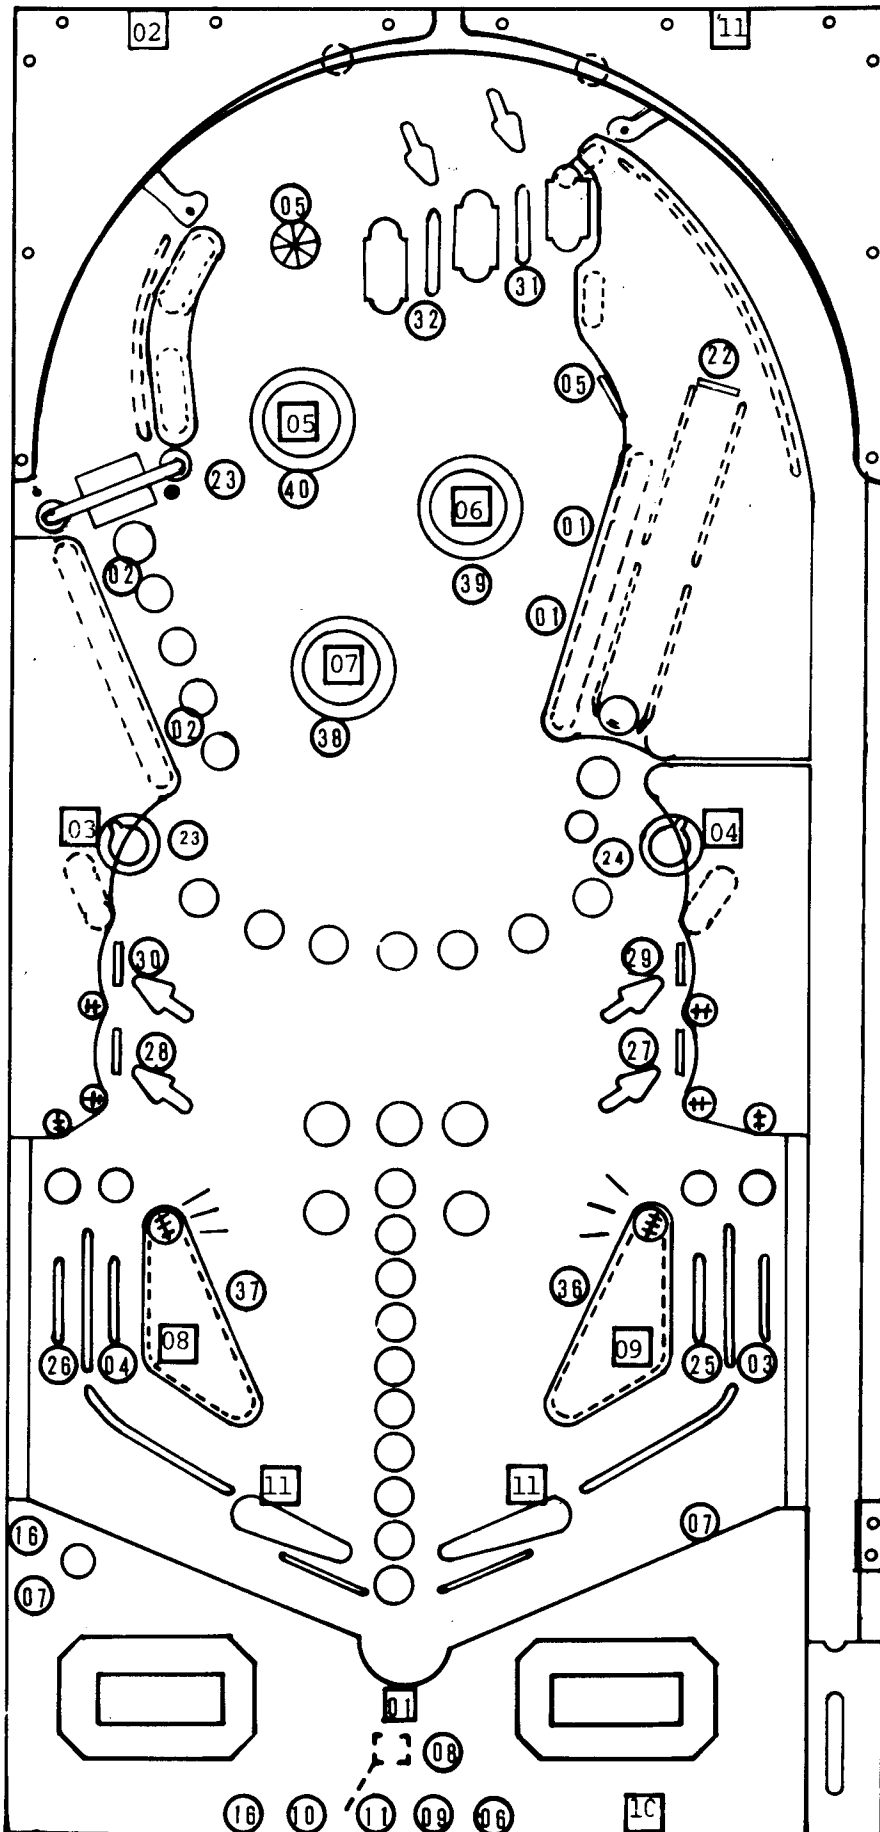


FIGURE V

ASSEMBLY ADJUSTMENTS:

GENERAL:

All switch assemblies consist of leaf springs, contacts, separators, plastic tubing and screws to hold them to the mounting surface. Before attempting to adjust a switch assembly, make sure that these screws are tight. If not, tighten screw closest to the contact end of the leaf spring first. This will prevent the assembly from being secured in such a manner that the leaf springs tend to fan out. In general, all leaf springs are adjusted for a 1/16" gap in the open position and .010" overtravel or wipe in the closed position. All contacts should be in good condition. Unless otherwise instructed, they should be dry or non-lubricated. All contacts should be free of dust and dirt. Contacts, with the exception of the flipper button switch assemblies, are plated to resist corrosion. Filing or burnishing breaks the finish and encourages corrosion. Clean by closing the contacts over a clean piece of paper (e.g. a business card) and wiping gently until the contacts are clean. For the flipper button switch assemblies **ONLY:** Tarnish can be removed with a contact file followed by a burnishing tool. Severely pitted contacts must be replaced as an assembly. In general, contacts need be cleaned or replaced and adjusted only when they are found to be a source of game malfunction.

X. SERVICE PARTS:

A parts catalogue is available upon request. The catalogue is illustrated and lists all replacement parts for each game manufactured by Bally. Requests should be addressed to:

BALLY MANUFACTURING CORPORATION
2640 WEST BELMONT AVENUE
CHICAGO, ILLINOIS 60618
ATTN: PARTS DEPARTMENT

SERVICE HINTS:

The Bally playfield has an improved tuff-coat finish with excellent wearing properties. Its life expectancy, as well as play appeal, can be extended by periodic cleaning of the playfield.

DO: Bally recommends you clean your playfield with Wildcat #125 (Wildcat Chemical Co., 1333 W. Seminary Drive, Ft. Worth, Texas 76115). Wildcat #125 is a combination cleaner and polish. Bally has tried and tested this product and found it to be very effective. If Wildcat #125 is not available, Bally suggests you ask your Distributor to order it. Inspect and hand polish the ball in a clean cloth. A chipped ball must be replaced. It can ruin the finish on the playfield in a short period of time.

DON'T: Use water in large quantities, highly caustic cleaners, abrasive cleaners or cleaning pads on the playfield. Do not allow a wax or polish build up. Waxes yellow with age and spoil play appeal.

XI. PARTS LIST **#1119-E LOST WORLD**

MISCELLANEOUS	PART NUMBER
Transformer (Domestic or Export)	E-122-125
Bulbs, #44	E-125-22

ASSEMBLY COILS	
Coin Lockout	FO-36-7000
Flipper Left & Right (2)	AQ-25-500/ 34-4500
Knocker	AR-26-1200
Outhole Kicker	AN-26-1200
Saucer (2)	AO-27-1300
Thumper-Bumper (3)	AN-26-1200
Sling-Shot (2)	AN-26-1200

PLAYFIELD PARTS See Figure II


MODULES	
Lamp Driver A5	AS-2518-23
Display Driver A1 (5 Used)	AS-2518-21
Solenoid Driver/Voltage Regulator A3	AS-2518-22
MPU A4	AS-2962
Transformer & Rectifier A2	AS-2877-1
Rectifier Board (Part of A2)	AS-2511-18
Sound	AS-2888-1

REPAIRS PROCEDURES/AIDS	
Module & Component Replacement	F.O. 560-1
AID (Assistance in Diagnostics)	
Kit, used with F.O. 560-1	KIT#485-1

MODULE COMPONENTS
SEE MODULE PARTS LIST

MODULE COMPONENT STARTER KITS
(Each Kit contains an assortment of the most needed electronic parts for use in Module repair.)
Kit #490—Rectifier Board (Part of A2)
Kit #503—MPU Board A4 (Less Memory U1-U6)
Kit #492—Solenoid Driver/Voltage Regulator A3
Kit #493—Display Driver A1
Kit #494—Lamp Driver A5

AS-2518-35 MPU MODULE

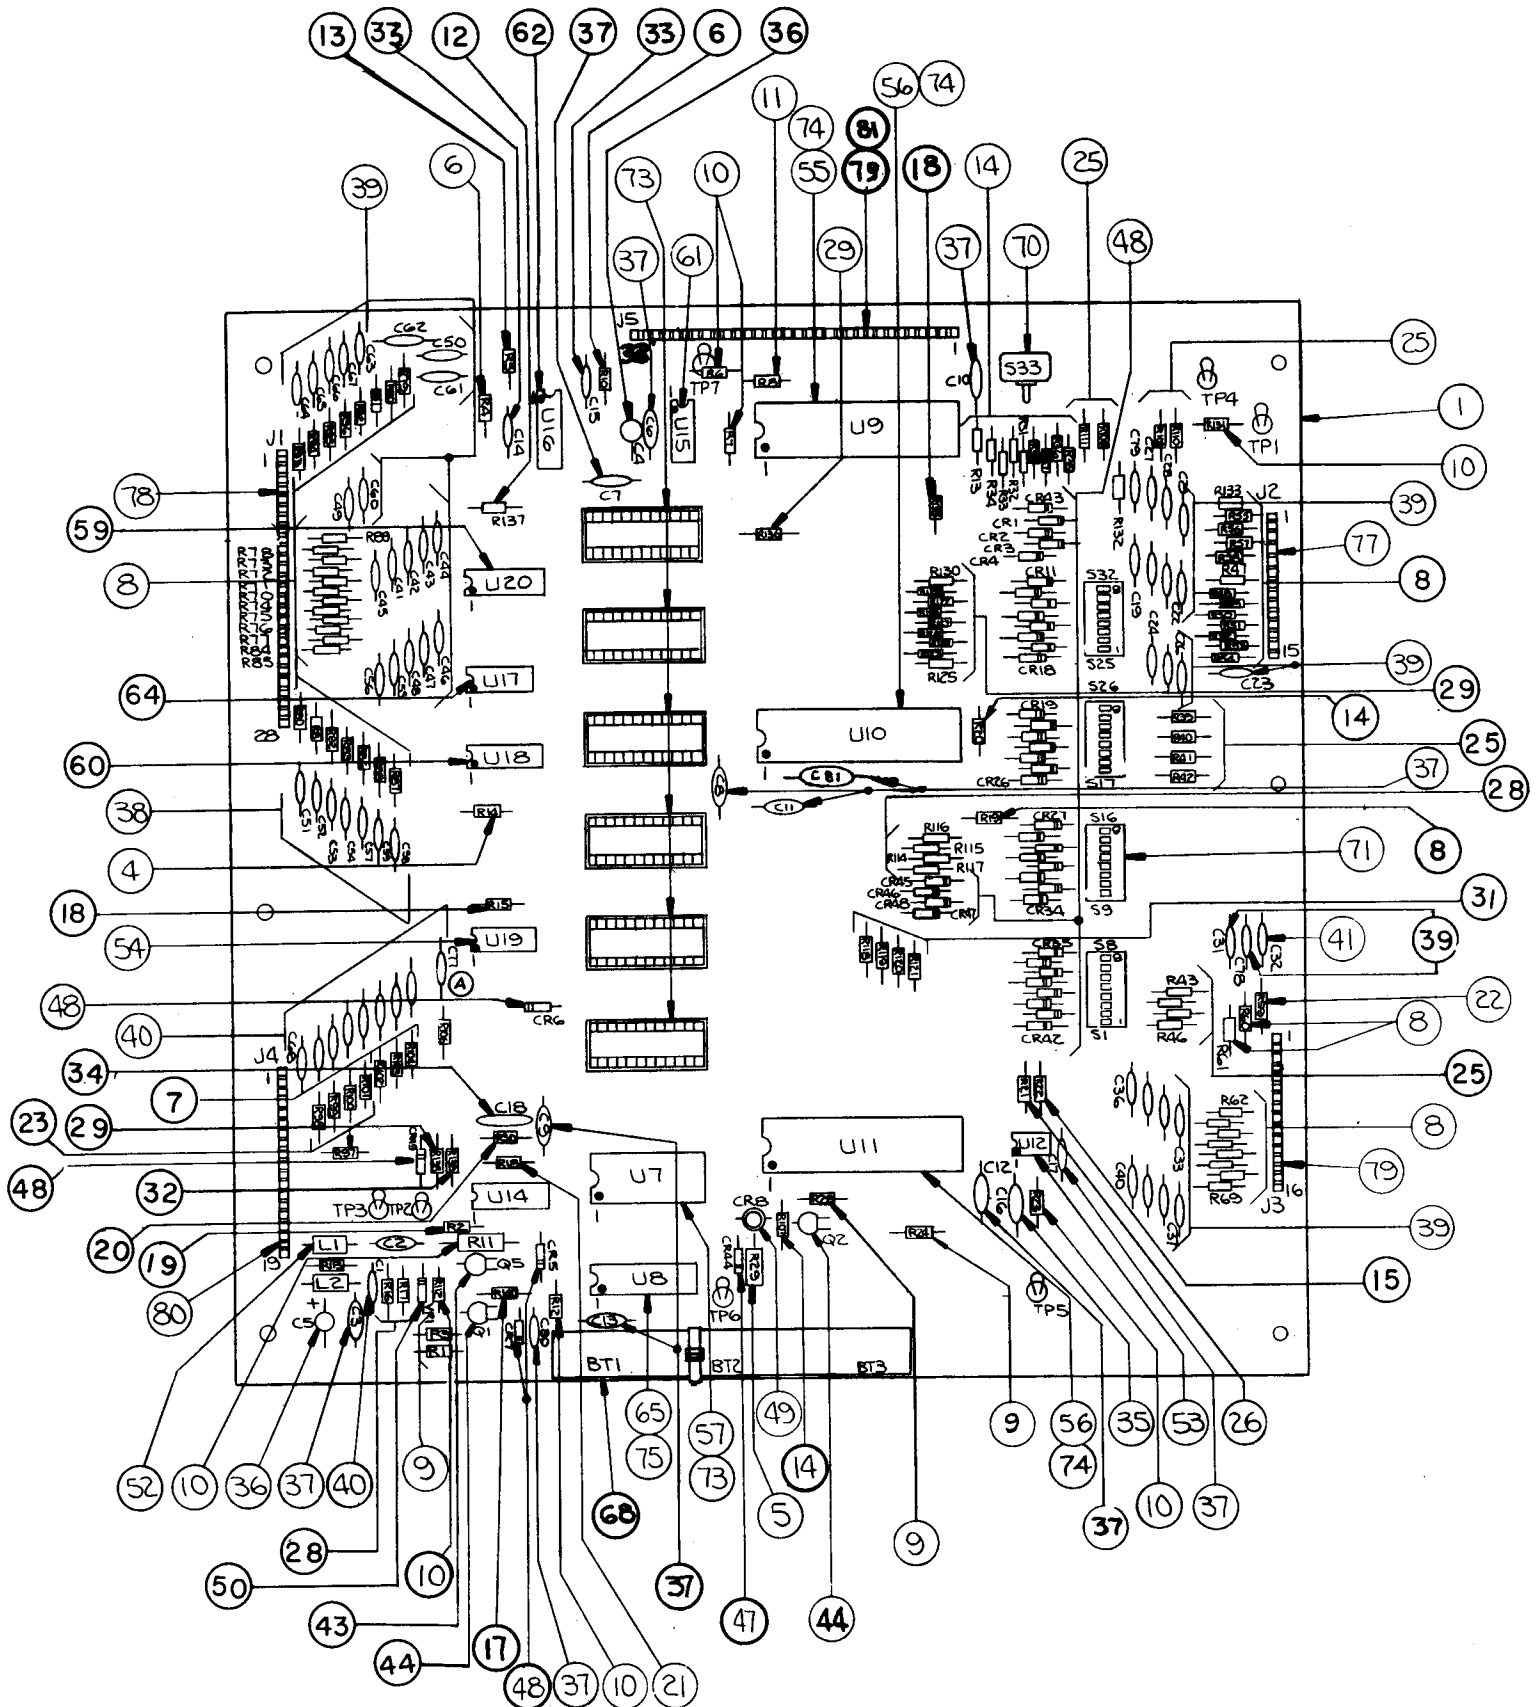

A4: MPU MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A4 (see note 1)	AS-2962	MPU Module Complete. Lost World
2	A4 (see note 2)	AS-2518-35	MPU Module less Program Memory, U1-6 incl.
3-32	See Schematic		Resistors, See schematic for value
33	C14, C15	E-00586-0067	Capacitor, 470 PFD, 1kv
34	C18	E-00586-0088	Capacitor, .05 MFD, 16V /
35	C16	E-00586-0081	Capacitor, .1 MFD, 100V
36	C4, C5	E-00586-0073	Capacitor, 4.5 MFD, 25V
37	C3, C6-C13, C17, C81	E-00586-0085	Capacitor, .01 MFD, 25V /
38	C79, C41-C67	E-00586-0083	Capacitor, 470 PFD, 50V
39	C19-C31, C78, C33-C40	E-00586-0082	Capacitor, 390 PFD, 50V
40	C1, C2, C68-C77	E-00586-0084	Capacitor, 820 PFD, 50V
41	C32	E-00586-0077	Capacitor, 3000 PF, 1kv
43	Q5	E-00585-0023	Transistor PNP (MPS-3702)
44	Q1, Q2	E-00585-0031	Transistor (2N3904)
47	CR44	E-00587-0006	Diode (IN4004)
48	CR1-CR7, CR11-CR43, CR45-CR48	E-00587-0014	Diode (IN4148)
49	CR8	E-00679	LED (Green)
50	VR1	E-00598-0008	Diode Zener (8.2V, IN9598)
52	L1, L2	E-00604-0003	Inductor, 22 Micro Hy.
53	U12	E-00620-0004	Timer (555)
54	U19	E-00620-0005	Quad 2 Input (4011)
55	U9	E-00620-0028	MPU I.C. (6800)
56	U10, U11	E-00620-0029	PIA I.C. (6820)
57	U7	E-00620-0030	RAM I.C. (6810)
59	U20	E-00620-0032	HEX Buffer I.C. (14502B)
60	U14, U18	E-00620-0033	HEX Inverter (4049B)
61	U15	E-00620-0034	Quad Memory Driver (MC3459L)
62	U16	E-00620-0035	Dual Monostable (9602)
64	U17	E-00620-0041	Quad 2 Inputs (74L00N)
65	U8	E-00620-0042	RAM (C MOS, P5101L-3)
68	BT1, BT2, BT3	E-00628-0003	Battery
70	S33	E-00658-0001	Push Button Switch
71	S1-S8, S9-S16, S17-S24, S25-S32	E-00677	DIP Switch
73		E-00712	24 Pin Socket
74		E-00712-0001	40 Pin Socket
75		E-00712-0003	22 Pin Socket
77	J2	E-00715	15 Pin Wafer Connector
78	J1	E-00715-0004	28 Pin Wafer Connector
79	J3, J5	E-00715-0017	16 Pin Wafer Connector
80	J4	E-00715-0018	19 Pin Wafer Connector
81	J5	E-00715-0024	17 Pin Wafer Connector


NOTE 1:

When ordering, fill in dash number. For example, AS-2962-0: LOST WORLD.

NOTE 2:

Order replacement memory chips U1-U6, specifying game, socket and part number stamped on chip.


AS-2518-23 LAMP DRIVER MODULE

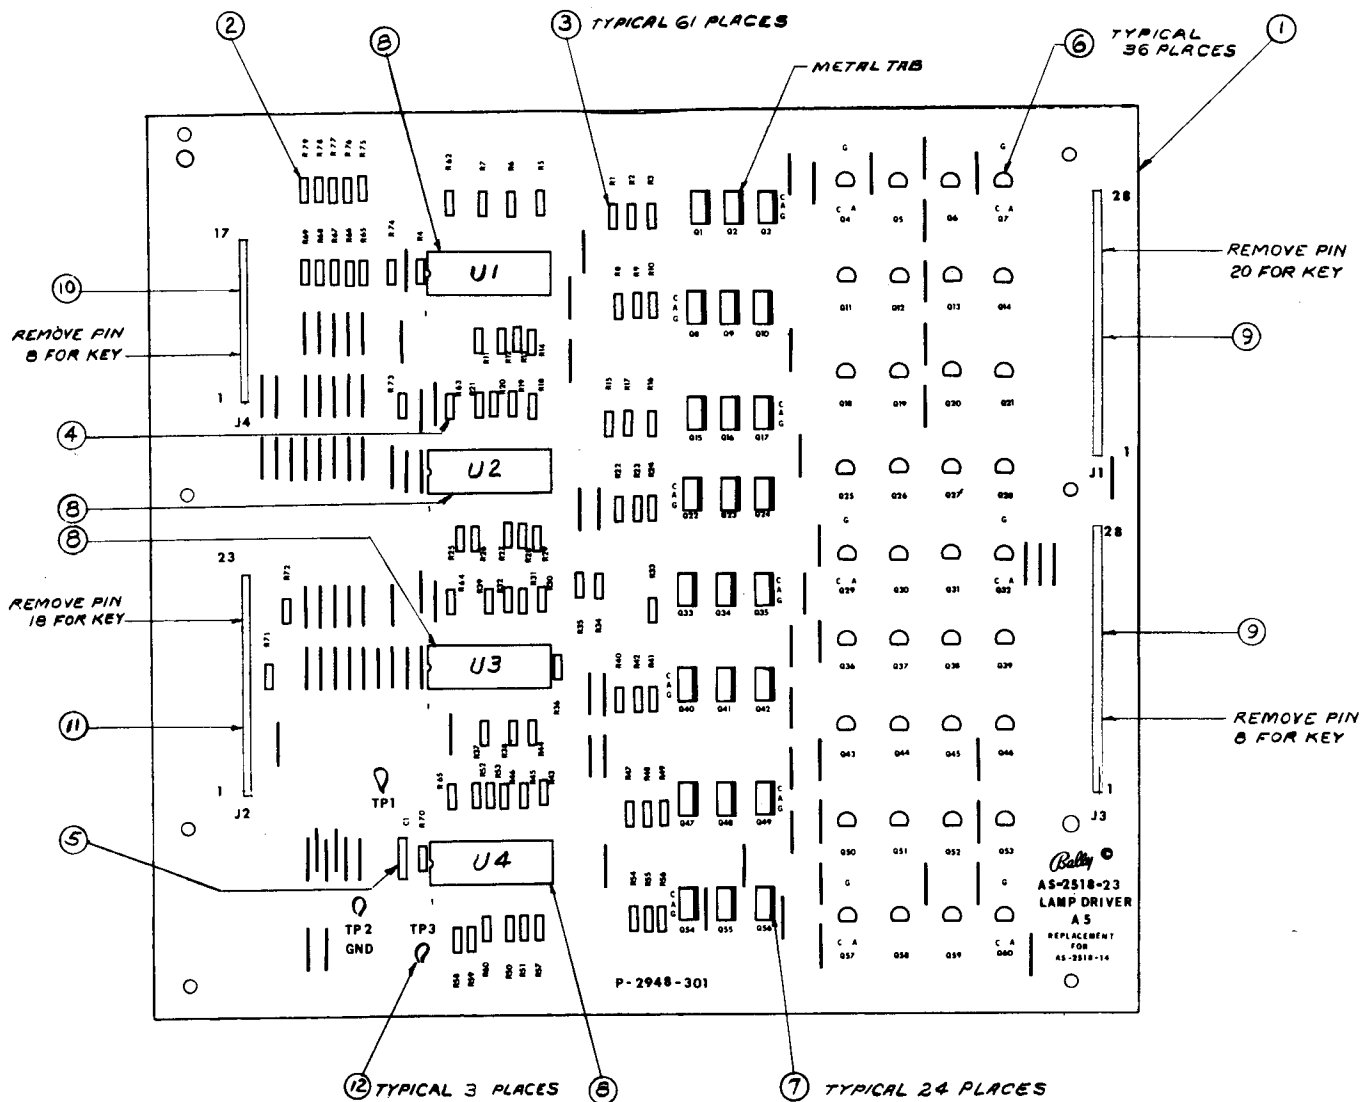

A5: LAMP DRIVER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A5	AS-2518-23	Lamp Driver Module, Complete
2	R71-R79	E-00105-242	Resistor, 20k Ω , 5%, 1/4 W
3	R1-R60, R70	E-00105-0237	Resistor, 2k Ω , 5%, 1/4 W
4	R61-R69	E-00105-0256	Resistor, 2.2M Ω , 1/4 W
5	C1	E-00586-0065	Capacitor, .01 MFD, 500V
6	Q4-Q7, Q11-Q14, Q18-Q21, Q25-Q32, Q36-Q39, Q43-Q46, Q50-Q53, Q57-Q60	E-00585-0014	SCR, 2N5060
7	Q1-Q3, Q8-Q10, Q15-Q17, Q22-Q24, Q33-Q35, Q40-Q42, Q47-Q49, Q54-Q56	E-00585-0029	SCR, MCR106-1
8	U1-U4	E-00620-0037	I.C., Decoder, 14514B
9	J1, J3	E-00715-0004	28 Pin Wafer Connector
10	J4	E-00715-0013	17 Pin Wafer Connector
11	J2	E-00715-0014	23 Pin Wafer Connector
12	TP1, TP2, TP3	P-05399	Test Clip

AS-2518-21 DISPLAY DRIVER MODULE

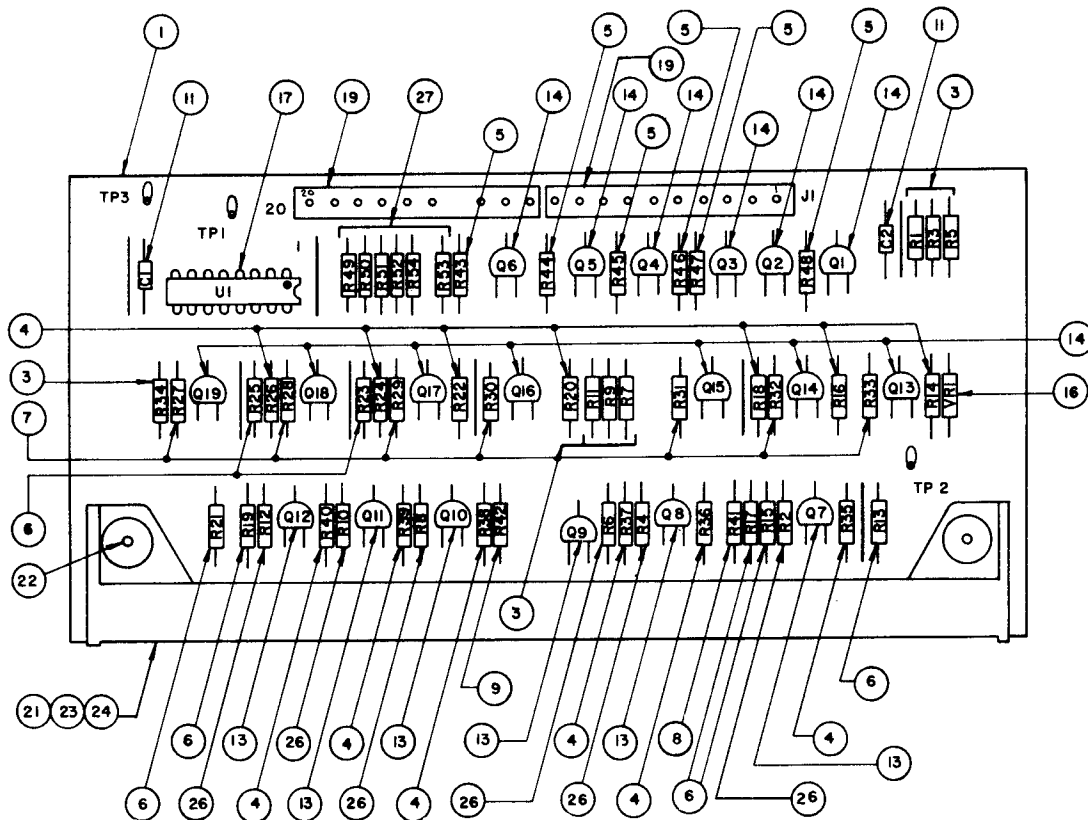


A1: DISPLAY DRIVER MODULE COMPONENT PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	1		P-2948-296	P.C. Board, M-645-392
3	7	R1, R3, R5, R7, R9, R11, R34	E-105-226	Resistor, 100K Ω
4	13	R14, R16, R18, R20, R22, R24, R26, R35, R36, R37, R38, R39, R40	E-105-227	Resistor, 300K Ω
5	6	R43, R44, R45, R46, R47, R48	E-105-228	Resistor, 9.1K Ω
6	7	R13, R15, R17, R19, R21, R23, R25	E-105-229	Resistor, 1.5K Ω
7	7	R27, R28, R29, R30, R31, R32, R33	E-105-230	Resistor, 1K Ω
8	1	R41	E-105-231	Resistor, 39K Ω
9	1	R42	E-105-271	Resistor, 240K Ω
10				
11	2	C1, C2	E-586-65	Capacitor, .01 MFD
13	6	Q7, Q8, Q9, Q10, Q11, Q12	E-585-32	Transistor (2N5401)
14	13	Q1, Q2, Q3, Q4, Q5, Q6, Q13, Q14, Q15, Q16, Q17, Q18, Q19	E-585-33	Transistor (MPS-A42)
16	1	VR1	E-598-7	Zener Diode, 110V
17	1	U1	E-620-38	I.C. Decoder
18				
19	2	J1	E-715-34	10 Pin Wafer Pin Connector
21	1	DS1	E-680	Digital Display Panel
22	2		M-1836	Hi-Lo Screw, W/H
23	1		P-2399	Display Mounting (Top)
24	1		P-2399-1	Display Mounting (Bottom)
26	6	R2, R4, R6, R8, R10, R12	E-105-287	Resistor, 2.2K Ω
27	6	R49, R50, R51, R52, R53, R54	E-105-242	Resistor, 20K Ω
28	As Req'd			Wire Jumper

NOTE: INTERCHANGEABLE WITH AS-2518-15

AS-2518-22 SOLENOID DRIVER/VOLTAGE REGULATOR MODULE

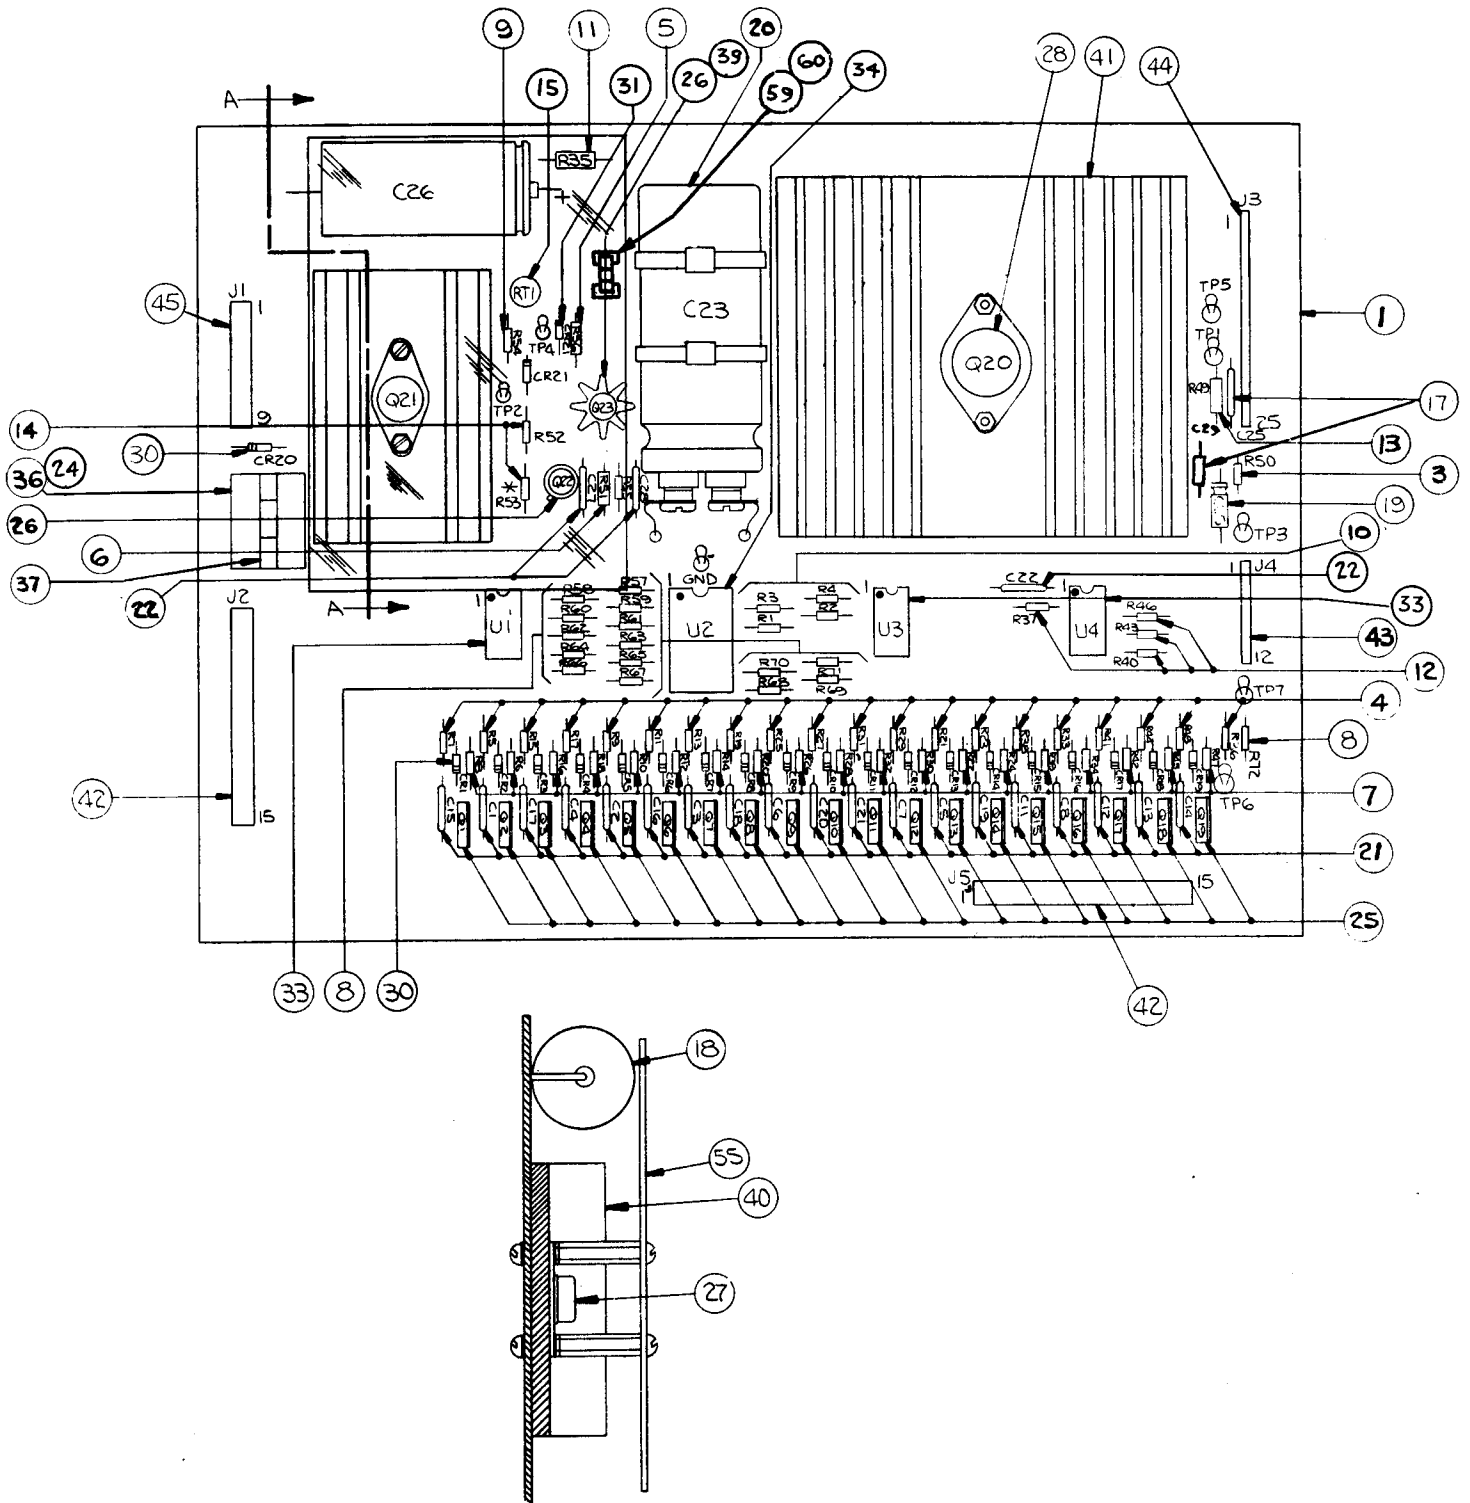


NOTE: INTERCHANGEABLE WITH AS-2518-16

A3: SOLENOID DRIVER/VOLTAGE REGULATOR MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A3	AS-2518-22	Solenoid Driver/ Voltage Regulator Module, Complete
3-14	Resistors		Resistor, See Schematic for value.
15	RT1	E-00599-0014	Pot. (Linear) 25K
17	C25, 29	E-00586-0014	Capacitor, 1 MFD, 20V
18	C26	E-00586-0059	Capacitor, 160 MFD, 350V
19	C24	E-00586-0063	Capacitor, 2 MFD @ 25V
20	C23	E-00586-0062	Capacitor, 11700 MFD, 20V
21	C1-C8, C11-C21	E-00586-0064	Capacitor, .002 MFD, 1kv
22	C22, C27, C28	E-00586-0065	Capacitor, .01 MFD, 500V
24	K1	E-00146-0795	Relay, Printed Circuit
25	Q1-Q19	E-00585-0034	Transistor, SE9302
26	Q22, Q23	E-00585-0041	Transistor, 2N3440
27	Q21	E-00585-0042	Transistor, 2N3584
28	Q20	E-00710	+5V Regulator, LAS1405 or 78H05KC or LM323K
30	CR1-CR21	E-00587-0015	Diode (IN4004)
31	VR1	E-00598-0010	Diode, Zener 140V, IN5275A
33	U1, U3, U4	E-00681	I.C. Transistor Array, CA3081
34	U2	E-00620-0039	I.C. Binary to 1/16 Decoder, 74L154
36		E-00592-0002*	Relay Socket
37		M-1839*	Relay Holder
39		E-00682	Heat Sink, TO5
40		E-00682-0001	Heat Sink, TO66
41		E-00682-0002	Heat Sink, TO3 Case
42		E-00715-0039	15 Pin Wafer Connector
43		E-00715-0016	12 Pin Wafer Connector
44		E-00715-0020	25 Pin Wafer Connector
45		E-00715-0033	9 Pin Wafer Connector
55		M-1837	Shield-Plexiglass
59		E-00148-0021	Fuse Clips
60	F1	E-00133-0029	Fuse 8 AG-3/16 Amp.


*USED WITH ITEM 24, E-00146-0791, PLUG IN RELAY ONLY

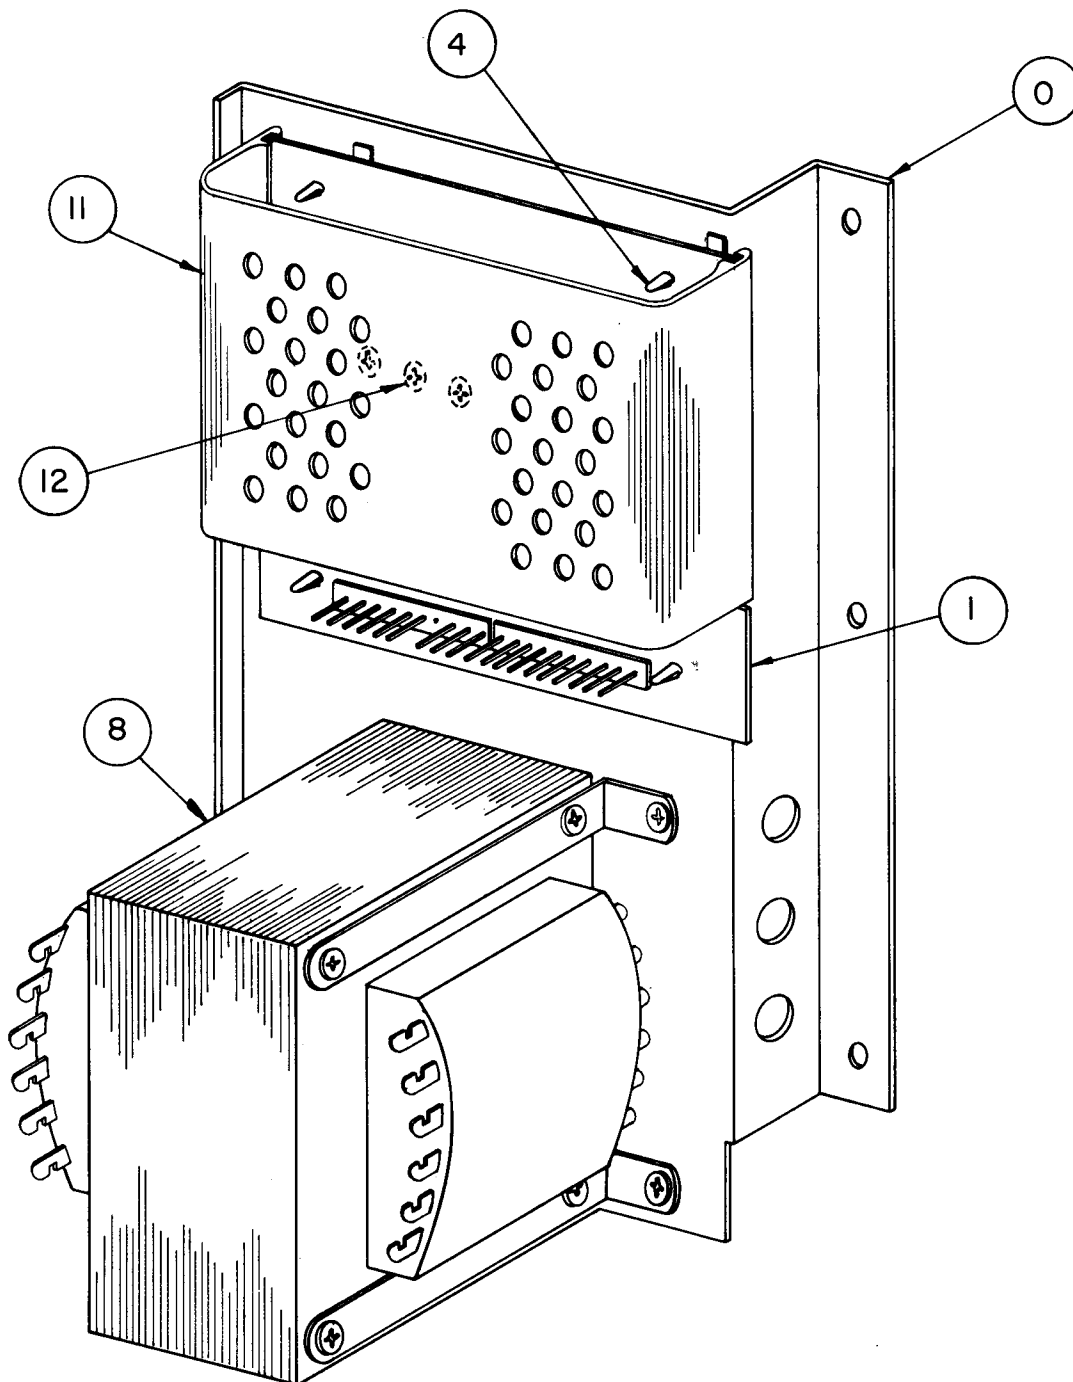

A2: POWER TRANSFORMER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
0	A2	AS-2877-1	Power Transformer Module, Complete
1		AS-2518-18	Rectifier Board Assembly
4		M-1829-2a	Circuit Board Support (4 Req'd.)
8		E-00122-0125c	Transformer 120/240V, 50/60 Hz
11		P-2692b	P.C.B Cover
12		M-1834	Heat Sink Compound

AS-2518-18 RECTIFIER BOARD ASSEMBLY

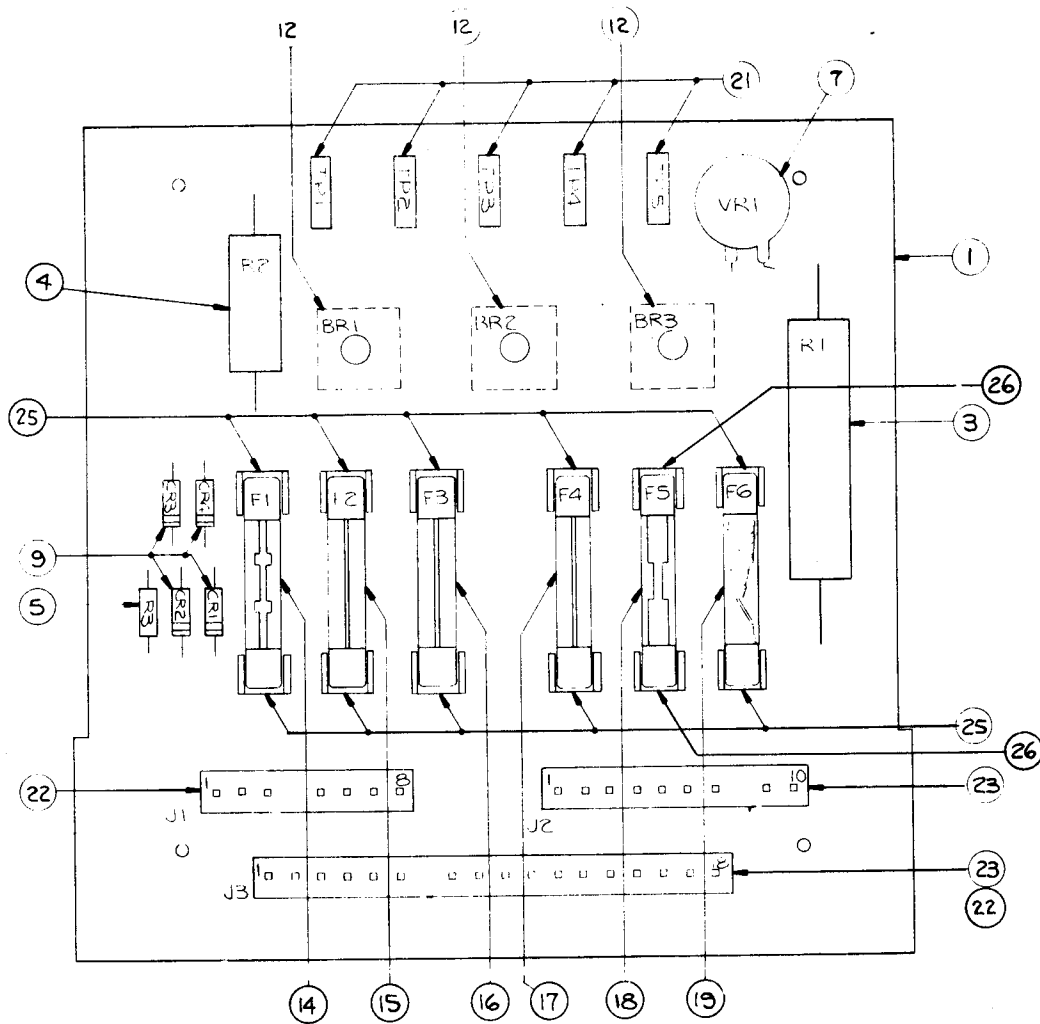

RECTIFIER BOARD ASSEMBLY (Part of) A2: POWER TRANSFORMER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	P/O A2	AS-2518-18	Rectifier Board Assembly, Complete
3	R1	E-00104-0092	Resistor, 10%, 600 Ohm, 10W
4	R2	E-00104-0091	Resistor, 25 Ohm, 5W
5	R3	E-00105-0226	Resistor, 5%, 100K Ohm, 1/4W
7	VR1	E-00623	Varistor
9	CR1, CR2, CR3, CR4	E-00587-0006	Diode (IN4004)
12	BR1, BR2, BR3	E-00602-0003	Bridge Rectifier (VJ248 VARO)
14	F1	E-00133-0010	Fuse, 10A, 32V, 3AG
15	F2	E-00133-0028	Fuse, 3/4A, 250V, 3AG, S.B.
16	F3	E-00133-0004	Fuse, 4A, 32V, 3AG
17	F4	E-00133-0005	Fuse, 5A, 32V, 3AG
18	F5	E-00133-0027	Fuse, 20A, 32V, 3AG
19	F6	E-00133-0024	Fuse, 3A, 3AG, S.B.
21		E-00684	Test Point
22	J1, J3	E-00715-0032	8 Pin Wafer Connector
23	J2, J3	E-00715-0034	10 Pin Wafer Connector
25		E-00148-0021	Fuse Clips
26		E-00148-0022	Fuse Clips

A8: SOUND MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A8 (see note 1)	AS-2888-1	PWB Module Complete—
2	J1	E-00715-0039	15 Pin Connector
3	J2	E-00715-0026	2 Pin Connector
4	TP1-TP5	P-05399	Test Clip
5	R1, R28, R31	E-00105-0239	Resistor ¼W 5% 4.7K
6	R2	E-00105-0281	Resistor ¼W 5% 15K
7	R3	E-00105-0282	Resistor ¼W 5% 33K
8	R4	E-00105-0257	Resistor ¼W 5% 3.9K
9	R5, R6, R9, R17, R19, R20, R23, R25, R26, R27, R30	E-00105-0185	Resistor ¼W 5% 10K
10	R10	E-00105-0248	Resistor ¼W 5% 150K
11	R11, R12, R14	E-00105-0285	Resistor ¼W 5% 1M
12	R13	E-00105-0284	Resistor ¼W 5% 470K
13	R15	E-00105-0279	Resistor ¼W 5% 360
14	R16	E-00105-0280	Resistor ¼W 5% 470
15	R18	E-00105-0278	Resistor ¼W 5% 2.7
16	R8	E-00105-0287	Resistor ¼W 5% 2.2K
17	R21	E-00105-0246	Resistor ¼W 5% 110K
18	R22	E-00105-0286	Resistor 1W 4.7K
19	R24	E-00105-0223	Resistor ¼W 5% 82K
20	R7	E-00105-0289	Resistor ¼W 5% 1.1K
21	R29	E-00105-0230	Resistor ¼W 5% 1K
22	R36	E-00104-0096	Resistor 5W, 10% 75Ω
23		E-00599-0015	Resist. Var. 91B, 10K
24	C1, C10	E-00586-0068	Cap., Disc. 100PF 1000V
25	C3, C14, C15, C18	E-00586-0065	Cap., Disc. .01MFD 500V
26	C7	E-00586-0087	Cap., Disc. .02MFD 500V
27	C19, C2, C5, C9, C16, C21	E-00586-0088	Cap., Disc. .05MFD 16V
28	C4, C12	E-00586-0089	Cap., Disc. .1MFD 25V
29	C8, C11	E-00586-0090	Cap., Elect. 1MFD 25V
30	C6	E-00586-0063	Cap., Elect. 2MFD 25V
31	C13	E-00586-0091	Cap., Elect. 100MFD 25V
32	C17	E-00586-0092	Cap., Elect. 100MFD 100V
33	Q1 (TIP 29)	E-00585-0043	Transistor NPN
34	Q2, Q3 (2N 3904)	E-00585-0031	Transistor NPN
35	CR1, CR2 (1N 4148)	E-00587-0014	Diode
36	CR3 (1N 4004)	E-00587-0015	Diode
37	CR4 (1N 5243)	E-00598-0011	Diode, Zener
38	U1, U8 (MC 14049B)	E-00620-0033	Hex Inverter (I.C.)
39	U4, U5 (MC 14526B)	E-00620-0044	Programmable 4 Bit Counter
40	U2 (MC 14042B)	E-00620-0045	Quad. Latch
41	U7 (555)	E-00620-0004	Timer I.C.
42	U9 (LM 741)	E-00620-0047	Operational Amp.
43	U10 (LM 380N)	E-00620-0048	Audio Amplifier
44	U11 (86 L93)	E-00620-0046	4 Bit Binary
45	C20	E-00586-0064	Cap., Disc. .002
46	A8 (see note 2)	AS-2518-32	PWB Module Less Program Memory U3


NOTE 1:

When ordering specify name of game.


NOTE 2:

Order replacement memory chip U3 specifying name of game and part no. stamped on chip.

AS-2518-32 SOUND MODULE

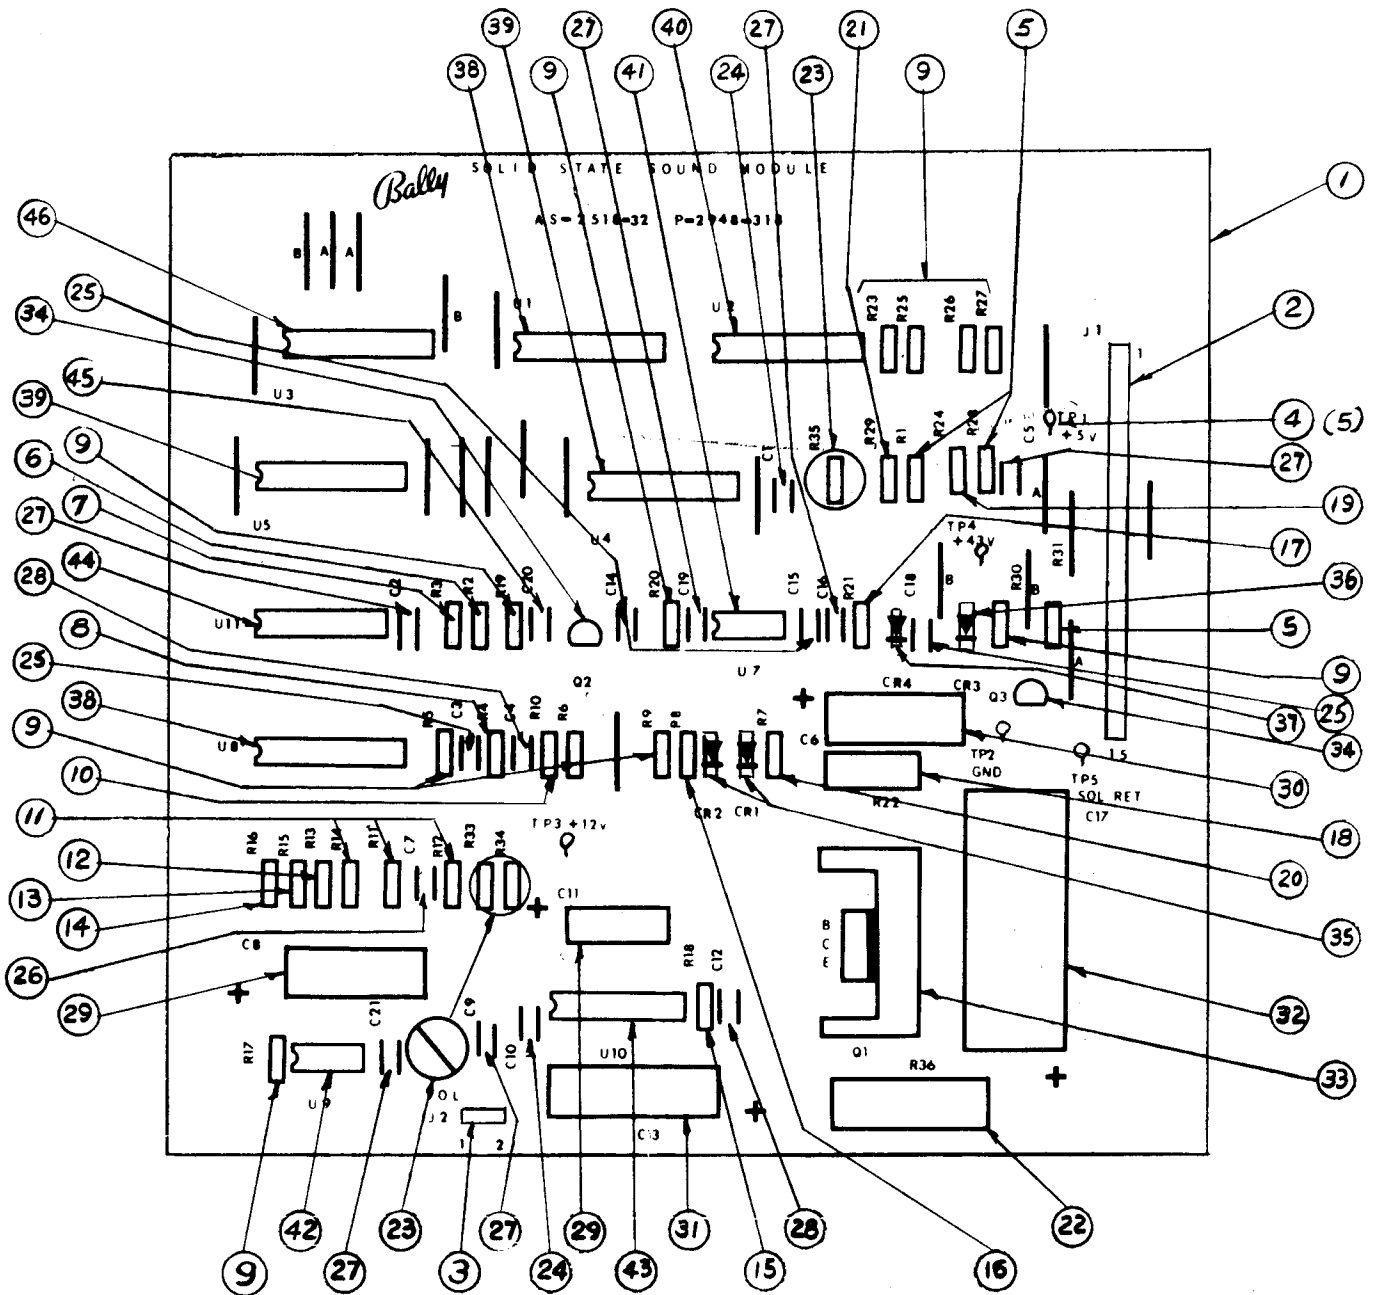


-LOST WORLD-
"TRAPPED BALL" INSTRUCTIONS

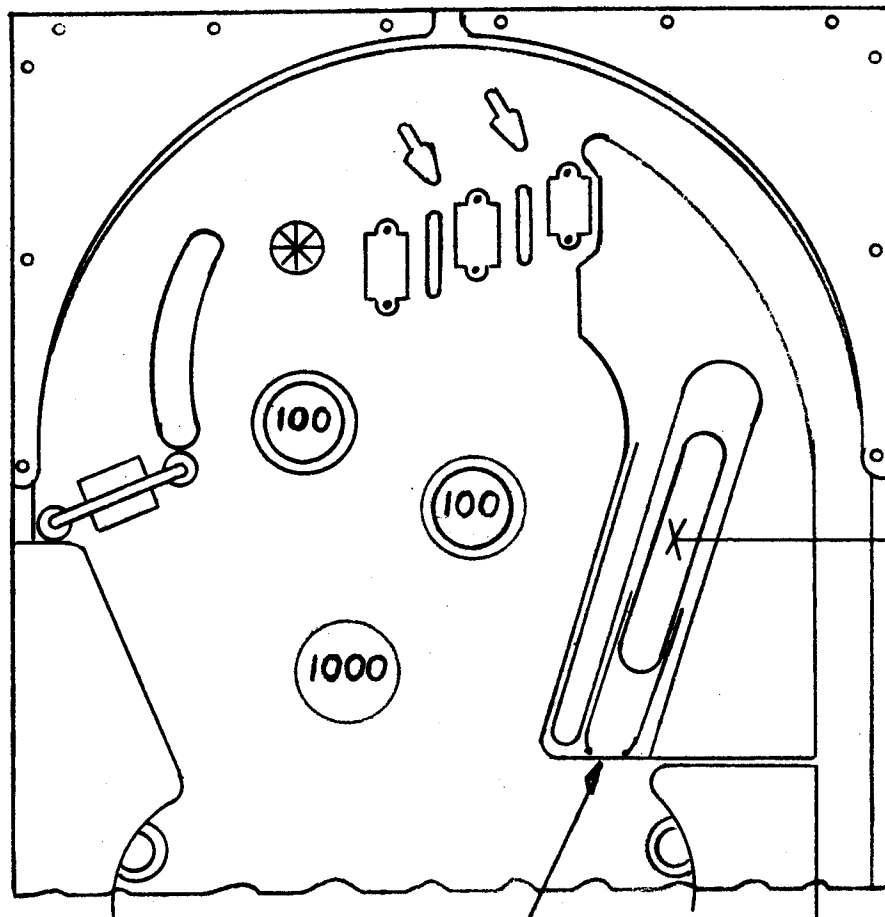

**PLACE ONE OF THE
1 1/8 DIA. BALLS INTO
"DRAGONS DEN"
THRU SLOT IN TOP
PLASTIC.**

**DO NOT FORCE BALL INTO
DEN BETWEEN WIRE FORMS**

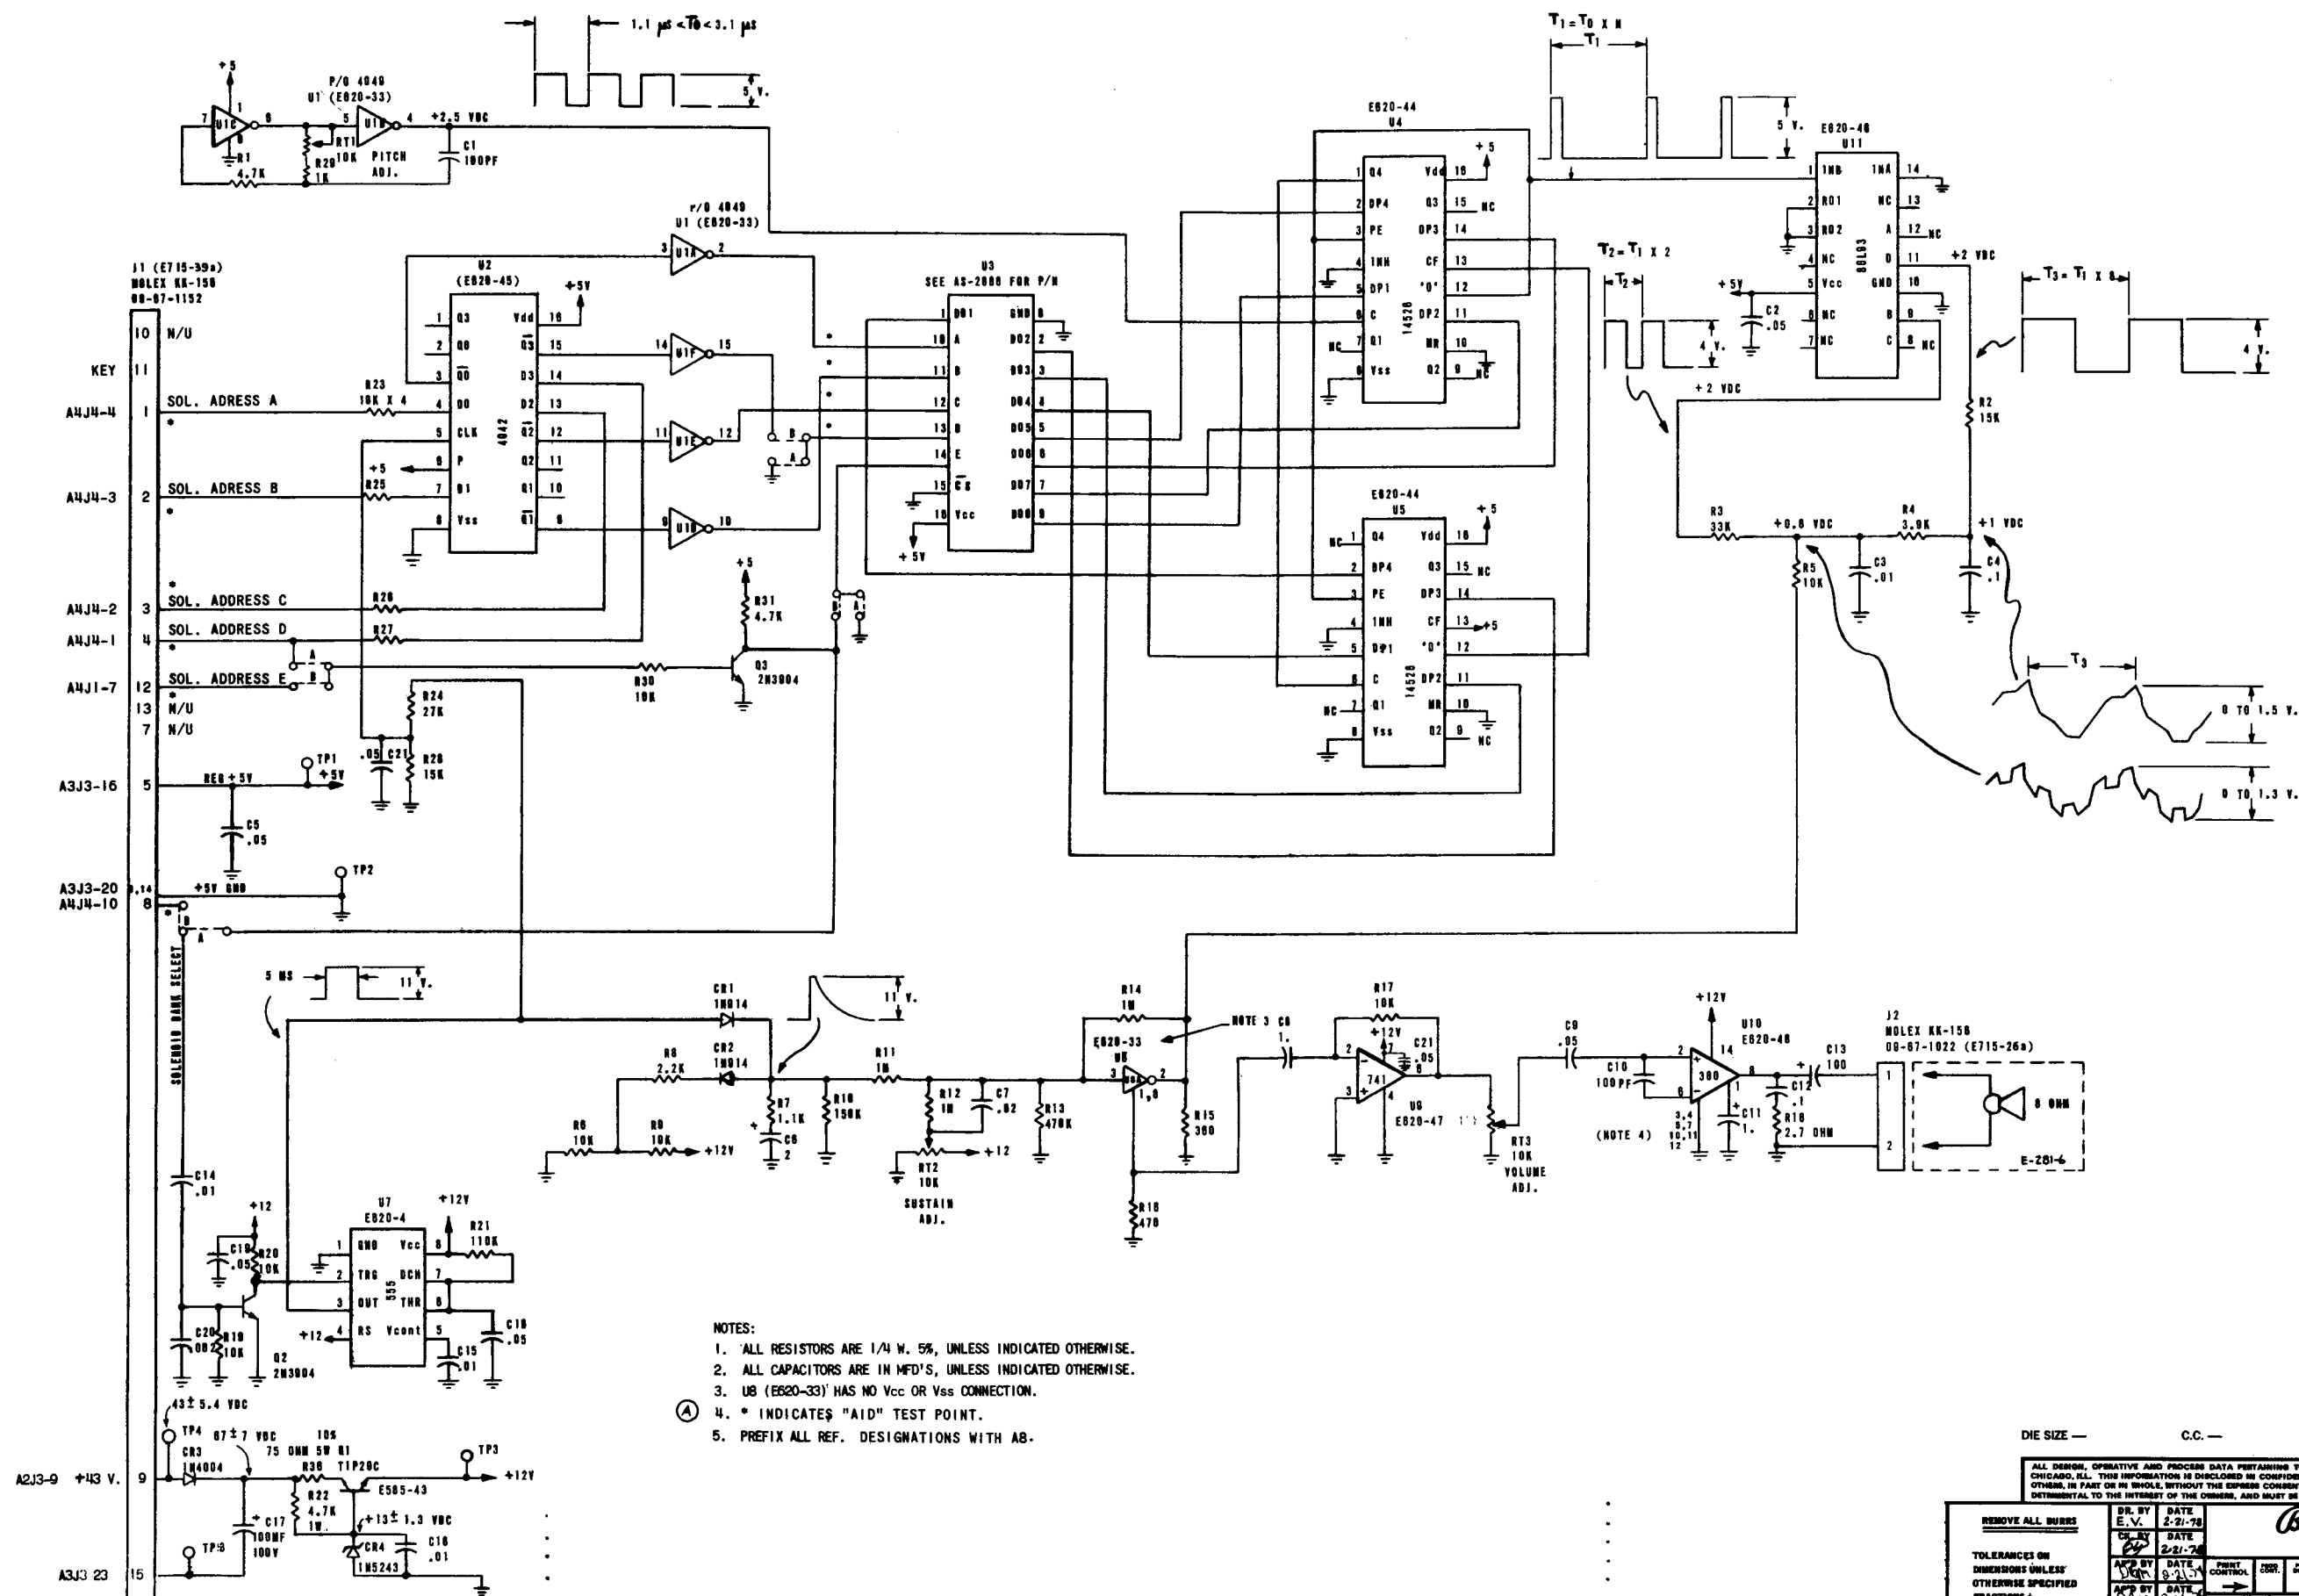

- NOTES:
1. ALL RESISTORS ARE 1/4 W. 5%, UNLESS INDICATED OTHERWISE.
 2. ALL CAPACITORS ARE IN MFD'S, UNLESS INDICATED OTHERWISE.
 3. UB (5520-33) HAS NO V_{CC} OR V_{SS} CONNECTION.
 4. * INDICATES "AID" TEST POINT.
 5. PREFIX ALL REF. DESIGNATIONS WITH A8.


DIE SIZE — C.C. — FT. PER M — LBS. PER M —

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY INC. CORP. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNER. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNER, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURS		DR. BY E.V.		DATE 2-21-78		Bally MANUFACTURING CORP.											
		CHART		SATE 2-21-78		2640 BELMONT AVENUE CHICAGO, ILLINOIS											
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		DATE 2-21-78		DATE 2-21-78		PART CONTROL		ENGR.	DR.	FILE	ISS.	ENR.	DES.	TECH.	TEMP.	TOTAL	SCALE
FRACTIONS ±		APPROVED BY [Signature]		APPROVED BY [Signature]		NAME										ASSER. NO. USED ON/W	
DECIMALS ±						SOLID STATE SOUND MODULE A8										AS-2518-32	
ANGLES ±		FINISH				MATERIAL										PART NO.	
DO NOT SCALE DRAWING		HARDENING														W-1193 c	

OPER.	DEPT.	DESCRIPTION	TOOL No.
-------	-------	-------------	----------


1	A	ADDED NOTE 4	6-8-78	S.T.	JL
NO.	LET.	CHANGE	DATE	BY	CHK

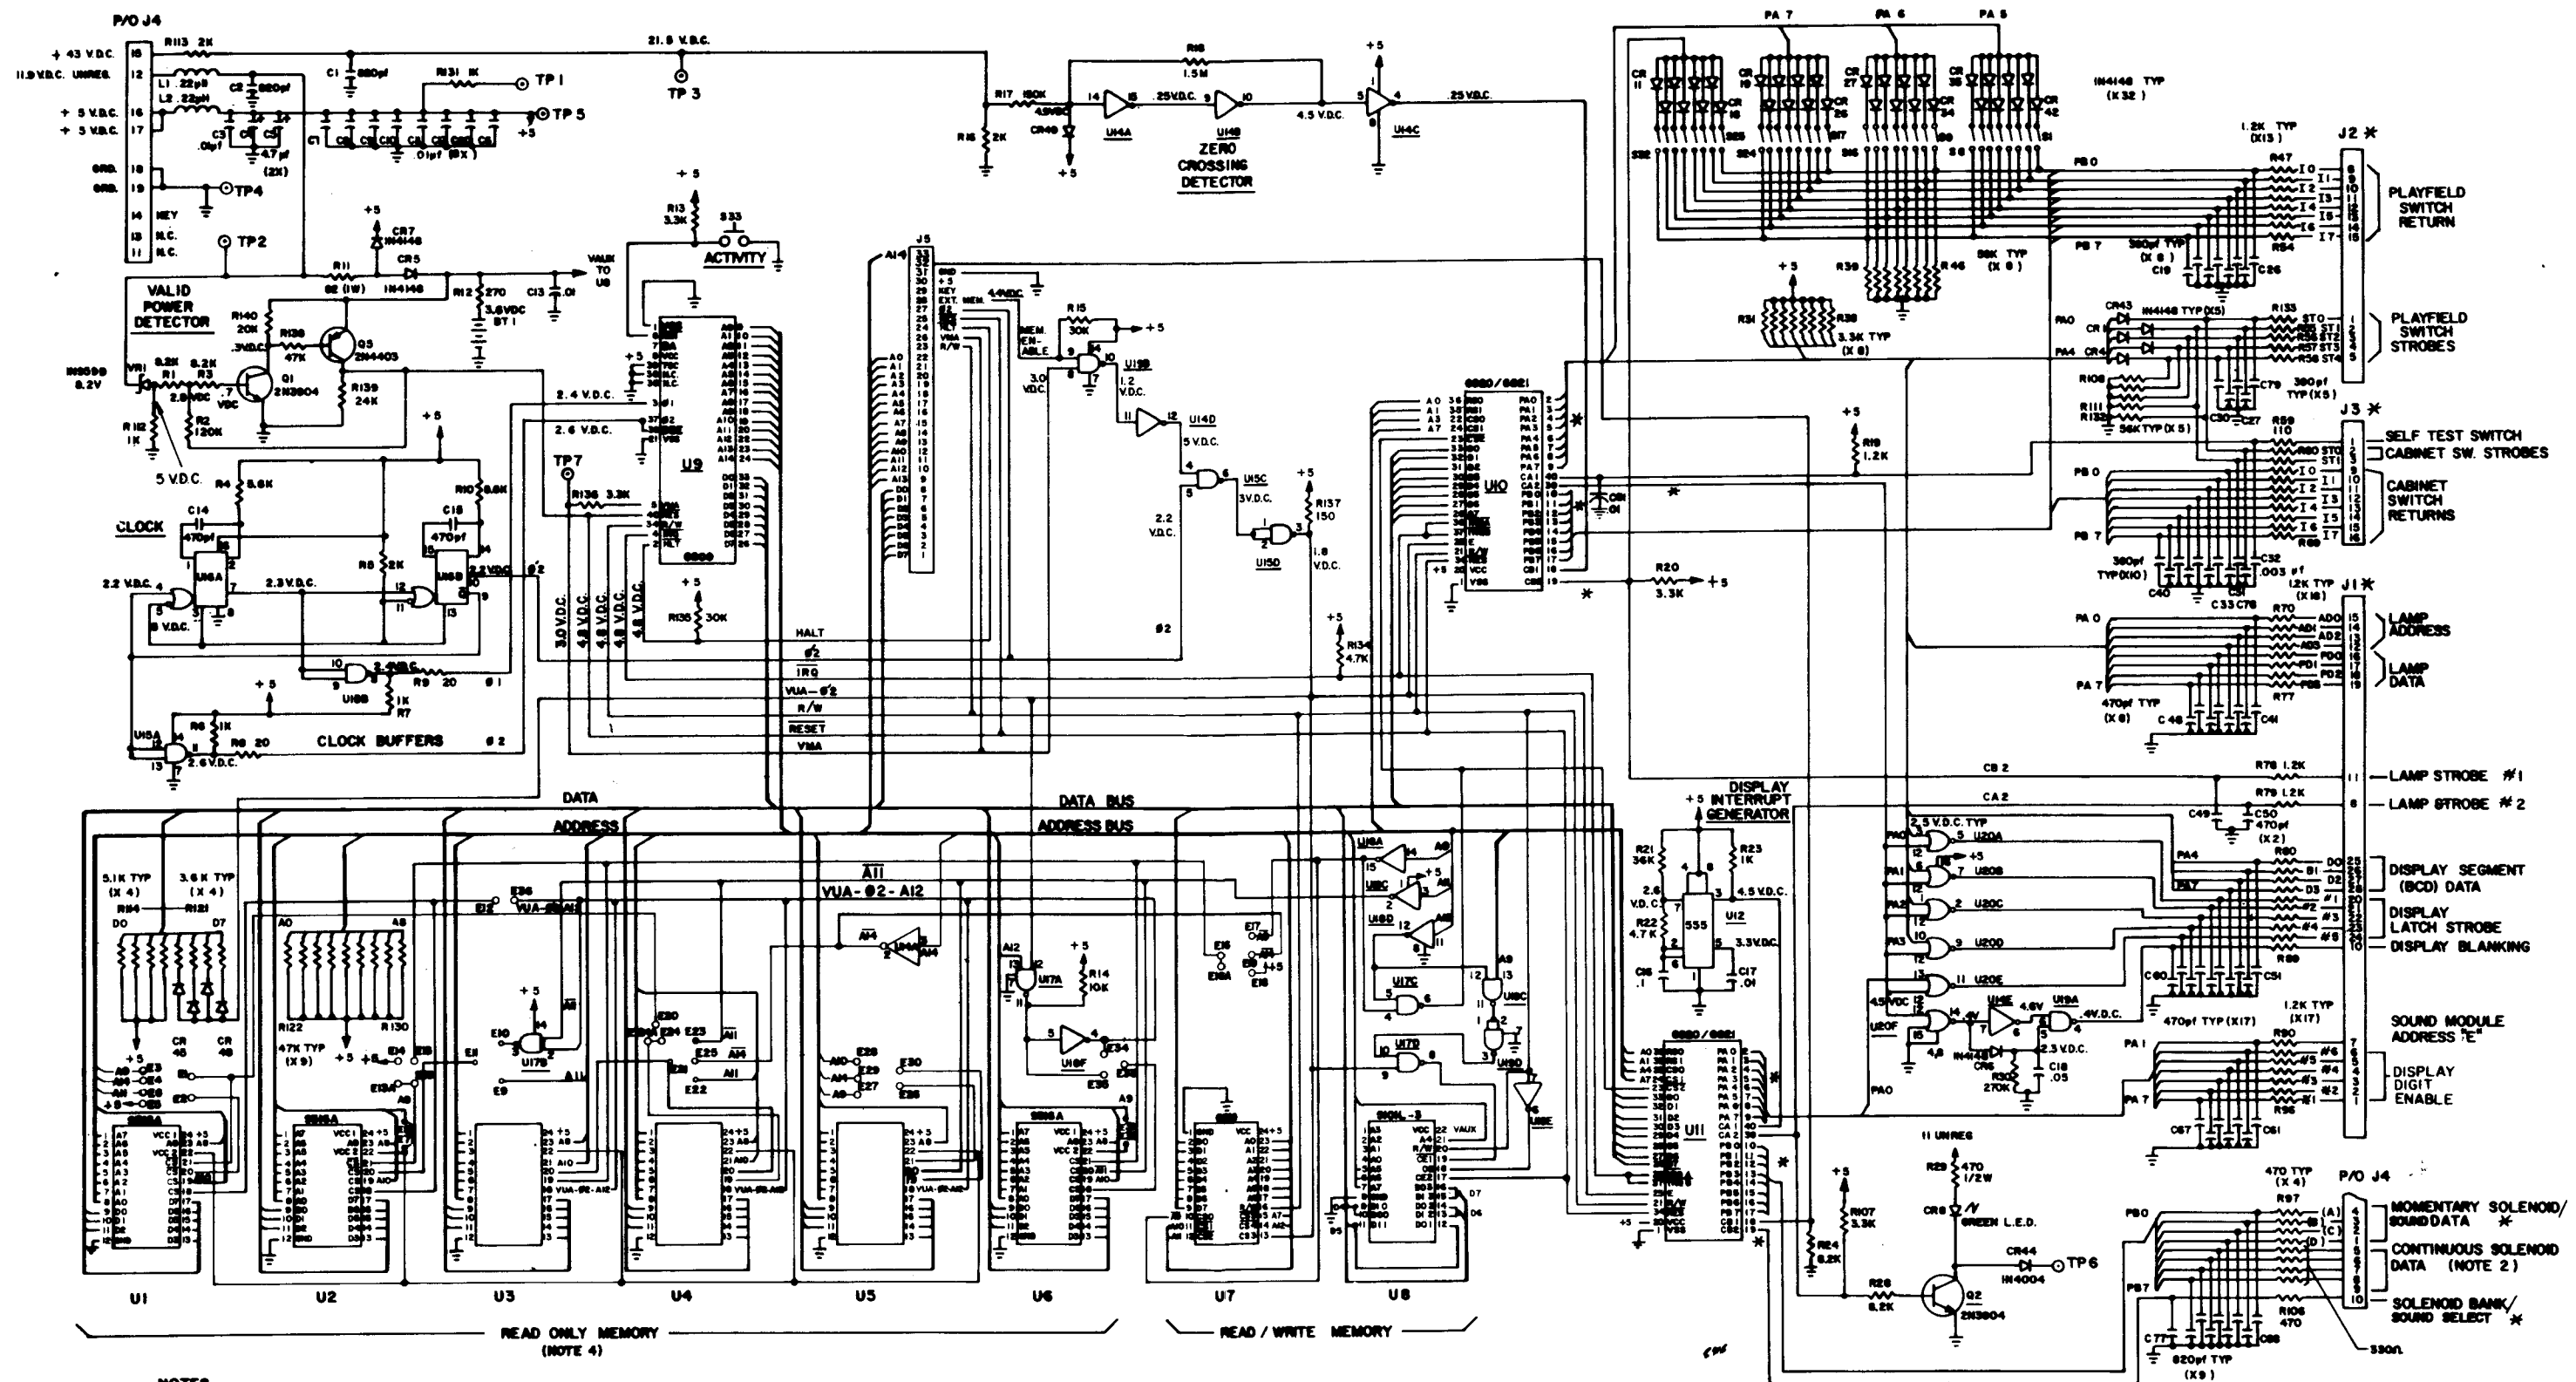


NOTES

1. * INDICATES "AID" TEST POINT.
2. REMOVE A3J4 BEFORE USING AS AID TEST POINT
3. PREFIX ALL REFERENCE DESIGNATIONS WITH "A4"
4. EXACT CHIP COMPLEMENT USED IN SOCKETS U1 THRU U8 CAN VARY FOR DIFFERENT GAMES AND PRODUCTION LOTS. TABLES OF MEMORY CHIPS AND CORRESPONDING JUMPERS FOR DIFFERENT GAMES AVAILABLE FROM BALLY FIELD SERVICE DEPARTMENT.

REMOVE ALL JUMPS TELEPHONE OR ADDRESS ONLY OTHERWISE SPECIFIED FRACTIONS: 1/64 DECIMALS: .001 ANGLES: °		DATE 5-11-78 BY J. S. J.	DATE 5-12-78 BY J. S. J.	CHECKED J. S. J.	APPROVED J. S. J.	TITLE M.P.U. CONTROL BOARD SCHEMATIC	PART NO. W-1181-3c
100% TEST SCALE DRAWING		100% TEST SCALE DRAWING		100% TEST SCALE DRAWING		100% TEST SCALE DRAWING	

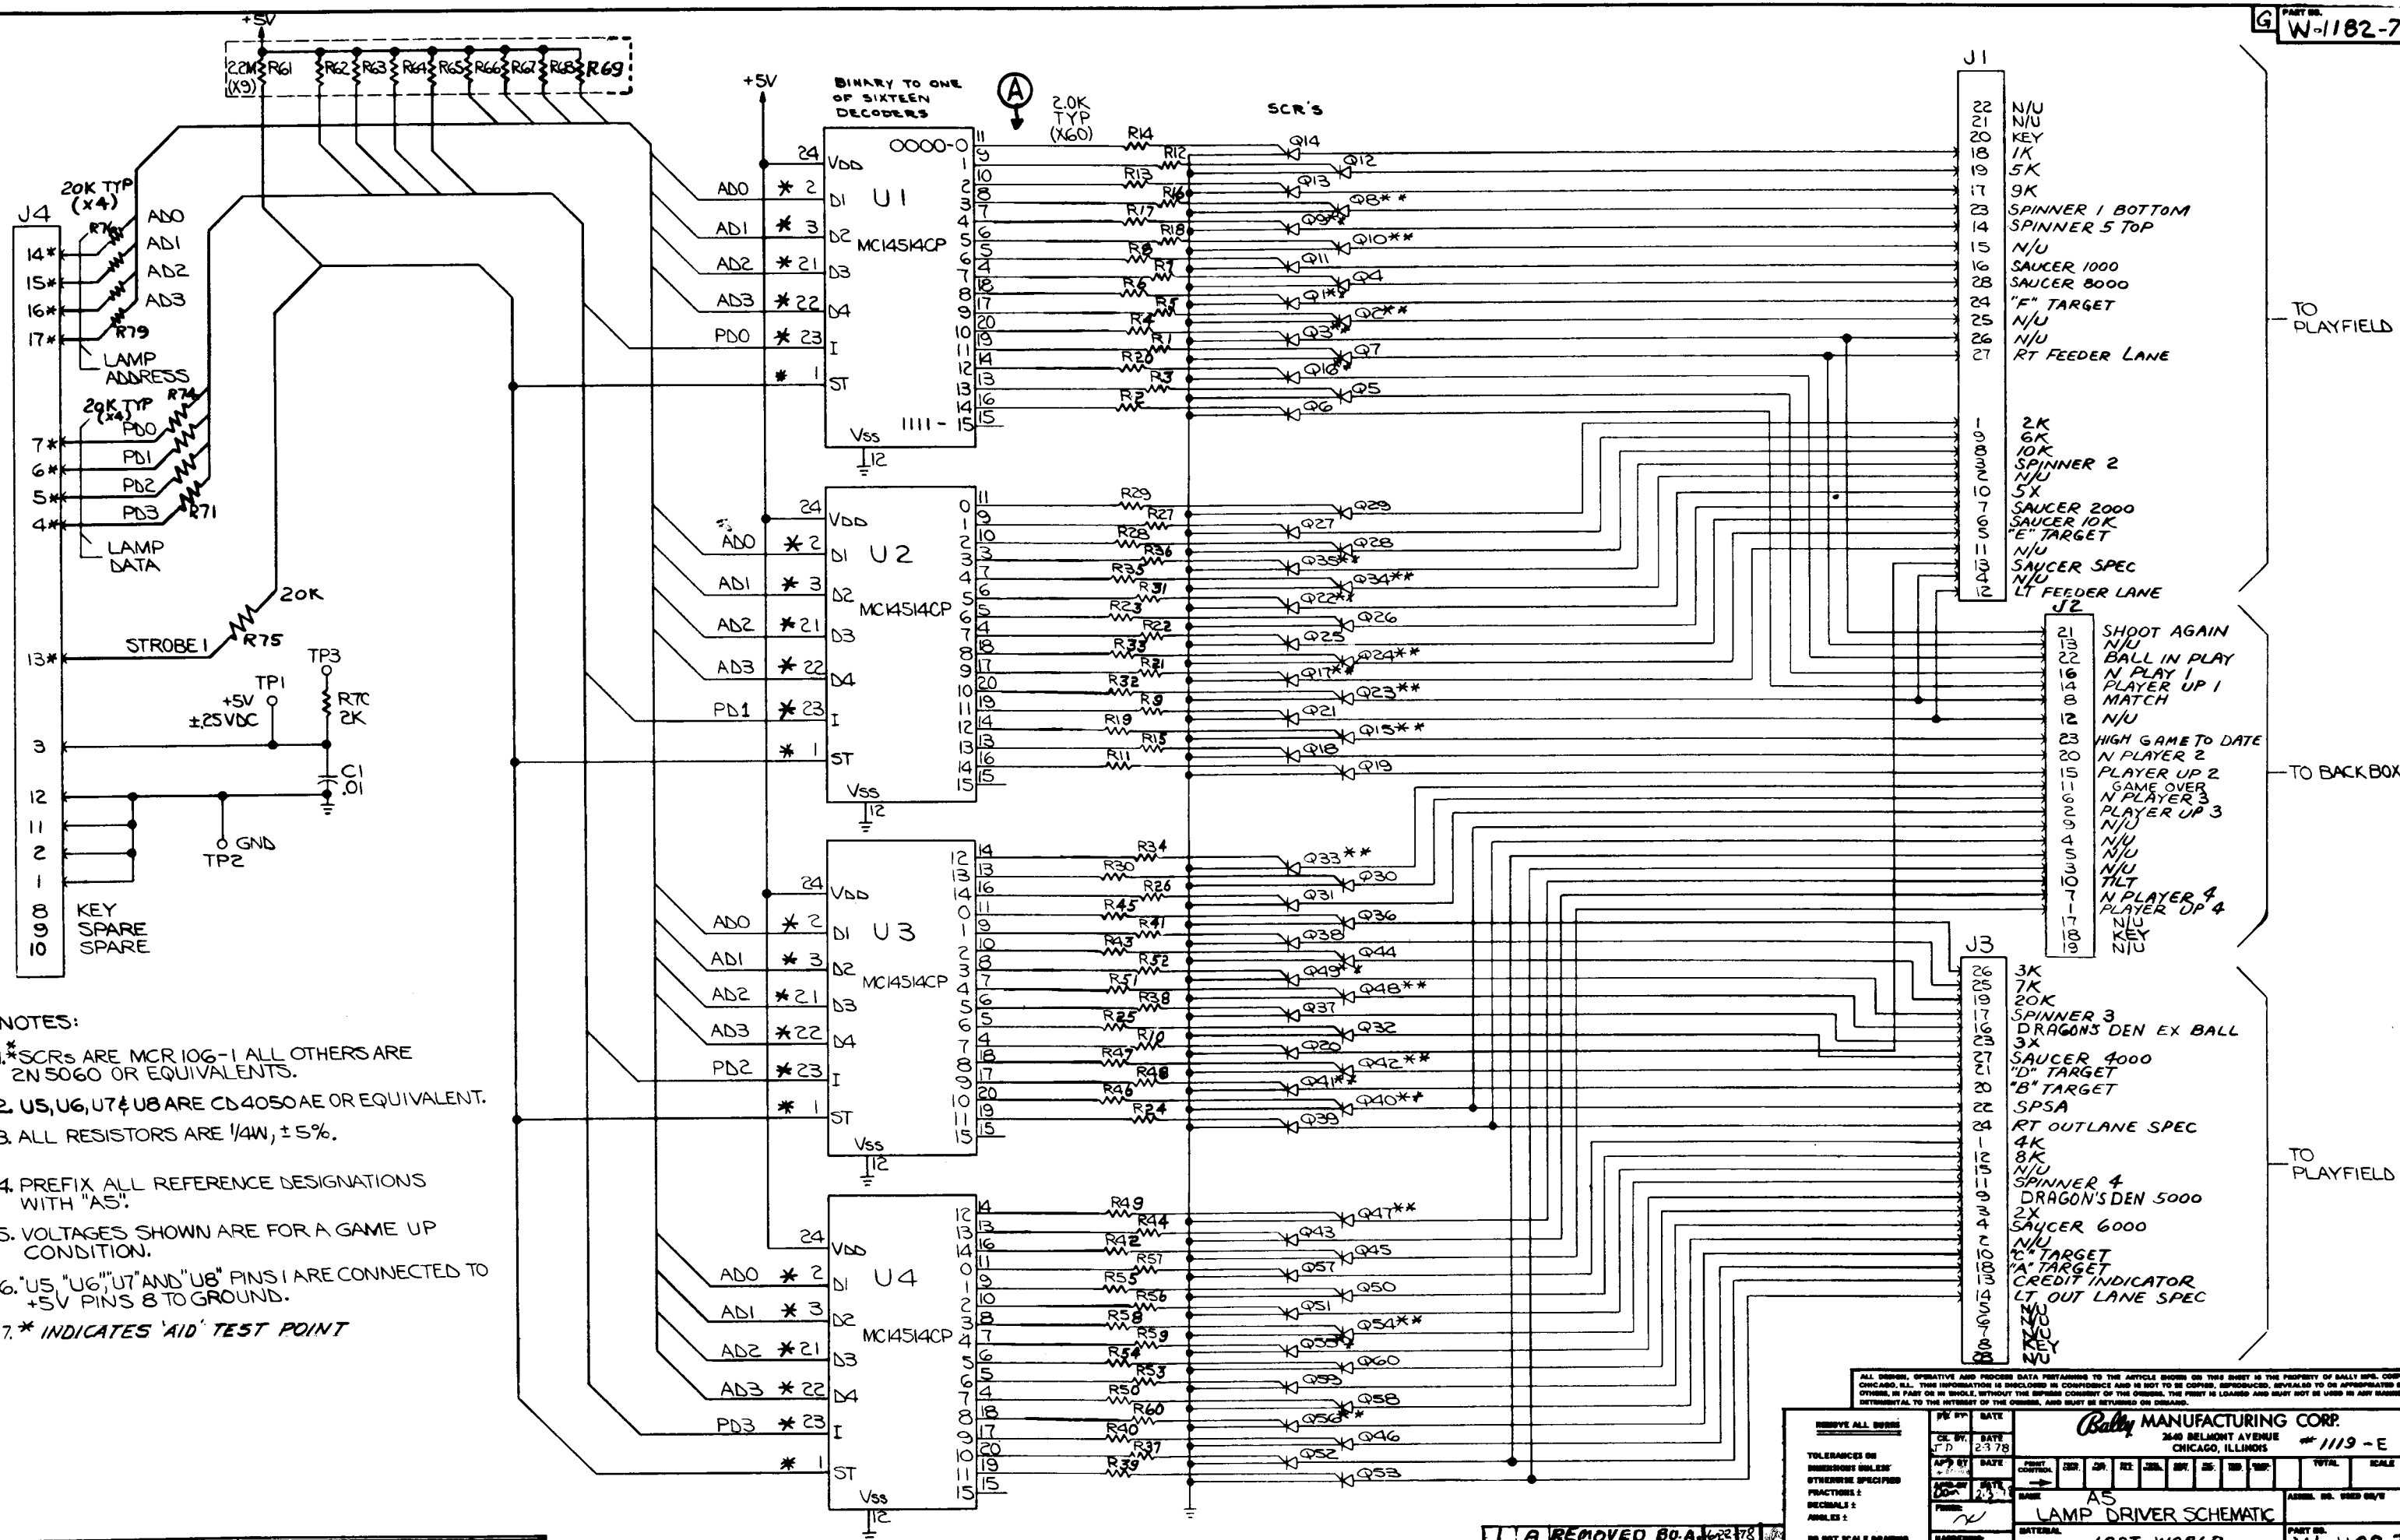

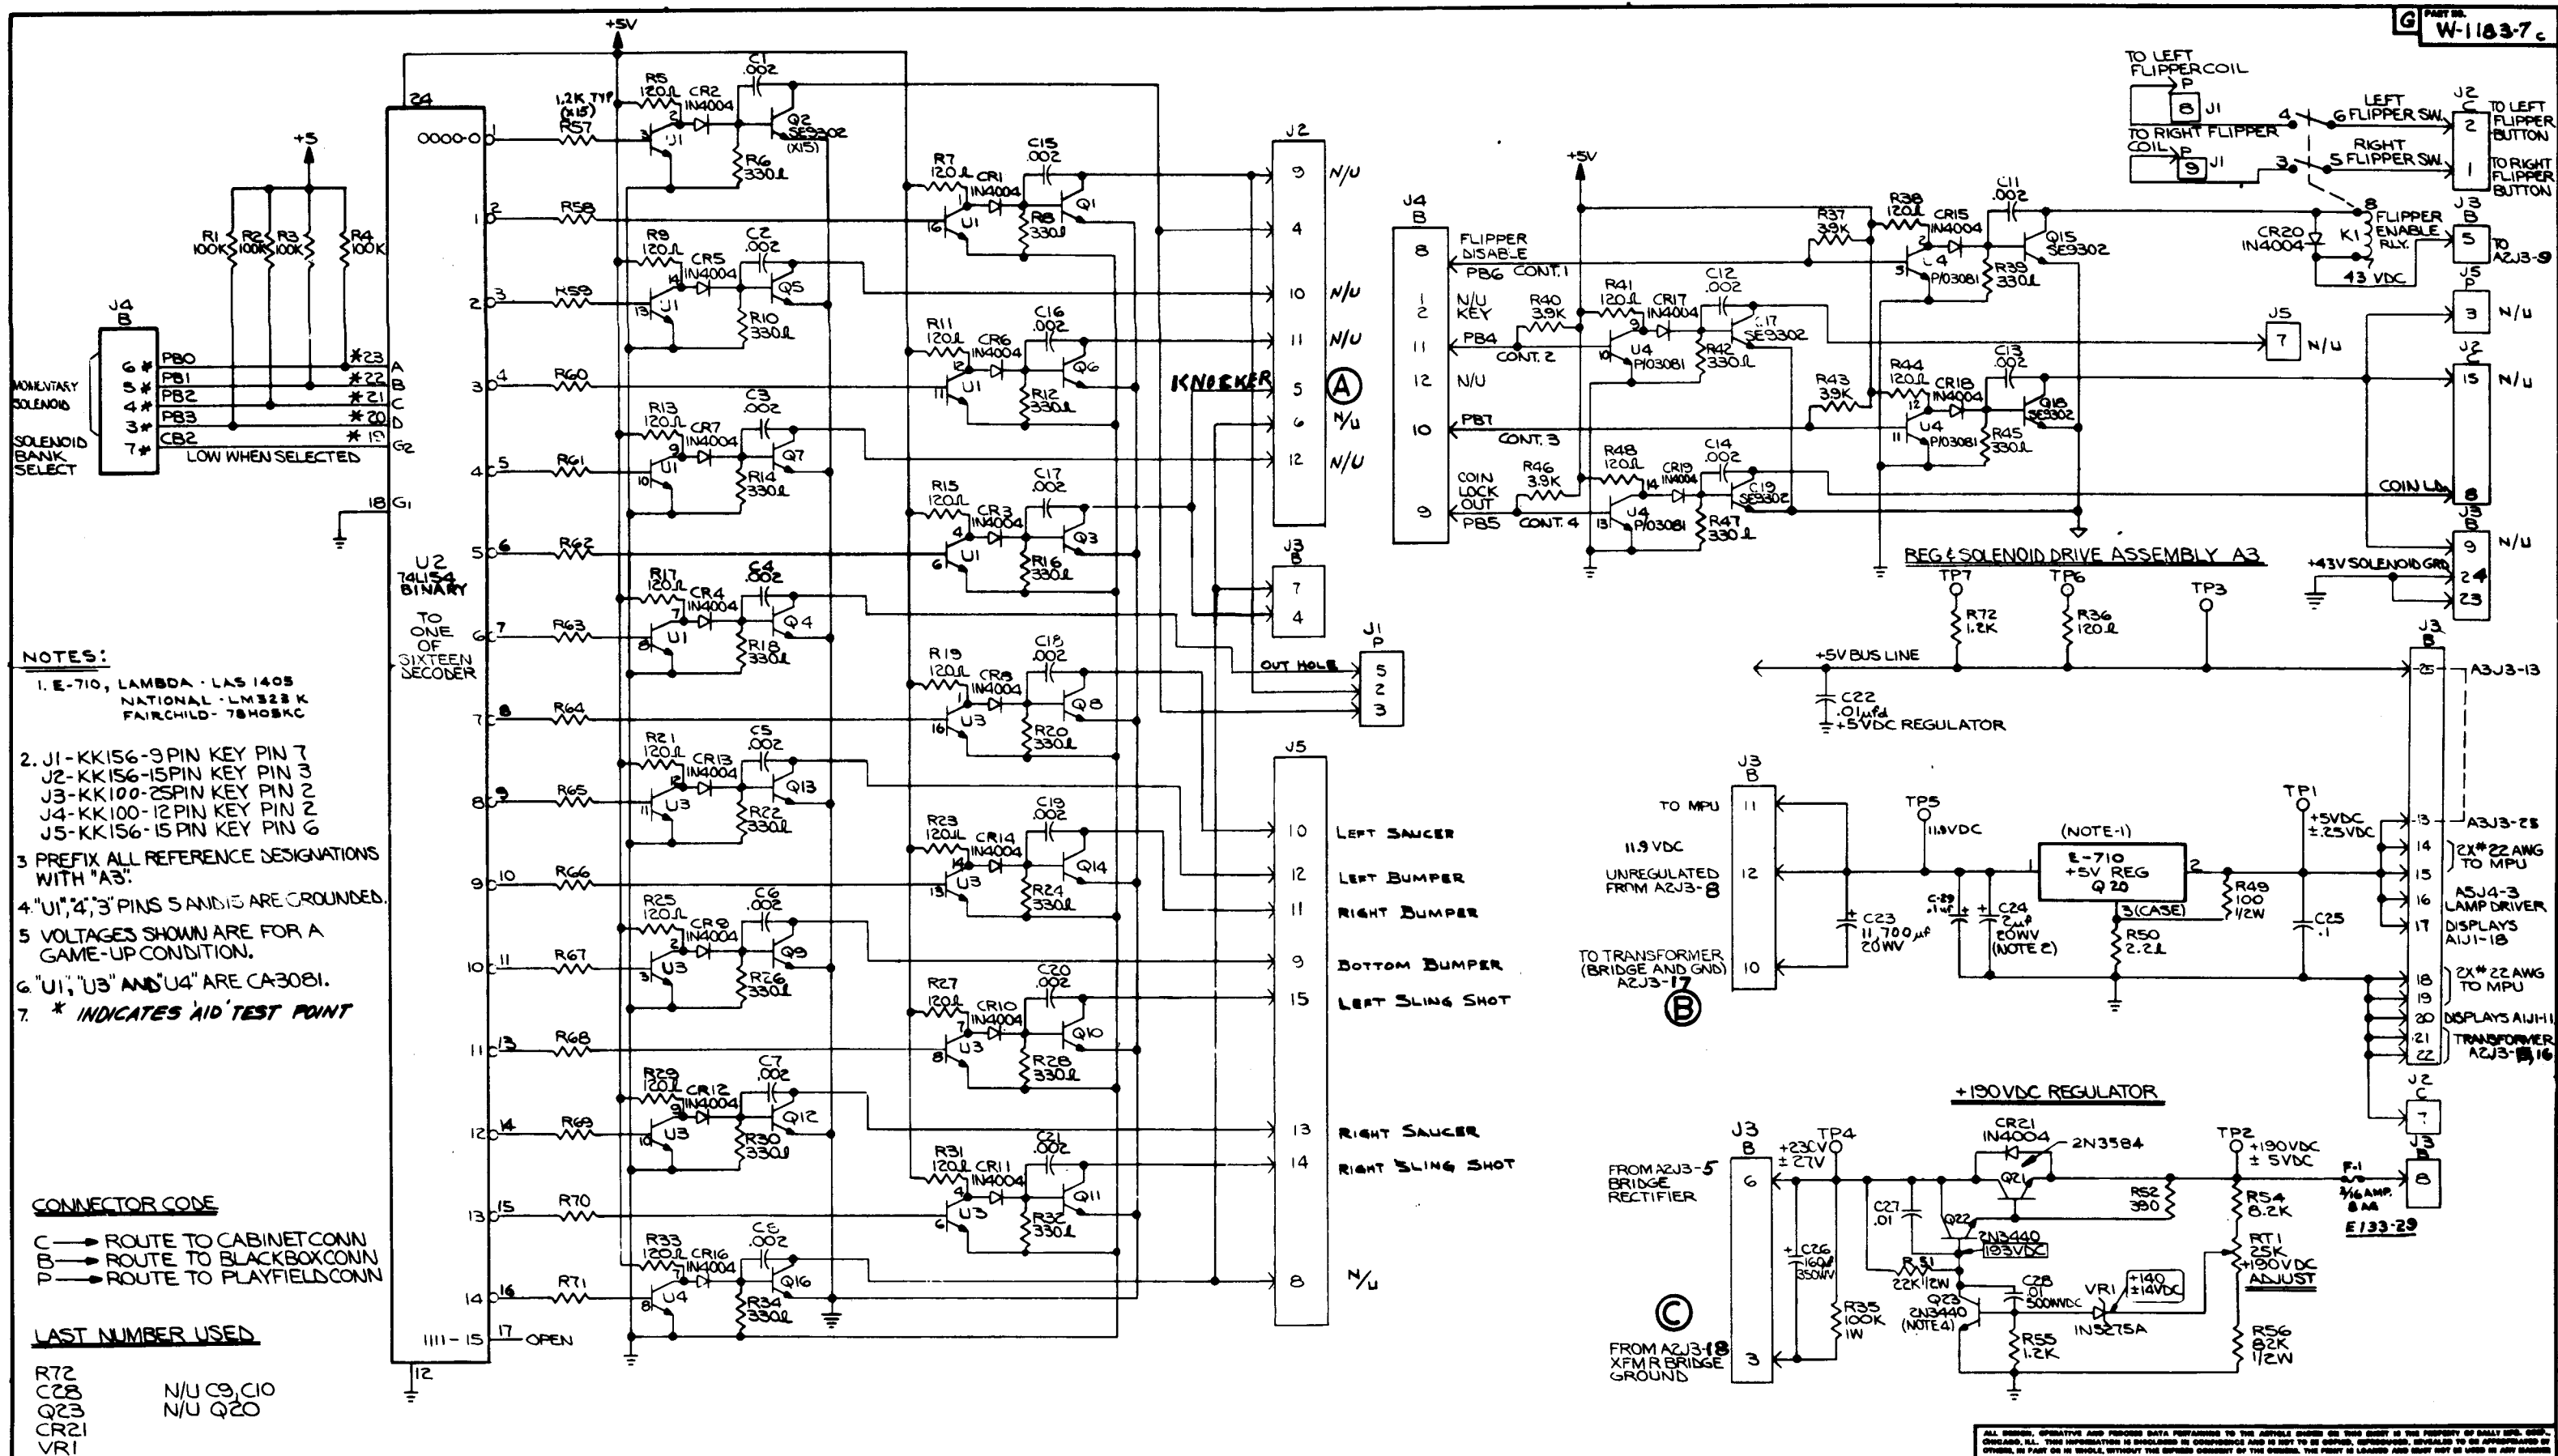


ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF DAILY LIFE, COO. CHICAGO, ILL. THIS INFORMATION IS ENCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNER. THE FIRM IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNER, AND MUST BE RETURNED ON DEMAND.

RECEIVE ALL QUOTE		PQ. BY DATE		<i>Bally</i> MANUFACTURING CORP. 2648 BELMONT AVENUE CHICAGO, ILLINOIS #119-E											
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		CH. BY DATE		24-000-0000 2-17-76											
FRACTIONS 2		APPRO. BY DATE		24-000-0000 2-17-76											
DECIMALS 2		APPRO. BY DATE		24-000-0000 2-17-76											
ANGLES 2		FINDER		24-000-0000 2-17-76											
DO NOT SCALE DIMENSIONS		REVISIONS		24-000-0000 2-17-76											

R-51 22KO 1/2W

3	C	CORRECTED A253-17 TO 10
2	B	CORRECTED A253-16 TO 17
1	A	MOVED J3-B-4 TO J2-5

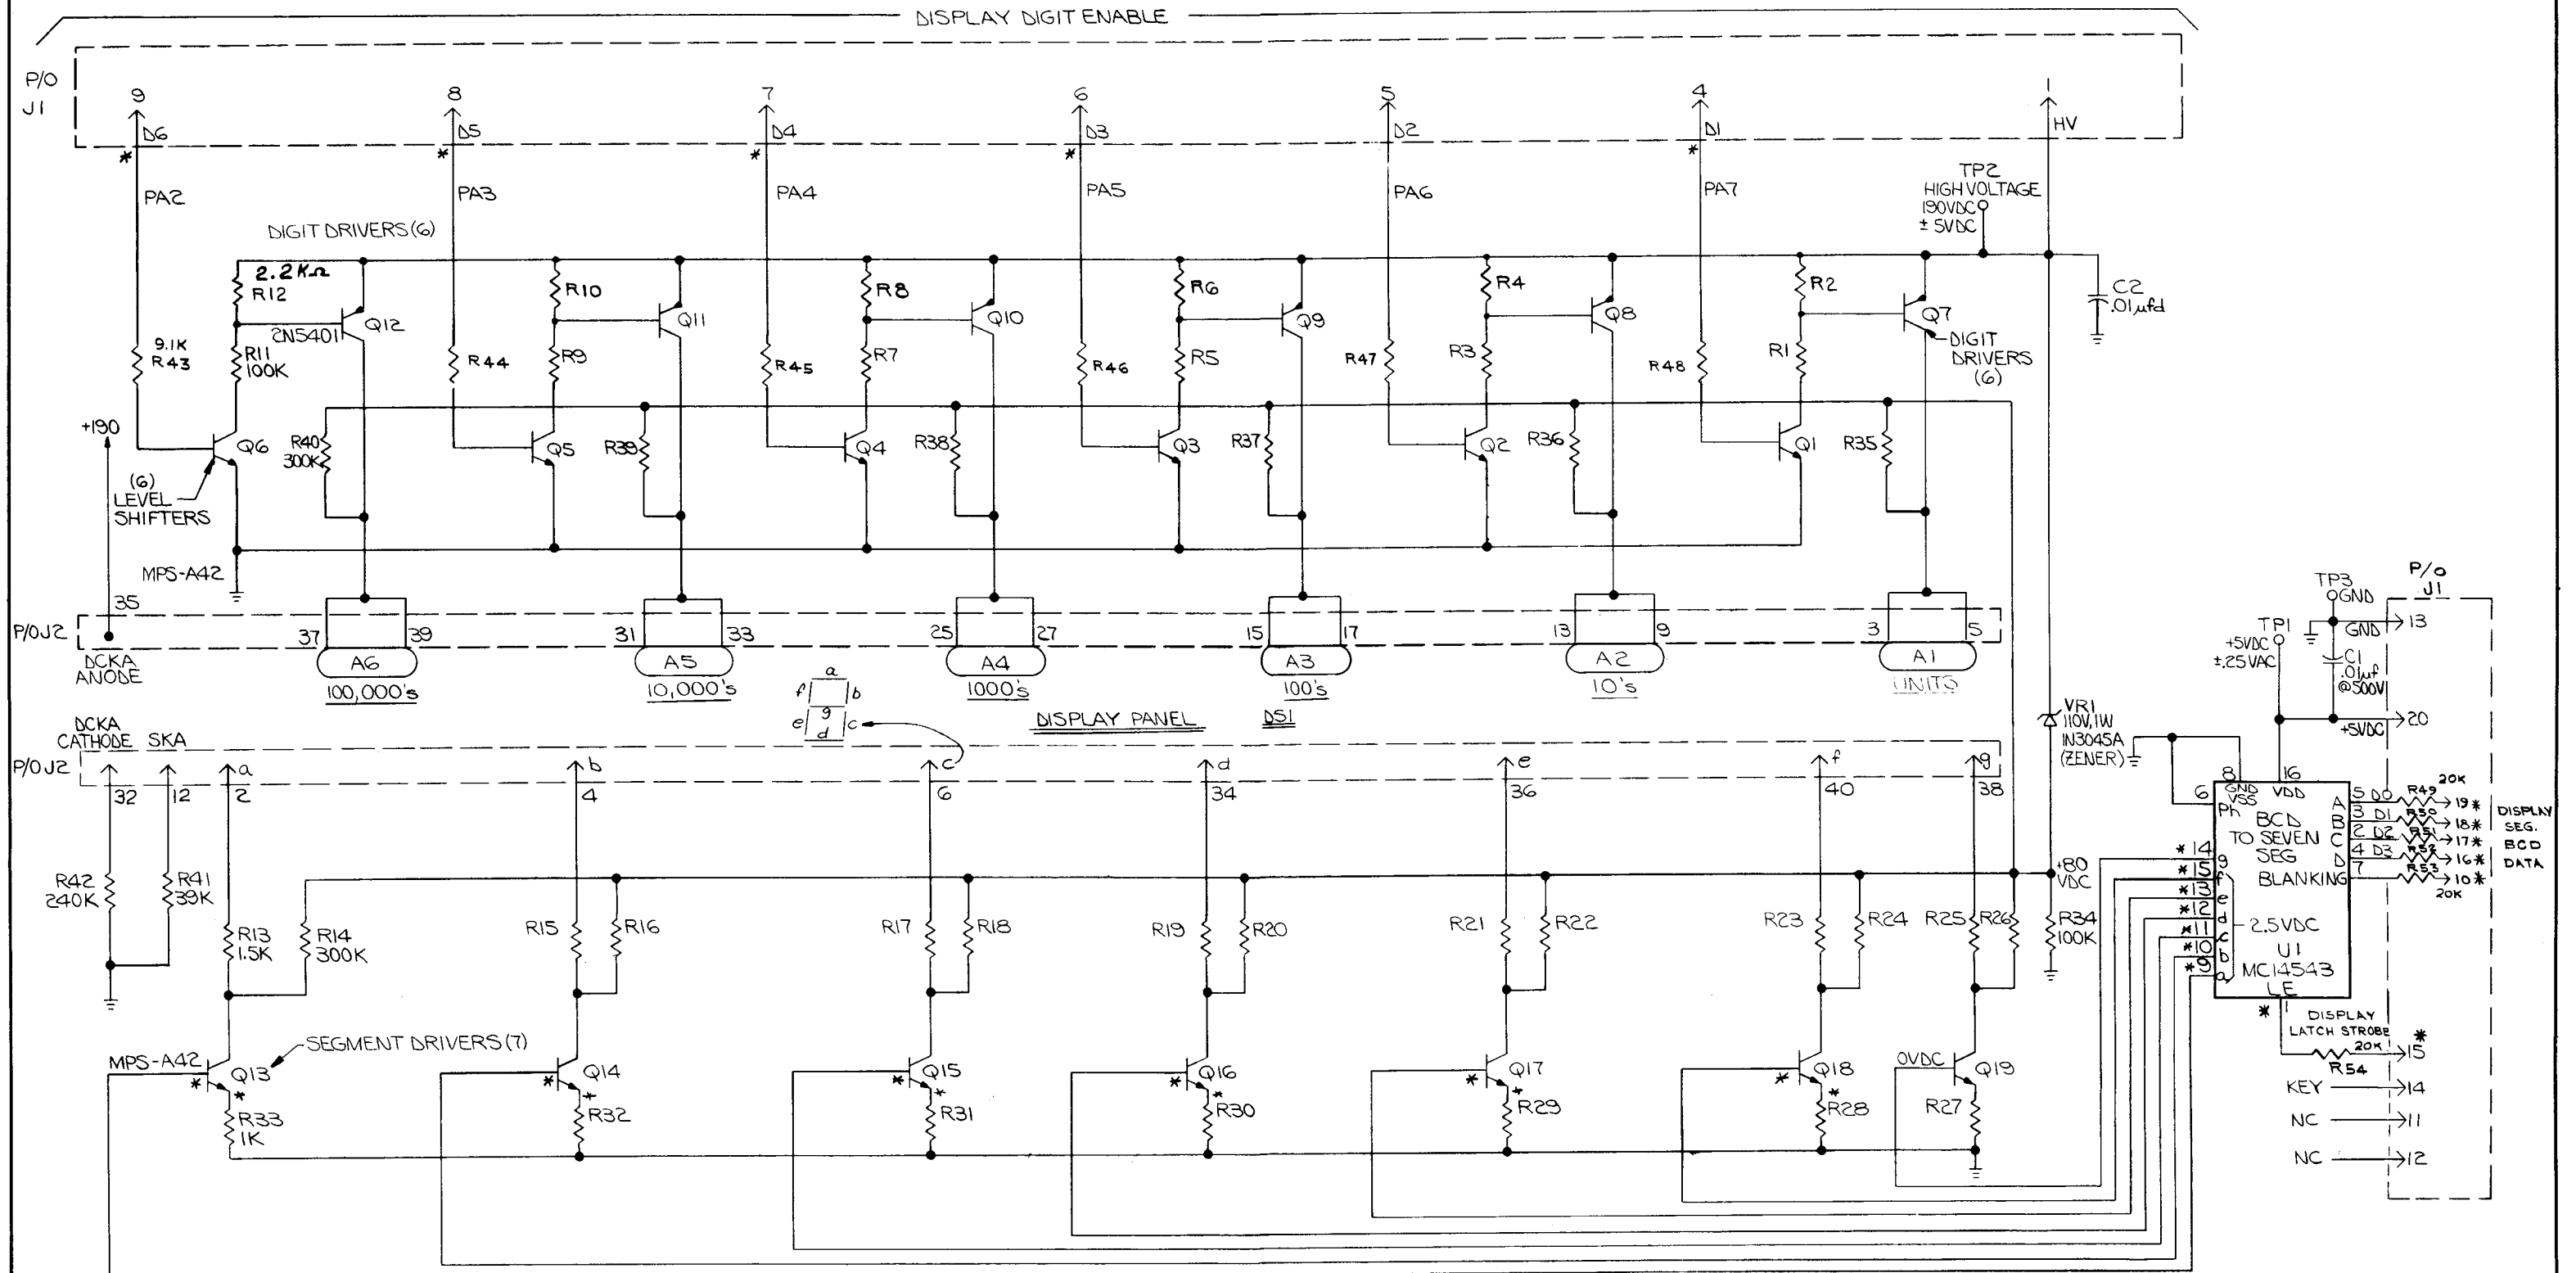

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL RESISTORS ARE $\pm 5\%$, $1/4W$.
2. PREFIX ALL REFERENCE DESIG. WITH ASSEMBLY REFERENCE DESIG. "A1"
3. * INDICATES 'AID' TEST POINT.

DIE SIZE — C.C. — FT. PER M — LBS. PER M —


ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF RALLY MFG. CORP., CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURRS		DR. BY DATE D.G. 7/22/72		RALLY MANUFACTURING CORP. #1120-E 2640 BELMONT AVENUE CHICAGO, ILLINOIS ALL NOVELTIES	
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		CR. BY DATE D.G. 7/28/72		PRINT CONTROL	
FRACTIONS: DECIMALS: ANGLES:		DATE BY DATE 10/14/77		ZSR. JDR. RZ. ZSR. SBT. SS. SBT. SBT.	
DO NOT SCALE DRAWING		DATE BY DATE 10/14/77		NAME	
		HARDENING		MATERIAL	
				ASSEMB. NO. USED ON/7	
				AS-2518-21	
				PART NO.	
				W-1184-1c	

OPER.	DEPT.	DESCRIPTION	TOOL No.
-------	-------	-------------	----------

NO.	LET.	CHANGE	DATE	BY	CK.
-----	------	--------	------	----	-----

TRANSFORMER ASSEMBLY A2

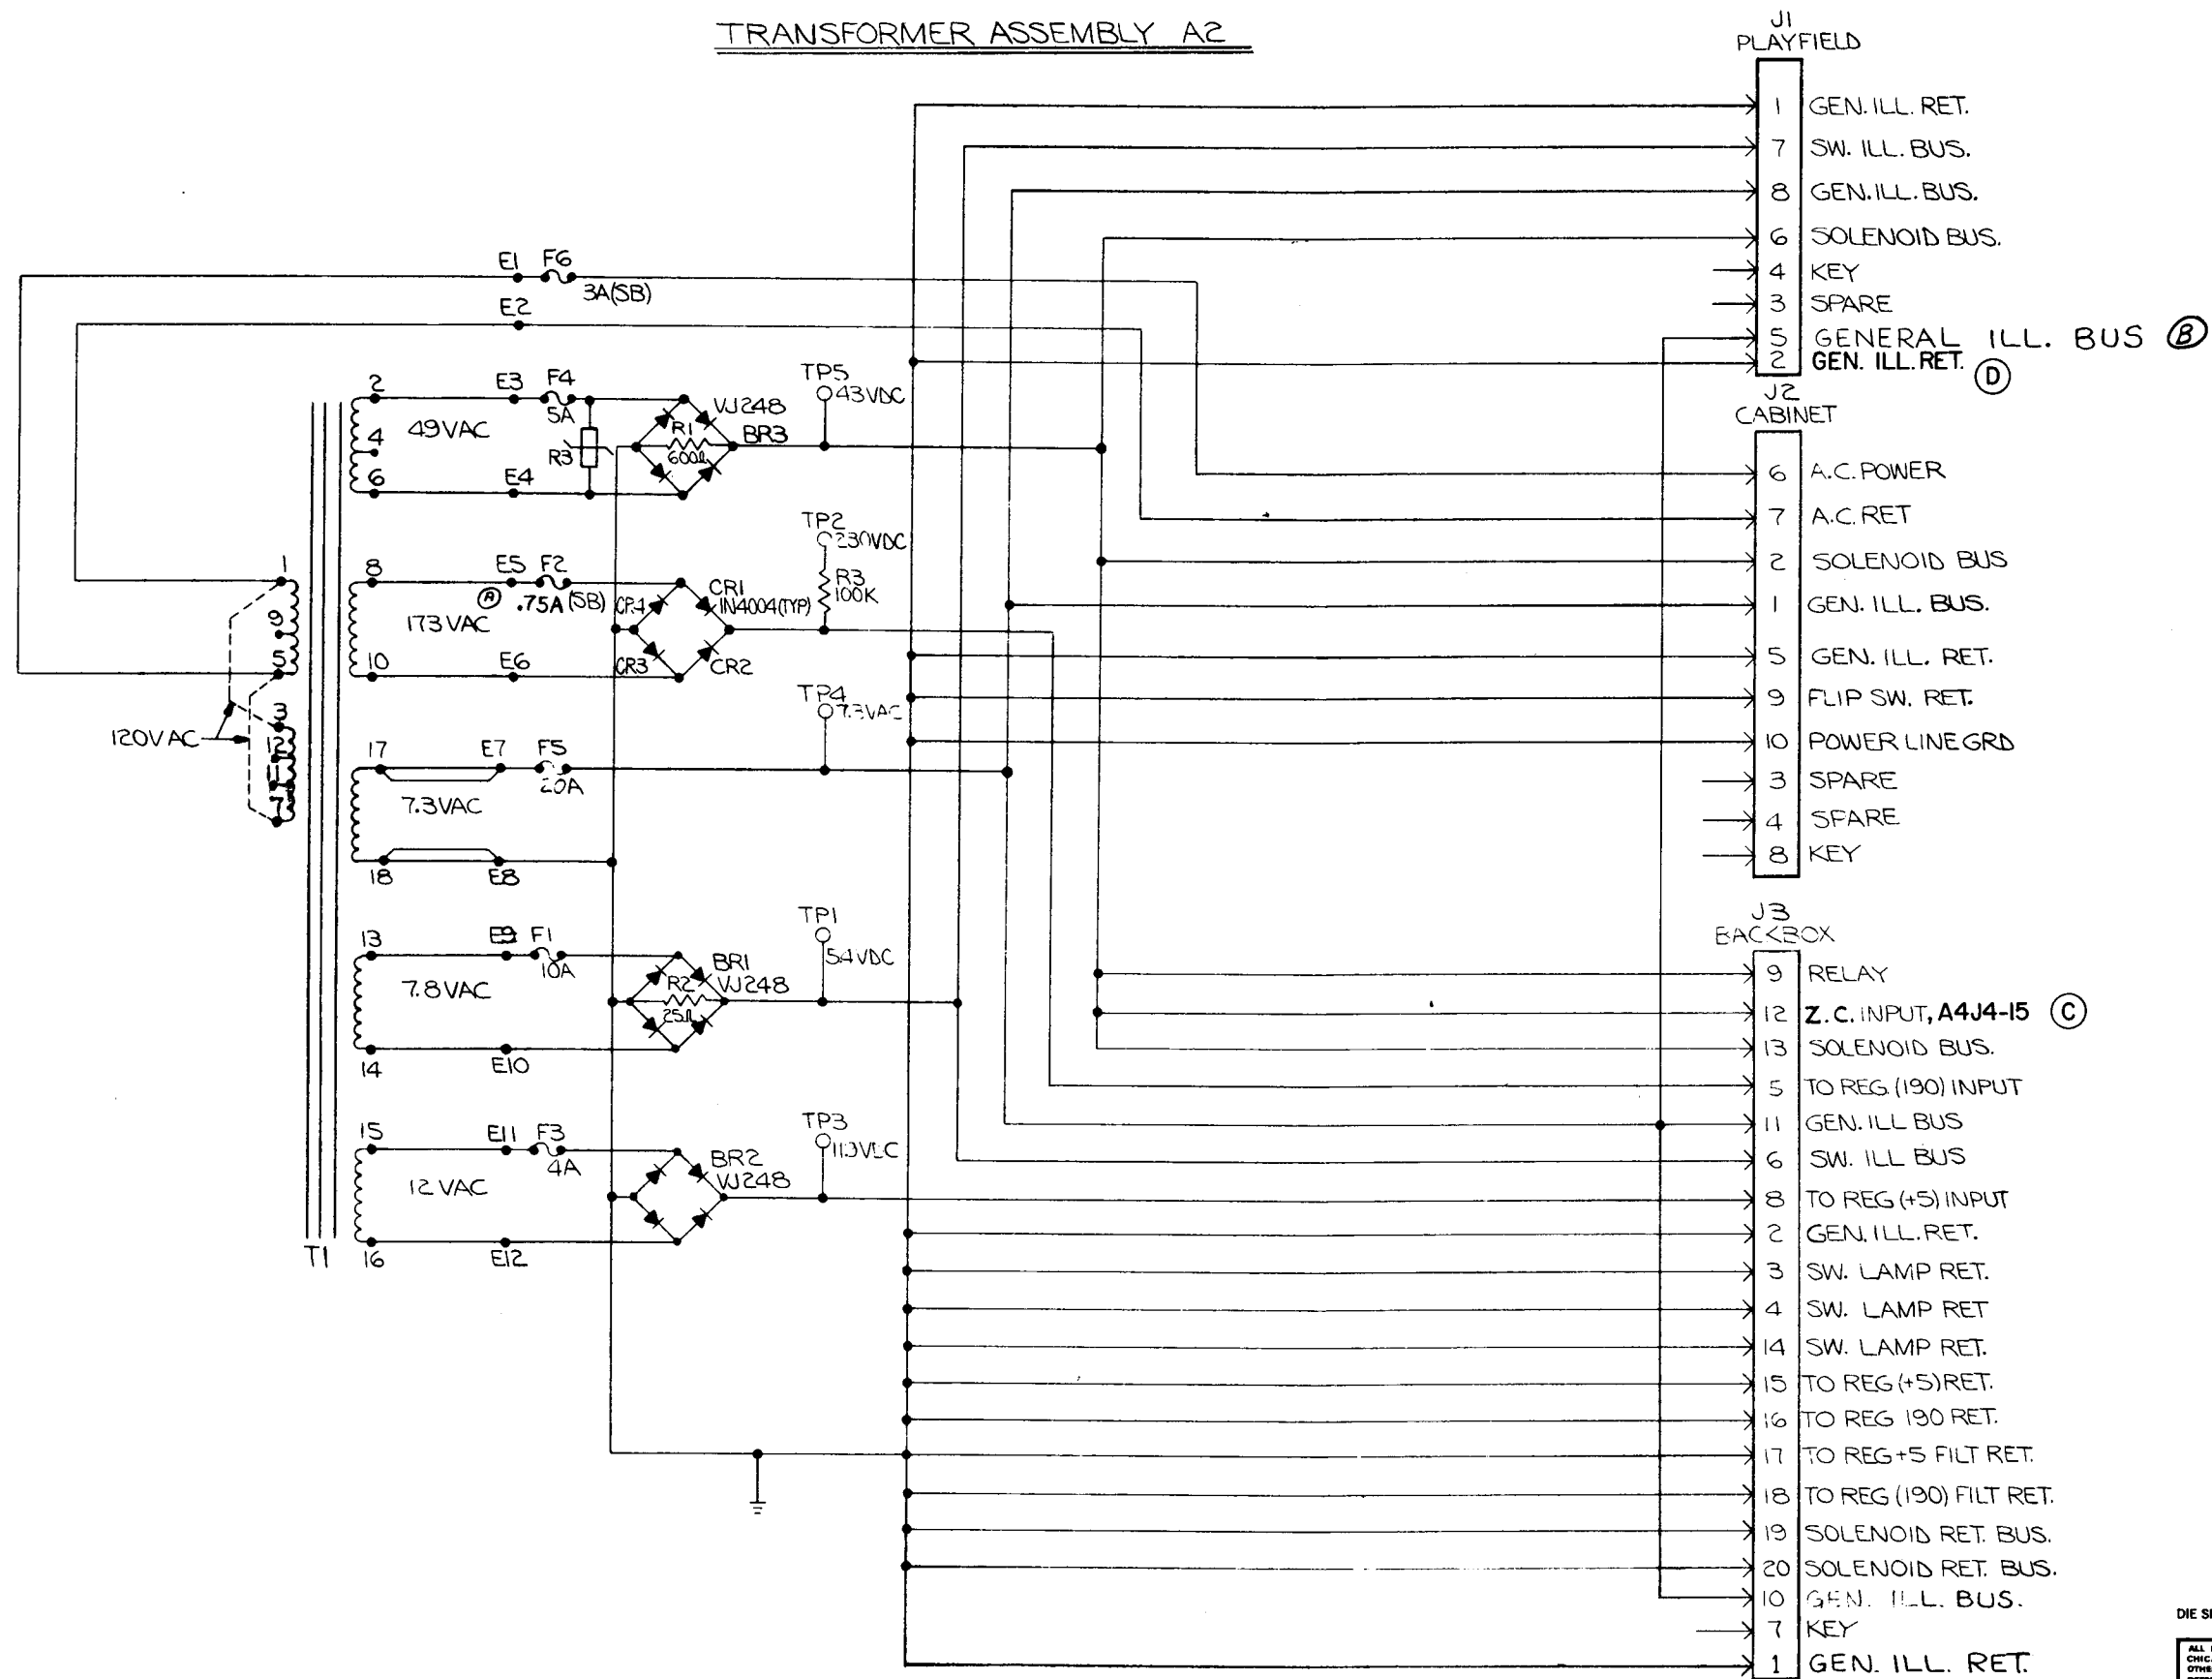

- NOTES:
1. WIRE A.C. POWER AND TERMINALS PER TABLE 1.
 2. VOLTAGES SHOWN ARE FOR GAME IN POWER-UP CONDITION.
 3. PREFIX ALL REFERENCE DESIGNATIONS WITH A2.

TABLE 1
POWER LINE CONNECTIONS

LINE VOLTAGE VRMS A.C.	STRAP TERMINALS	APPLY POWER TO TERMINALS
115	1 TO 3 AND 9 TO 11	1 AND 9
120	1 TO 3 AND 5 TO 7	1 AND 5
220	3 TO 5	1 AND 12
240	3 TO 5	1 AND 7

DIE SIZE — C.C. — FT. PER M — LBS. PER M —

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP., CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

1118-F

REMOVE ALL BURRS

TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED

FRACTIONS: 1/16, 1/8, 1/4, 1/2, 3/4, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100



DO NOT SCALE DRAWING

DATE: FEB 21 1977

POWER TRANSFORMER MODULE SCHEMATIC

W-1185-1c

OPER.	DEPT.	DESCRIPTION	TOOL No.
-------	-------	-------------	----------

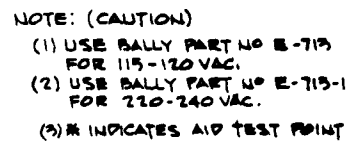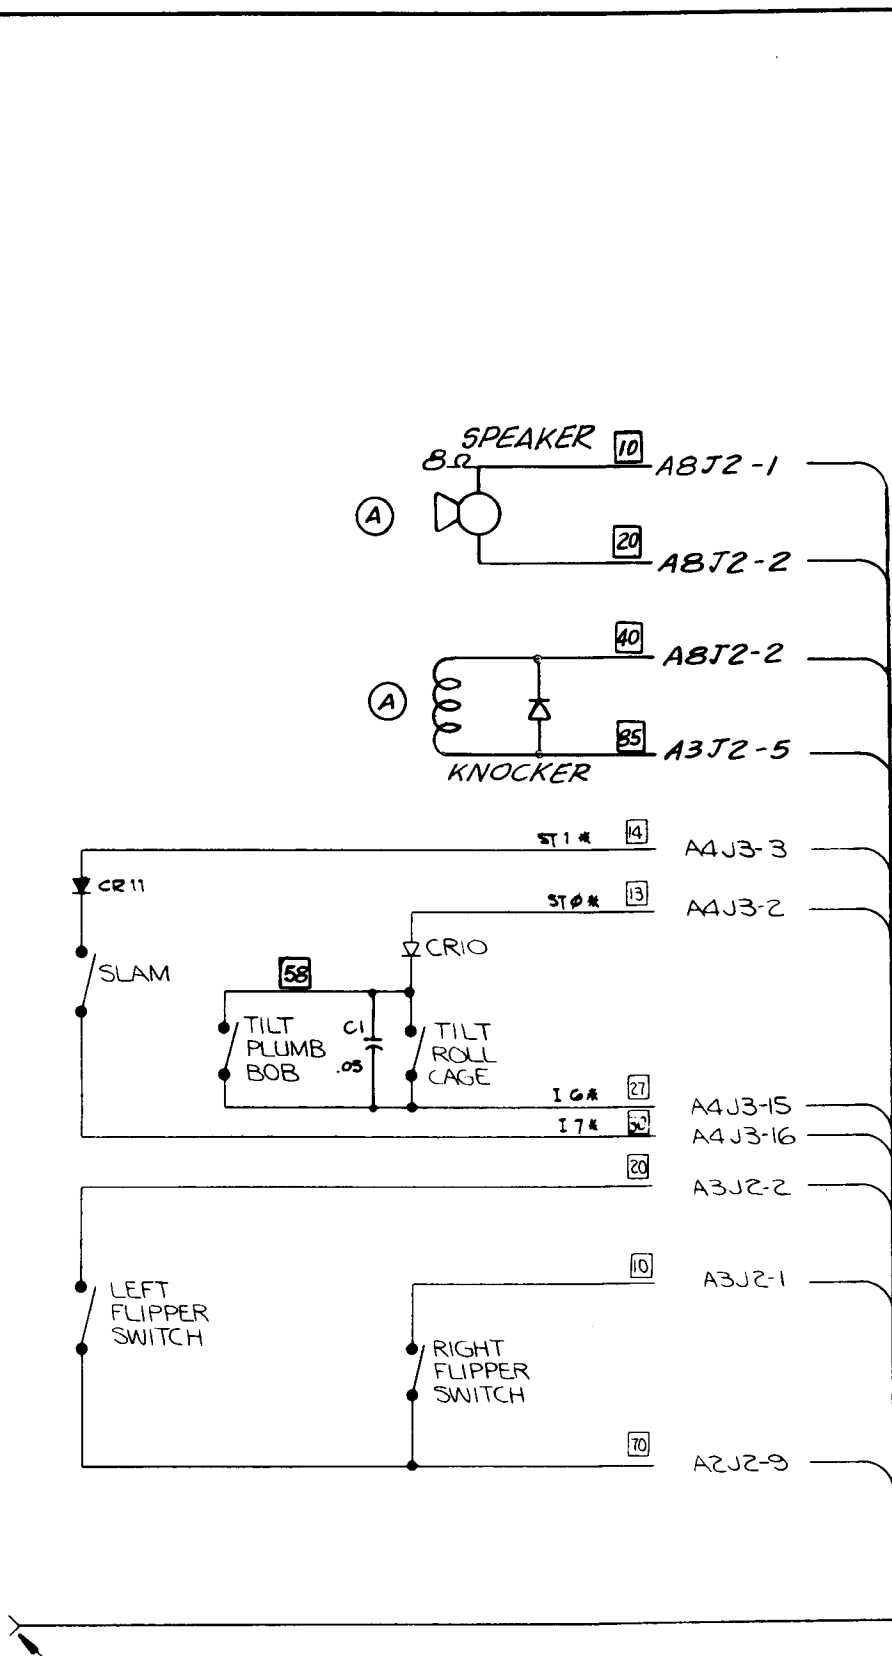

A7 CABINET ASSY. WIRING

NOTE:- DIODES ARE 1N4004, (E-587-6)


REMOVE ALL BURRS		REV. 3/81	DATE		Bally MANUFACTURING CORP.											
		CH BY	DATE		2440 BELMONT AVENUE											
		J.D.	2-3-78		CHICAGO, ILLINOIS											
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		APP'D BY	DATE		POINT CONTROL	2BR	2PR	FT.	2JBL	SPR	2S	2SD	2SP	TOTAL	SCALE	
		APP'D BY	DATE													
FRACTORS ±		DATE	DATE		WIRING DIAGRAM											
DECIMALS ±		DATE	DATE		ELECTRONIC											
ANGLES ±		DATE	DATE		PART NO.											
DO NOT SCALE DRAWINGS		DATE	DATE		W-1106-50											

TABLE A AIJ2


FROM	PIN	WIRE
A5J3-6	1	20
A5J2-14	2	12
A2J3-2	3	50
A2J3-11	4	10
A5J2-23	5	97
A5J2-15	6	32
A5J2-22	7	62
A5J2-8	8	93
A5J2-1	9	60
A5J2-2	10	20
A5J2-11	11	95
A5J2-21	12	47
A5J2-10	13	98
A5J2-7	14	91
A5J2-6	15	85
A5J2-20	16	35
A5J2-16	17	34
A2J3-1	18	40
A2J3-10	19	70
A5J2-13	20	53
A5J2-12	21	61
A5J2-4	22	72
A5J2-3	23	84
	24	

INSERT TO BACK
CABINET PLUG


AI INSERT

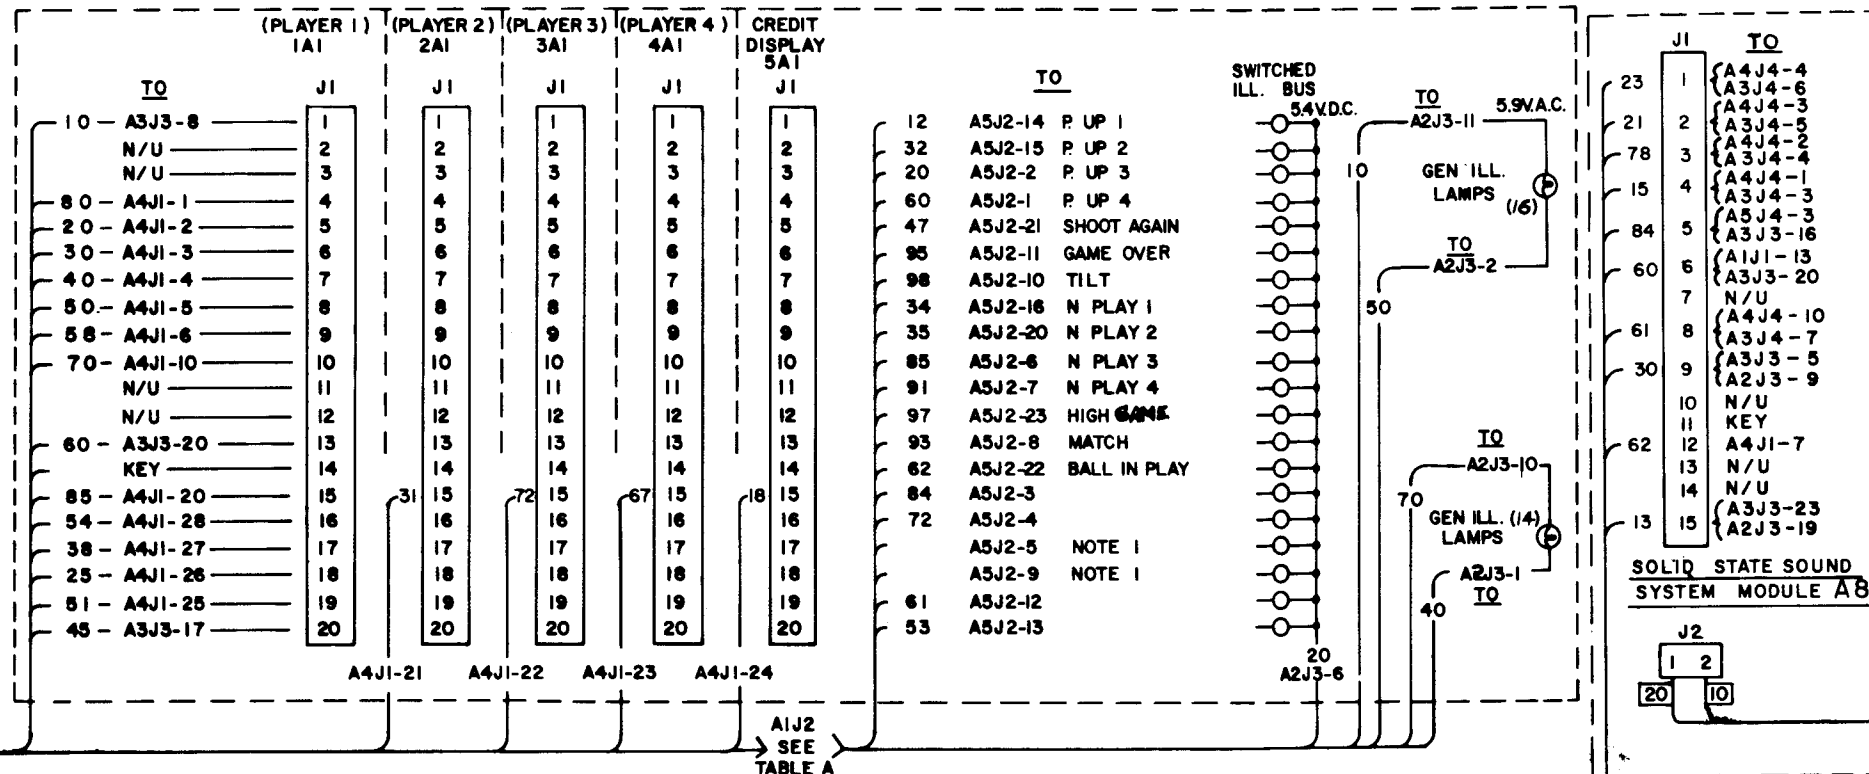


A2 TRANSFORMER

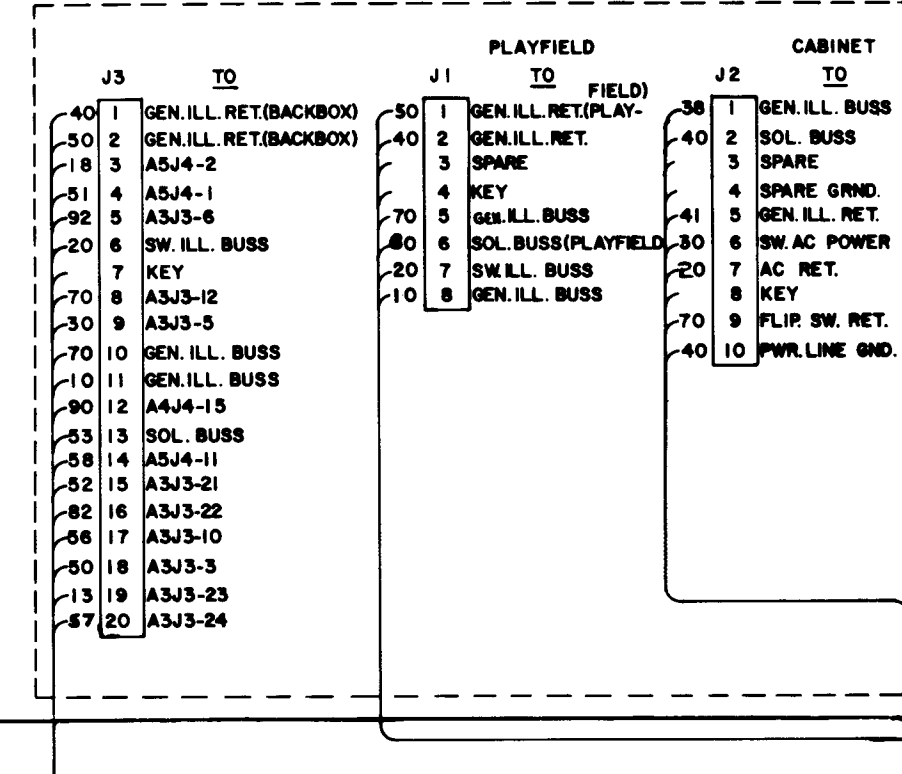


LAMP DRIVER A5

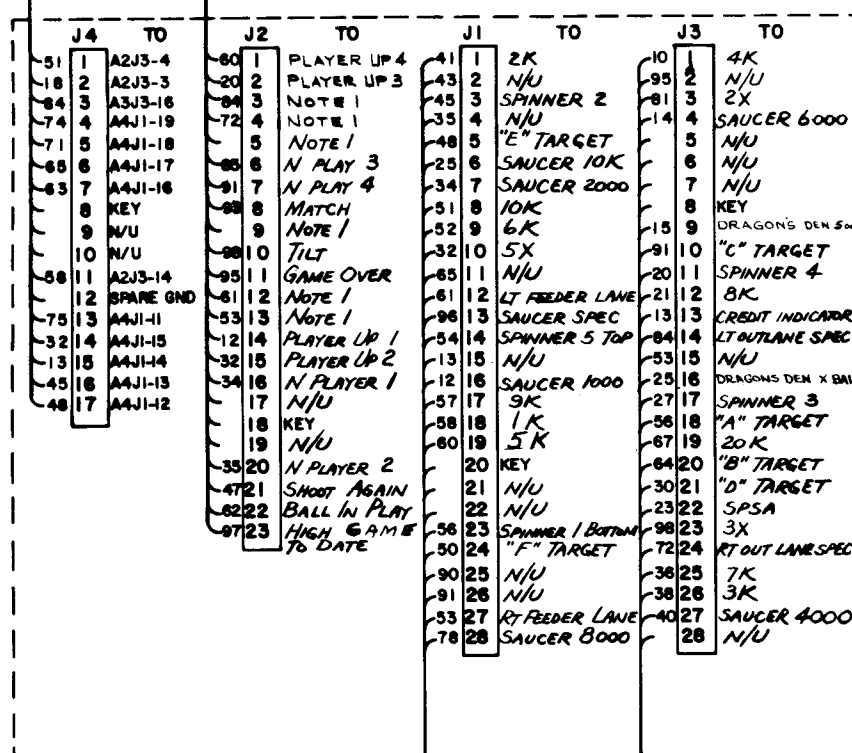

MPU A4

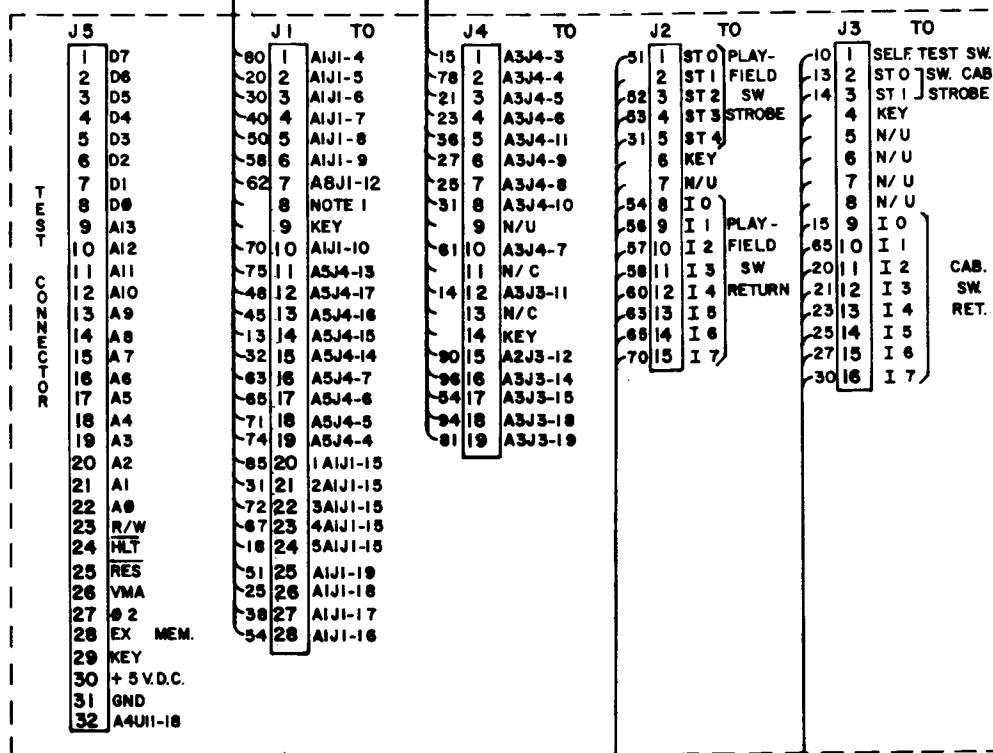

VOLTAGE REGULATOR / SOLENOID DRIVER A3

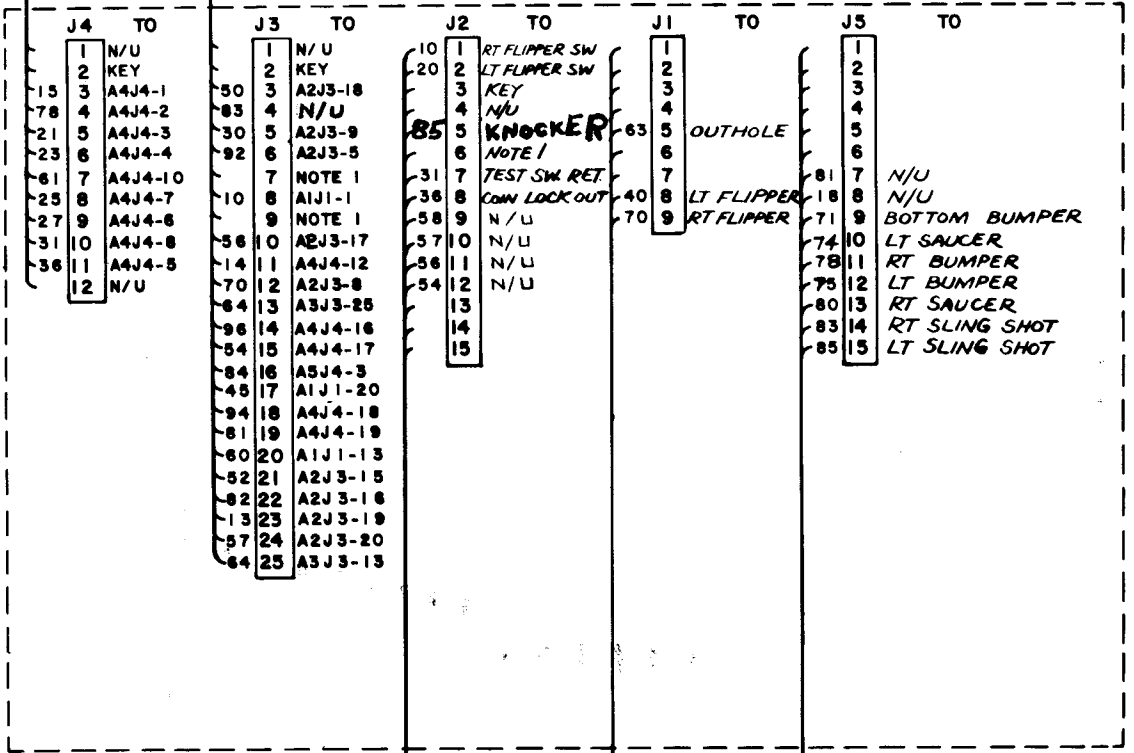

TO CABINET

TO PLAYFIELD




NOTES

1. THESE PINS ARE RESERVED FOR FUTURE USE.
2. WIRE COLORS ARE SHOWN FOR ALL CONNECTOR PINS, SOME WIRES MAY NOT BE USED IN ALL GAMES.
- 3 * INDICATES AID TEST POINT.

WIRE COLOR CODE	
1	WHITE
2	BLACK
3	BROWN
4	RED
5	ORANGE
6	YELLOW
7	GREEN
8	BLUE
9	PURPLE
10	GRAY

1-RED
2-BLUE
3-YELLOW
4-GREEN
5-WHITE
6-BROWN
7-ORANGE
8-BLACK
9-GRAY
0-NO TRACE

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CO. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THIS OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.				DR. BY		DATE	
				CR. BY		DATE	
				3-D		2-3-78	
				AP'D BY		DATE	
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED FRACTIONS - 1/64 DECIMALS - .006 ANGLES - °				"FIRST CONTROL"		P001 P002 J001 J002 J003 J004 J005 J006 J007 J008 J009 J010 J011 J012 J013 J014 J015 J016 J017 J018 J019 J020 J021 J022 J023 J024 J025 J026 J027 J028 J029 J030 J031 J032 J033 J034 J035 J036 J037 J038 J039 J040 J041 J042 J043 J044 J045 J046 J047 J048 J049 J050 J051 J052 J053 J054 J055 J056 J057 J058 J059 J060 J061 J062 J063 J064 J065 J066 J067 J068 J069 J070 J071 J072 J073 J074 J075 J076 J077 J078 J079 J080 J081 J082 J083 J084 J085 J086 J087 J088 J089 J090 J091 J092 J093 J094 J095 J096 J097 J098 J099 J100 J101 J102 J103 J104 J105 J106 J107 J108 J109 J110 J111 J112 J113 J114 J115 J116 J117 J118 J119 J120 J121 J122 J123 J124 J125 J126 J127 J128 J129 J130 J131 J132 J133 J134 J135 J136 J137 J138 J139 J140 J141 J142 J143 J144 J145 J146 J147 J148 J149 J150 J151 J152 J153 J154 J155 J156 J157 J158 J159 J160 J161 J162 J163 J164 J165 J166 J167 J168 J169 J170 J171 J172 J173 J174 J175 J176 J177 J178 J179 J180 J181 J182 J183 J184 J185 J186 J187 J188 J189 J190 J191 J192 J193 J194 J195 J196 J197 J198 J199 J200 J201 J202 J203 J204 J205 J206 J207 J208 J209 J210 J211 J212 J213 J214 J215 J216 J217 J218 J219 J220 J221 J222 J223 J224 J225 J226 J227 J228 J229 J230 J231 J232 J233 J234 J235 J236 J237 J238 J239 J240 J241 J242 J243 J244 J245 J246 J247 J248 J249 J250 J251 J252 J253 J254 J255 J256 J257 J258 J259 J260 J261 J262 J263 J264 J265 J266 J267 J268 J269 J270 J271 J272 J273 J274 J275 J276 J277 J278 J279 J280 J281 J282 J283 J284 J285 J286 J287 J288 J289 J290 J291 J292 J293 J294 J295 J296 J297 J298 J299 J300 J301 J302 J303 J304 J305 J306 J307 J308 J309 J310 J311 J312 J313 J314 J315 J316 J317 J318 J319 J320 J321 J322 J323 J324 J325 J326 J327 J328 J329 J330 J331 J332 J333 J334 J335 J336 J337 J338 J339 J340 J341 J342 J343 J344 J345 J346 J347 J348 J349 J350 J351 J352 J353 J354 J355 J356 J357 J358 J359 J360 J361 J362 J363 J364 J365 J366 J367 J368 J369 J370 J371 J372 J373 J374 J375 J376 J377 J378 J379 J380 J381 J382 J383 J384 J385 J386 J387 J388 J389 J390 J391 J392 J393 J394 J395 J396 J397 J398 J399 J400 J401 J402 J403 J404 J405 J406 J407 J408 J409 J410 J411 J412 J413 J414 J415 J416 J417 J418 J419 J420 J421 J422 J423 J424 J425 J426 J427 J428 J429 J430 J431 J432 J433 J434 J435 J436 J437 J438 J439 J440 J441 J442 J443 J444 J445 J446 J447 J448 J449 J450 J451 J452 J453 J454 J455 J456 J457 J458 J459 J460 J461 J462 J463 J464 J465 J466 J467 J468 J469 J470 J471 J472 J473 J474 J475 J476 J477 J478 J479 J480 J481 J482 J483 J484 J485 J486 J487 J488 J489 J490 J491 J492 J493 J494 J495 J496 J497 J498 J499 J500 J501 J502 J503 J504 J505 J506 J507 J508 J509 J510 J511 J512 J513 J514 J515 J516 J517 J518 J519 J520 J521 J522 J523 J524 J525 J526 J527 J528 J529 J530 J531 J532 J533 J534 J535 J536 J537 J538 J539 J540 J541 J542 J543 J544 J545 J546 J547 J548 J549 J550 J551 J552 J553 J554 J555 J556 J557 J558 J559 J560 J561 J562 J563 J564 J565 J566 J567 J568 J569 J570 J571 J572 J573 J574 J575 J576 J577 J578 J579 J580 J581 J582 J583 J584 J585 J586 J587 J588 J589 J590 J591 J592 J593 J594 J595 J596 J597 J598 J599 J600 J601 J602 J603 J604 J605 J606 J607 J608 J609 J610 J611 J612 J613 J614 J615 J616 J617 J618 J619 J620 J621 J622 J623 J624 J625 J626 J627 J628 J629 J630 J631 J632 J633 J634 J635 J636 J637 J638 J639 J640 J641 J642 J643 J644 J645 J646 J647 J648 J649 J650 J651 J652 J653 J654 J655 J656 J657 J658 J659 J660 J661 J662 J663 J664 J665 J666 J667 J668 J669 J670 J671 J672 J673 J674 J675 J676 J677 J678 J679 J680 J681 J682 J683 J684 J685 J686 J687 J688 J689 J690 J691 J692 J693 J694 J695 J696 J697 J698 J699 J700 J701 J702 J703 J704 J705 J706 J707 J708 J709 J710 J711 J712 J713 J714 J715 J716 J717 J718 J719 J720 J721 J722 J723 J724 J725 J726 J727 J728 J729 J730 J731 J732 J733 J734 J735 J736 J737 J738 J739 J740 J741 J742 J743 J744 J745 J746 J747 J748 J749 J750 J751 J752 J753 J754 J755 J756 J757 J758 J759 J760 J761 J762 J763 J764 J765 J766 J767 J768 J769 J770 J771 J772 J773 J774 J775 J776 J777 J778 J779 J780 J781 J782 J783 J784 J785 J786 J787 J788 J789 J790 J791 J792 J793 J794 J795 J796 J797 J798 J799 J800 J801 J802 J803 J804 J805 J806 J807 J808 J809 J810 J811 J812 J813 J814 J815 J816 J817 J818 J819 J820 J821 J822 J823 J824 J825 J826 J827 J828 J829 J830 J831 J832 J833 J834 J835 J836 J837 J838 J839 J840 J841 J842 J843 J844 J845 J846 J847 J848 J849 J850 J851 J852 J853 J854 J855 J856 J857 J858 J859 J860 J861 J862 J863 J864 J865 J866 J867 J868 J869 J870 J871 J872 J873 J874 J875 J876 J877 J878 J879 J880 J881 J882 J883 J884 J885 J886 J887 J888 J889 J890 J891 J892 J893 J894 J895 J896 J897 J898 J899 J900 J901 J902 J903 J904 J905 J906 J907 J908 J909 J910 J911 J912 J913 J914 J915 J916 J917 J918 J919 J920 J921 J922 J923 J924 J925 J926 J	

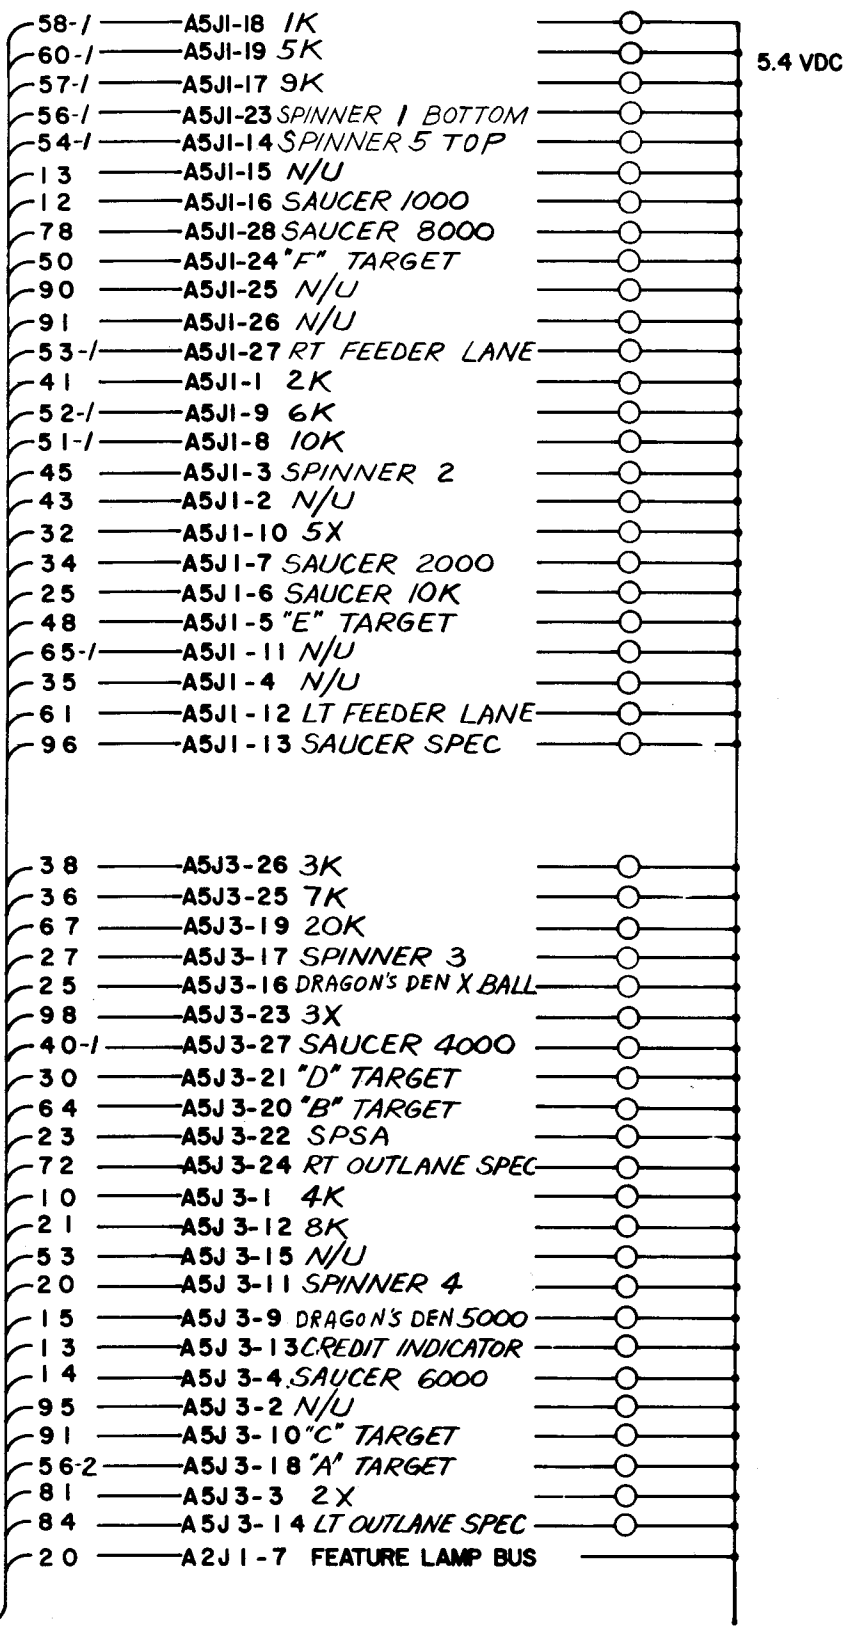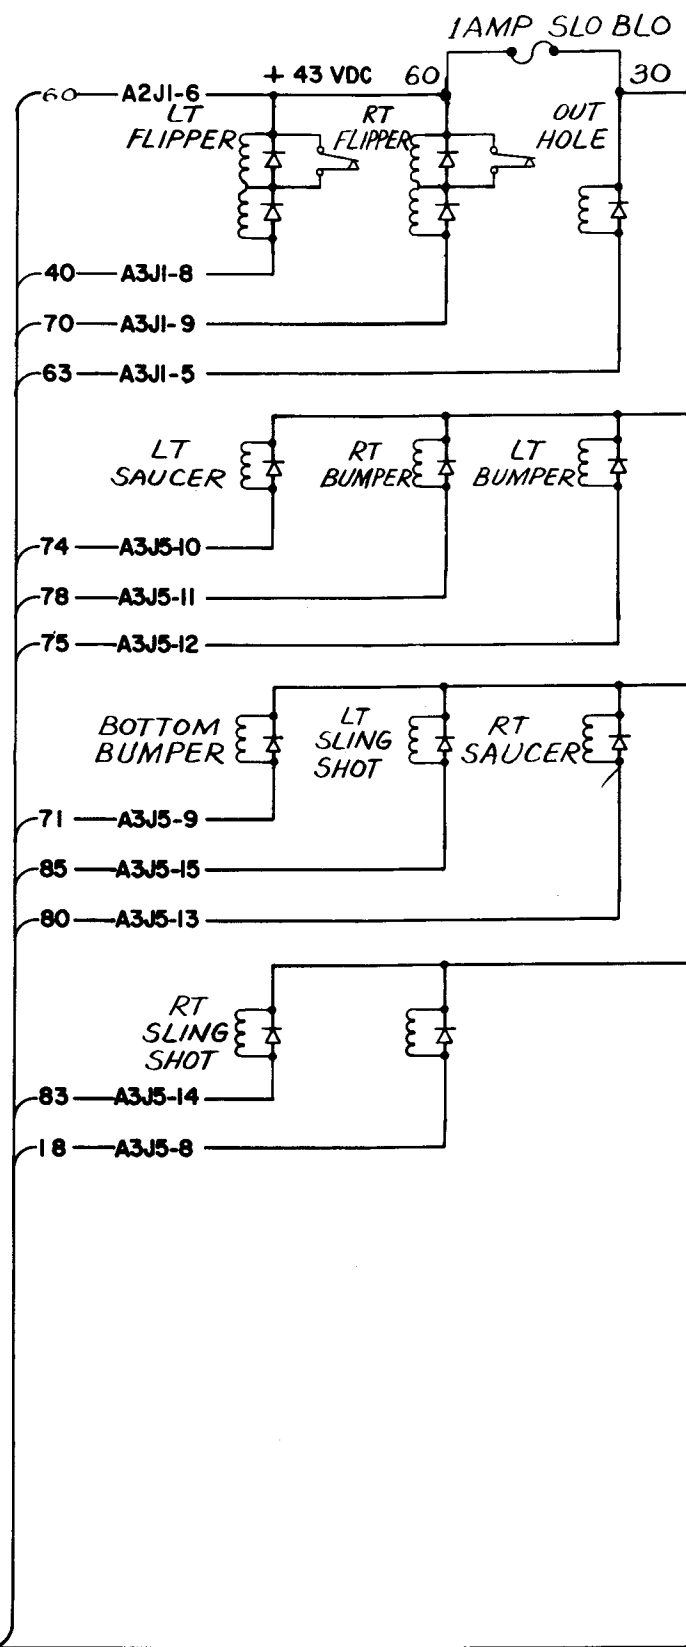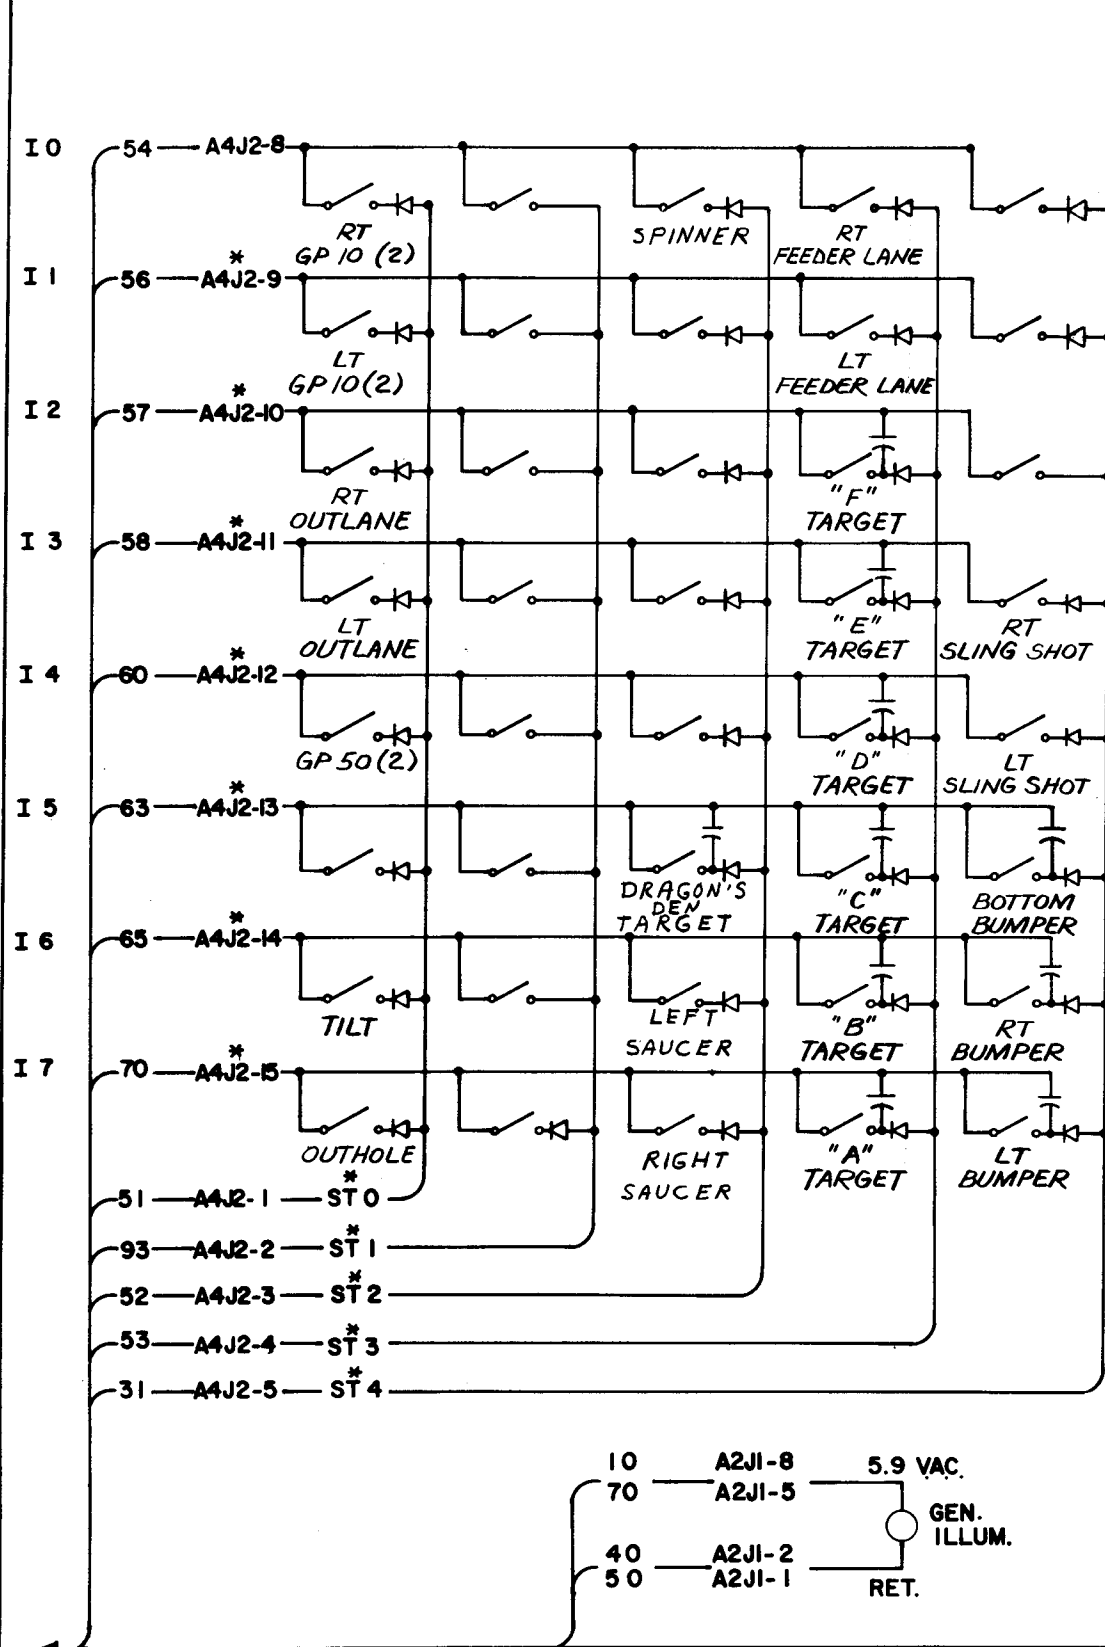

PLAYFIELD A6

NOTES

1. INDICATES NOT USED
2. N/U = NOT USED ON PLAYFIELD
3. * INDICATES AID TEST POINT
4. ALL DIODES ARE 1N4004 (E-587-6)
ALL CAPACITORS ARE .05 MFD. (E-586-80)

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP., CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.											
REMOVE ALL BURRS				DR. BY DATE				Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS			
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED				CK. BY DATE				23-78			
FRACTIONS - 1/64				AP'D BY DATE				23-78			
DECIMALS - .005				PRINT:				NAME			
ANGLES - °				HARDENING:				MATERIAL			
DO NOT SCALE DRAWING				SWITCH MATRIX - PANEL				ASSEMB. NO. USED ON: V			
LET. CHANGE DATE BY CK.				LOST WORLD				PART NO. W-1192-3			