


Service Bulletin N° 74

SEGA™ PINBALL, INC.

1990 Janice Avenue
Melrose Park, IL 60160
• © Tel 708-345-7700 •

Technical Support

- 1-800-KICKERS (800-542-5377) •
- Fax 708-345-7889 •

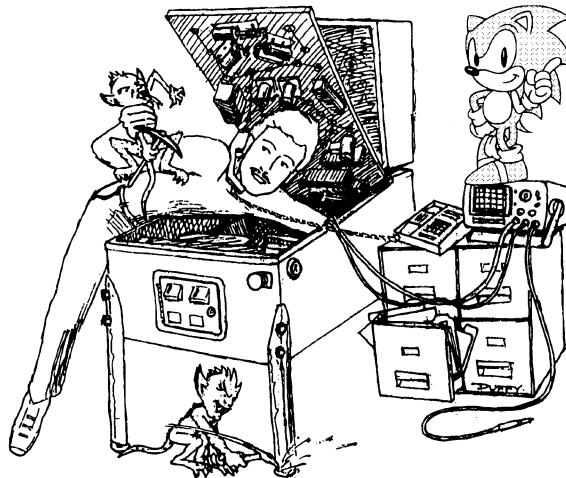

Joe Blackwell
Technical Support Manager

Eric Winston
Technical Support Engineer

Ted Kilpin
Technical Support Engineer

Jay Alfer
Tech. Doc. Administrator

TO: Parts & Service Managers

DATE: April 28, 1995

RE: Modification to **BAYWATCH™** Early Production Games

With the new introduction of **PORTALS™ SERVICE MENU** in Baywatch™ games, some early production games may experience the following symptom.

SYMPTOM — When entering the **Portals™ Service Menu**, the *Icons* may start to scroll immediately.

EXPLANATION —The **Green "SERVICE CREDITS/SELECT" Button** is more than likely, locked in the down position (it is still a "Toggle Up/Down" Button). By depressing this switch once, it will now pop up. The display should now be normal with one *Icon* only flashing.

MODIFICATION—To make sure this does not occur again, make the **Green "SERVICE CREDITS/SELECT" Button** a "Momentary" Button like the **Black "BEGIN TEST/ENTER" Button**.

Step 1

Open the Coin Door and locate the Service Switch Set Bracket & Coin Door Mounting Bracket. (See Fig. 1)

Step 2

Remove the 2 Phillips Screws securing the Switch Set Bracket to the Coin Door Bracket. (See Fig. 2)

Step 3

The Switch Bracket will now be separated from the Coin Door Bracket still attached by the wires. (See Fig. 3)

Step 4

Locate the Green Button Switch. Remove the silver "C" shape wire form from the switch. The switch is now a "non-interlocking" Momentary Switch. (See Fig. 3 & 4)

Step 5

Reverse procedure to reassemble.

Fig. 1

Service Switch Set
Bracket connected to
Coin Door Mounting
Bracket

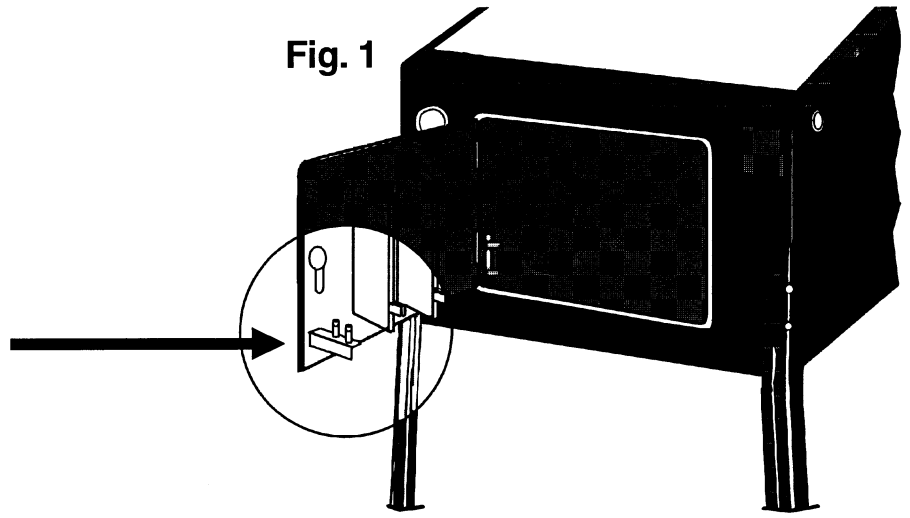


Fig. 2



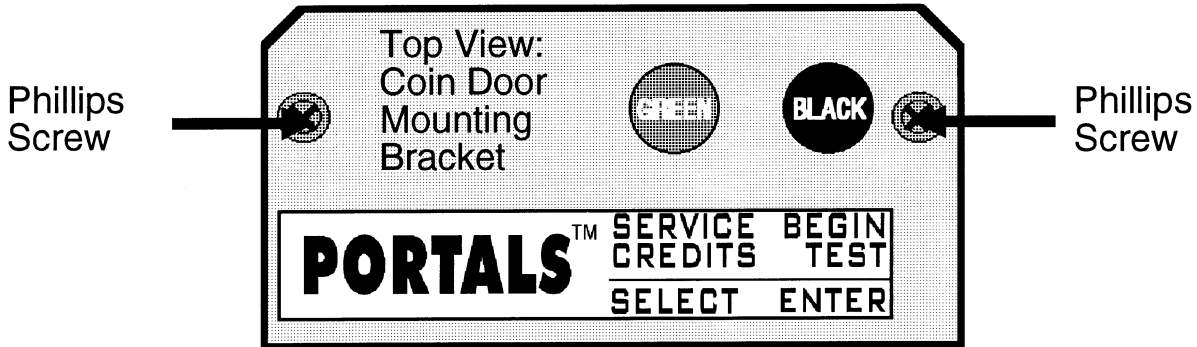


Fig. 3

 Top View:
Switch Set Mounting Bracket




Front View:
Switch Set Mounting Bracket

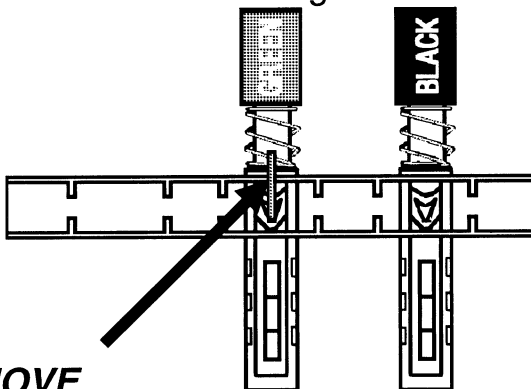

REMOVE
Silver "C" Shape
Wire Form

Fig. 4

Side View:
Switch Set Mounting
Bracket (Black
Button Behind)

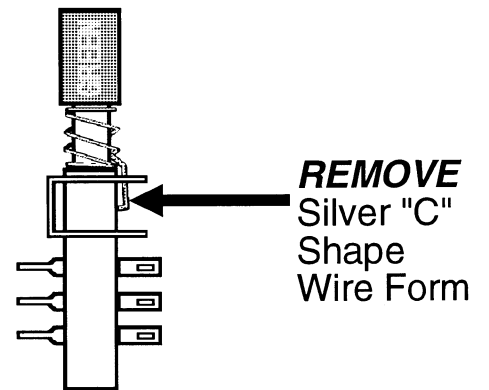

REMOVE
Silver "C" Shape
Wire Form