




Nº 129 SERVICE BULLETIN

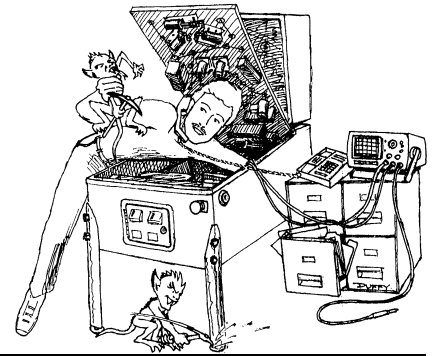

Joe Blackwell
Director, Parts Sales &
Technical Support

Susan White
Parts Sales
Manager

Patty Schraps
Parts Stockroom
Manager

Chas Siddiqi
Technical Support
Engineer

Jay Alfer
Technical Support Doc.
Administrator

TO: Parts & Service Managers

DATE: October 22, 2001



SUBJ: MONOPOLY® Playfield Mylar, SPI Part Number: 820-5094-00

Explanation:

MONOPOLY® was intentionally designed without a *Playfield Mylar*. In recent years, many pinball designers have gone away from the use of mylar for various reasons (e.g. aesthetics, game play, hardcoat protection is adequate, etc.). We know that many *operators may prefer* to have the added protection of mylar... so we are making it available through our distributors. Ask for **SPI Part Number: 820-5094-00**.

Playfield Mylar Installation Procedure:

Materials Needed:


- Playfield Mylar (SPI PN: 820-5094-00)
- Isopropyl (Rubbing) Alcohol (or Alcohol Wipes)
- Soft Cloth
- 16 oz. Size Spray Bottle containing soap and water solution (1 Tablespoon of Clear Dishwashing Liquid + 16 oz. water)
- Small (approx. 3") Squeegee
- Paper Towels
- Window cleaner

Playfield Preparation:

Prior to installing your mylar, ensure the playfield is clean of all wax, dirt and debris. Using window cleaner, wipe the playfield down using good old fashion elbow grease. If you have some hard to clean areas, try using some isopropyl alcohol or alcohol wipes.

Installing New Mylar:

1. Remove backing from Mylar and spray (mist lightly) on the **ADHESIVE (STICKY) SIDE** with soap and water solution.
2. Lightly spray the playfield with soap and water solution (a light mist is adequate) and position Mylar (This one-piece Mylar should be positioned just above the flippers and even between the slingshots, adjust top as required). Position paper towels around Slingshots & Flippers to absorb excess soap and water solution prior to the next step.
3. Squeegee out water from inbetween the Mylar & Playfield, working from top to bottom. Wipe-dry all excess moisture as you go. Smooth out all trapped air (bubbles) to closest edge.

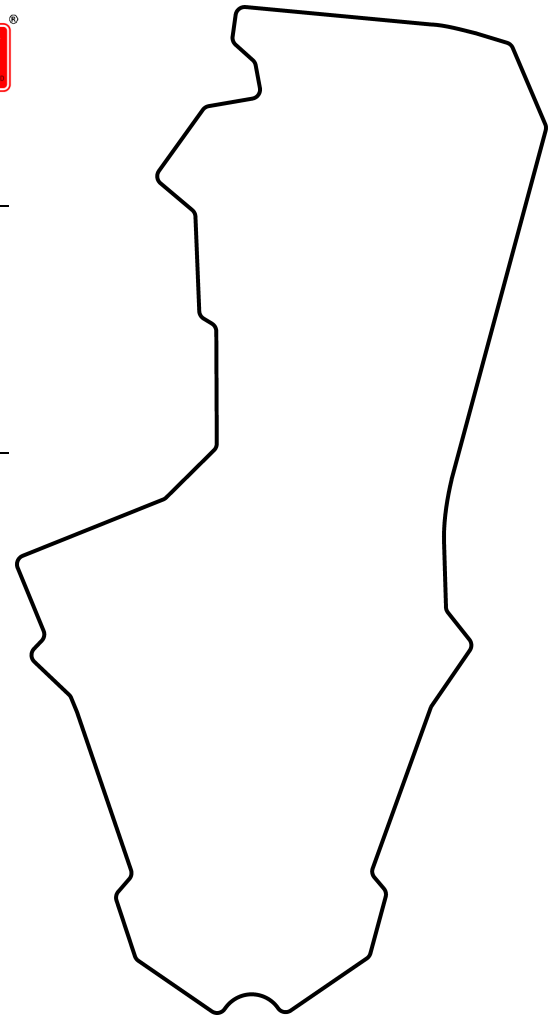

Please phone or eMail with any questions or comments at the below numbers or address.

• 2020 Janice Ave • Melrose Park, IL 60160 • Tel 708-345-7700 (Option 1) • Toll-Free (USA/Canada) 1-800-542-5377 • Fax 708-345-7889 •